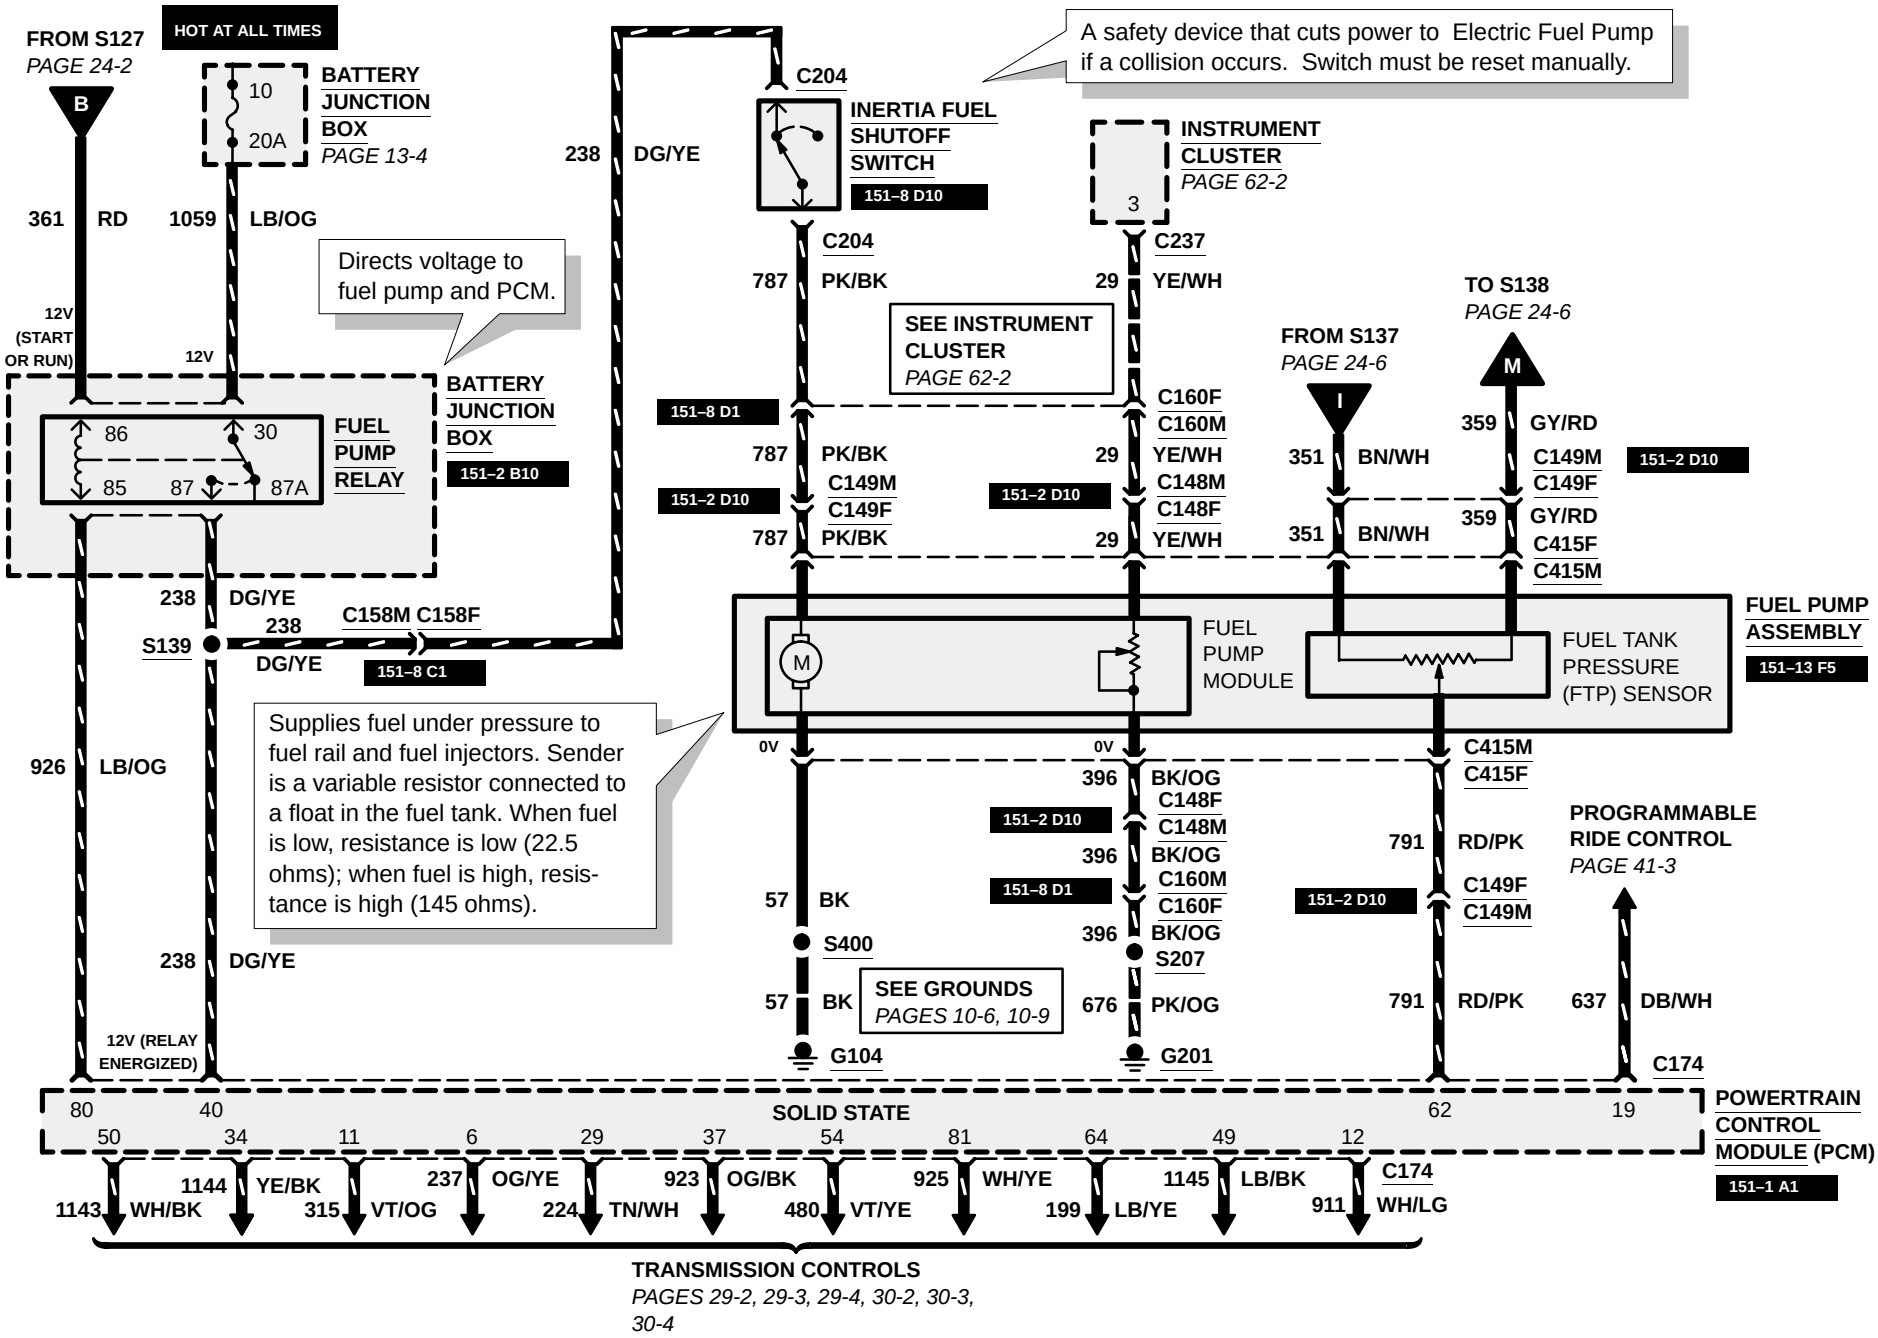
FROM S127
PAGE 24-2
HOT AT ALL TIMES
B
10
20A
BATTERY JUNCTION BOX
PAGE 13-4
361 RD
1059 LB/OG
12V (START OR RUN)
12V
Directs voltage to fuel pump and PCM.
BATTERY JUNCTION BOX
151–2 B10
86
30
85
87
87A
FUEL PUMP RELAY
238 DG/YE
S139
238 DG/YE
238 DG/YE
C158M C158F
151–8 C1
926 LB/OG
238 DG/YE
12V (RELAY ENERGIZED)
238 DG/YE
C204
INERTIA FUEL SHUTOFF SWITCH
151–8 D10
A safety device that cuts power to Electric Fuel Pump if a collision occurs. Switch must be reset manually.
INSTRUMENT CLUSTER
PAGE 62-2
3
C204
787 PK/BK
C237
29 YE/WH
SEE INSTRUMENT CLUSTER
PAGE 62-2
TO S138
PAGE 24-6
FROM S137
PAGE 24-6
M
I
151–8 D1
C160F
C160M
787 PK/BK
29 YE/WH
351 BN/WH
359 GY/RD
C149M
C149F
151–2 D10
151–2 D10
C149M
C149F
151–2 D10
151–2 D10
C148M
C148F
787 PK/BK
29 YE/WH
351 BN/WH
359 GY/RD
C415F
C415M
FUEL PUMP ASSEMBLY
151–13 F5
M
FUEL PUMP MODULE
FUEL TANK PRESSURE (FTP) SENSOR
Supplies fuel under pressure to fuel rail and fuel injectors. Sender is a variable resistor connected to a float in the fuel tank. When fuel is low, resistance is low (22.5 ohms); when fuel is high, resistance is high (145 ohms).
0V
0V
C415M
C415F
396 BK/OG
C148F
C148M
151–2 D10
396 BK/OG
791 RD/PK
PROGRAMMABLE RIDE CONTROL
PAGE 41-3
151–8 D1
C160M
C160F
151–2 D10
C149F
C149M
57 BK
396 BK/OG
S400
S207
SEE GROUNDS
PAGES 10-6, 10-9
57 BK
676 PK/OG
791 RD/PK
637 DB/WH
G104
G201
C174
80
40
SOLID STATE
62
19
50
34
11
6
29
37
54
81
64
49
12
1143 WH/BK
1144 YE/BK
315 VT/OG
237 OG/YE
224 TN/WH
923 OG/BK
480 VT/YE
925 WH/YE
199 LB/YE
1145 LB/BK
911 WH/LG
C174
POWERTRAIN CONTROL MODULE (PCM)
151–1 A1
TRANSMISSION CONTROLS
PAGES 29-2, 29-3, 29-4, 30-2, 30-3, 30-4