C220b (WH)

14401

Instrument cluster

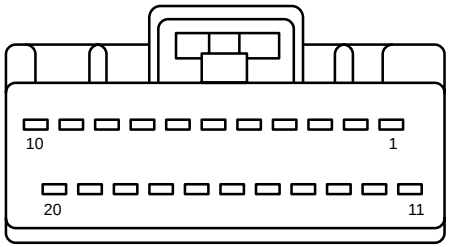

F22009

Pin	Circuit	Circuit function
1	1083 (LB/BK)	Air bag, tone driver
2	1416 (YE/WH)	autolamps, Sensor
3	1426 (PK)	Rear window defrost, on input
4	–	not used
5	1396 (VT/WH)	Multifunction switch, return
6	–	not used
7	295 (LB/PK)	Voltage in Run or Accessory (overload protected)
8	1112 (WH/LB)	Voltage, ignition switch in Start or Run (overload protected electronic module)
9	–	not used
10	1422 (DB/OG)	auxiliary blend door, position sense
11	1040 (RD/BK)	Voltage in Run (overload protected)
12	1205 (BK)	Ground
13	1393 (LB/RD)	Multifunction Switch, Turn Portion, Left
14	1392 (LG/OG)	Multifunction Switch, Turn Portion, Right
15	1398 (PK/WH)	Heater blower switch, input
16	1401 (BK/LG)	Parking Lamps, On, signal
17	1412 (WH/PK)	Traction control override, input
18	1424 (TN/BK)	Air Conditioning, On/Off signal
19	–	not used
20	–	not used

C220c (BK)

14401

Instrument cluster

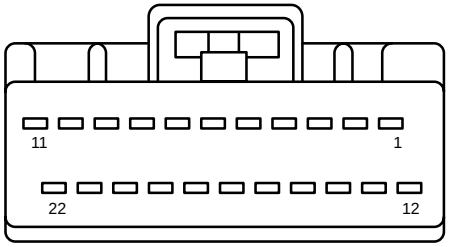

F22009

Pin	Circuit	Circuit function
1	1404 (YE)	Illumination dimmer switch, Front dome lamp
2	1539 (WH/BK)	Tire reset switch, input
3	1399 (DB/WH)	Autolamp On/Off signal
4	1397 (GY/RD)	Heater blower switch, input
5	–	not used
6	1420 (YE/LB)	courtesy lamps, control
7	–	not used
8	1425 (GY/WH)	indicator, A/C System On
9	1418 (LB/WH)	Illumination, output
10	343 (DB/LG)	Anti–theft, indicator, input
11	–	not used
12	–	not used
13	1417 (LG/RD)	Light emitting diode (LED), Illumination
14	1427 (TN/LB)	indicator, Rear window defrost
15	–	not used
16	914 (TN/OG)	SCP Bus +
17	915 (PK/LB)	SCP Bus –
18	–	not used
19	608 (BK/YE)	Air bag indicator, control
20	1395 (RD/PK)	signal, High Beam/Flash–to–Pass
21	1415 (LB/YE)	Traction control switch, input
22	1394 (WH/RD)	Low beam, input, signal