
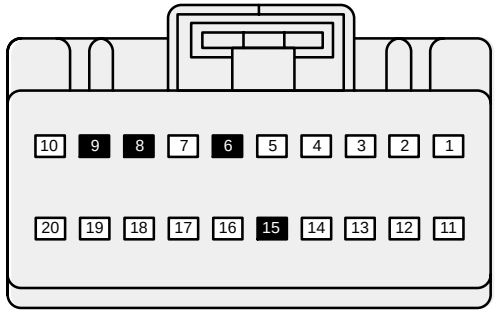


C238 (NATURAL)
INSTRUMENT CLUSTER

PIN	CIRCUIT	CIRCUIT FUNCTION
1	57 (BK)	Ground
2	16 (RD/LG)	Power (Hot in Start or Run)
3	904 (LG/RD)	Charge Indicator Input
4	210 (LB)	4X4 High Indicator Input
5	419 (DG/LG)	Rear Air Suspension Warning Indicator
6	–	NOT USED
7	2 (WH/LB)	Right Turn Indicator Input
8	–	NOT USED
9	–	NOT USED
10	729 (RD/WH)	Power (Hot at All Times)
11	1003 (GY/YE)	Low Fuel Indicator Input
12	932 (GY/WH)	High Beam Indicator Input
13	608 (BK/YE)	Air Bag Indicator Input
14	203 (OG/LB)	Cruise Control Indicator
15	–	NOT USED
16	603 (DG)	Anti-Lock Brake Warning Indicator Input
17	162 (LG/RD)	Brake Warning Indicator Input
18	531 (DG/YE)	Brake Fluid Level Indicator Input
19	512 (TN/LG)	Brake Fluid Level Indicator Return
20	31 (WH/RD)	Oil Pressure Input

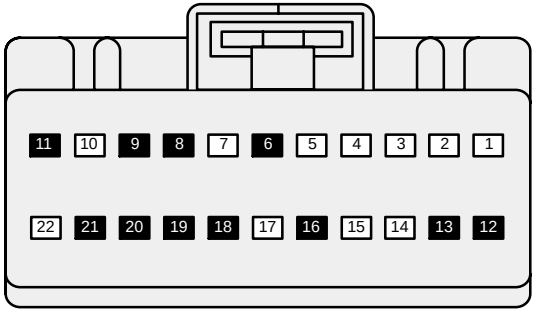

C237 (BLACK)
INSTRUMENT CLUSTER

PIN	CIRCUIT	CIRCUIT FUNCTION
1	914 (TN/OG)	J1850 Bus (+)
2	915 (PK/LB)	J1850 Bus (–)
3	29 (YE/WH)	Fuel Level Input
4	3 (LG/WH)	Left Turn Indicator Input
5	433 (DG/OG)	Door Ajar Indicator Input
6	–	NOT USED
7	82 (PK/YE)	Low Washer Fluid Input
8	–	NOT USED
9	–	NOT USED
10	450 (DG/LG)	Fasten Safety Belt Indicator Input
11	–	NOT USED
12	–	NOT USED
13	–	NOT USED
14	1216 (GY/OG)	Passive Anti-theft System Transceiver Module (Rx)
15	1215 (WH/LG)	Passive Anti-theft System Transceiver Module (Tx)
16	–	NOT USED
17	676 (PK/OG)	Ground
18	–	NOT USED
19	–	NOT USED
20	–	NOT USED
21	–	NOT USED
22	19 (LB/RD)	Illumination Feed