C222

14402

B218
Steering column position sensor

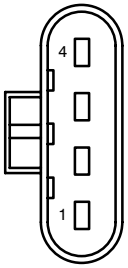

F12077

C225

14401

Y281
Center image amplifier

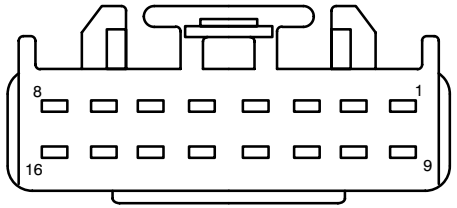

F16029

Pin	Circuit	Circuit Function
1	1-MD12 (WH)	Audio signal positive
2	2-MD12 (GY)	Audio signal negative
3	48-MD12	Drain wire
4	–	not used
5	8-MD31 (WH/GN)	Center image speaker, right (+)
6	10-MD31 (GY/OG)	Center image speaker, right (–)
7	8-MD30 (WH/BU)	Center image speaker, left (+)
8	10-MD30 (GY/VT)	Center image speaker, left (–)
9	–	not used
10	–	not used
11	–	not used
12	–	not used
13	7-MD12 (YE)	Amplifier enable
14	–	not used
15	31-MD12 (BK/YE)	Ground
16	29-MD12 (OG/YE)	Battery