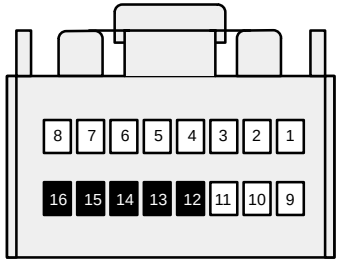


**C932**

**VIDEO DISPLAY**

| PIN | CIRCUIT | CIRCUIT FUNCTION |
|---|---|---|
| 1 | 1563 (LG) | Delayed Accessory |
| 2 | 694 (BK/LG) | Ground |
| 3 | 1807 (WH) | VCP Video (+) |
| 4 | 1808 (BK) | VCP Video (Drain) |
| 5 | 99 (LG/BK) | Left Audio (+) |
| 6 | 76 (LG/WH) | Left Audio (–) Drain |
| 7 | 891 (RD/BK) | Right Audio (+) |
| 8 | 1402 (RD/WH) | Right Audio (–) Drain |
| 9 | 1540 (DG) | VCP Data (+) |
| 10 | 1541 (DB) | VCP IR Data (–) (Drain) |
| 11 | 48 | VCP Video Drain |
| 12 | – | NOT USED |
| 13 | – | NOT USED |
| 14 | – | NOT USED |
| 15 | – | NOT USED |
| 16 | – | NOT USED |

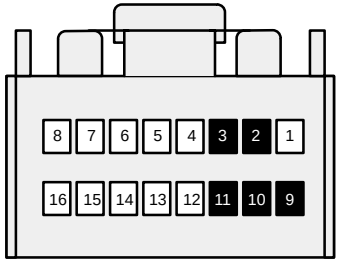


**C335**

**VIDEO PLAYER**

| PIN | CIRCUIT | CIRCUIT FUNCTION |
|---|---|---|
| 1 | 1564 (RD) | Delayed Accessory |
| 2 | – | NOT USED |
| 3 | – | NOT USED |
| 4 | 1802 (DG) | Audio Enable |
| 5 | 1540 (DG) | VCP IR Data (+) |
| 6 | 99 (LG/BK) | VCP Left Audio (+) |
| 7 | 891 (RD/BK) | VCP Right Audio (+) |
| 8 | 47 (LB/WH) | VCP Video (+) |
| 9 | – | NOT USED |
| 10 | – | NOT USED |
| 11 | – | NOT USED |
| 12 | 1541 (DB) | VCP IR Data (–) (Drain) |
| 13 | 694 (BK/LG) | Ground (VCP) |
| 14 | 1402 (RD/WH) | VCP Right Audio (–) (Drain) |
| 15 | 76 (LG/WH) | VCP Left Audio (–) (Drain) |
| 16 | 48 | VCP Video (–) |