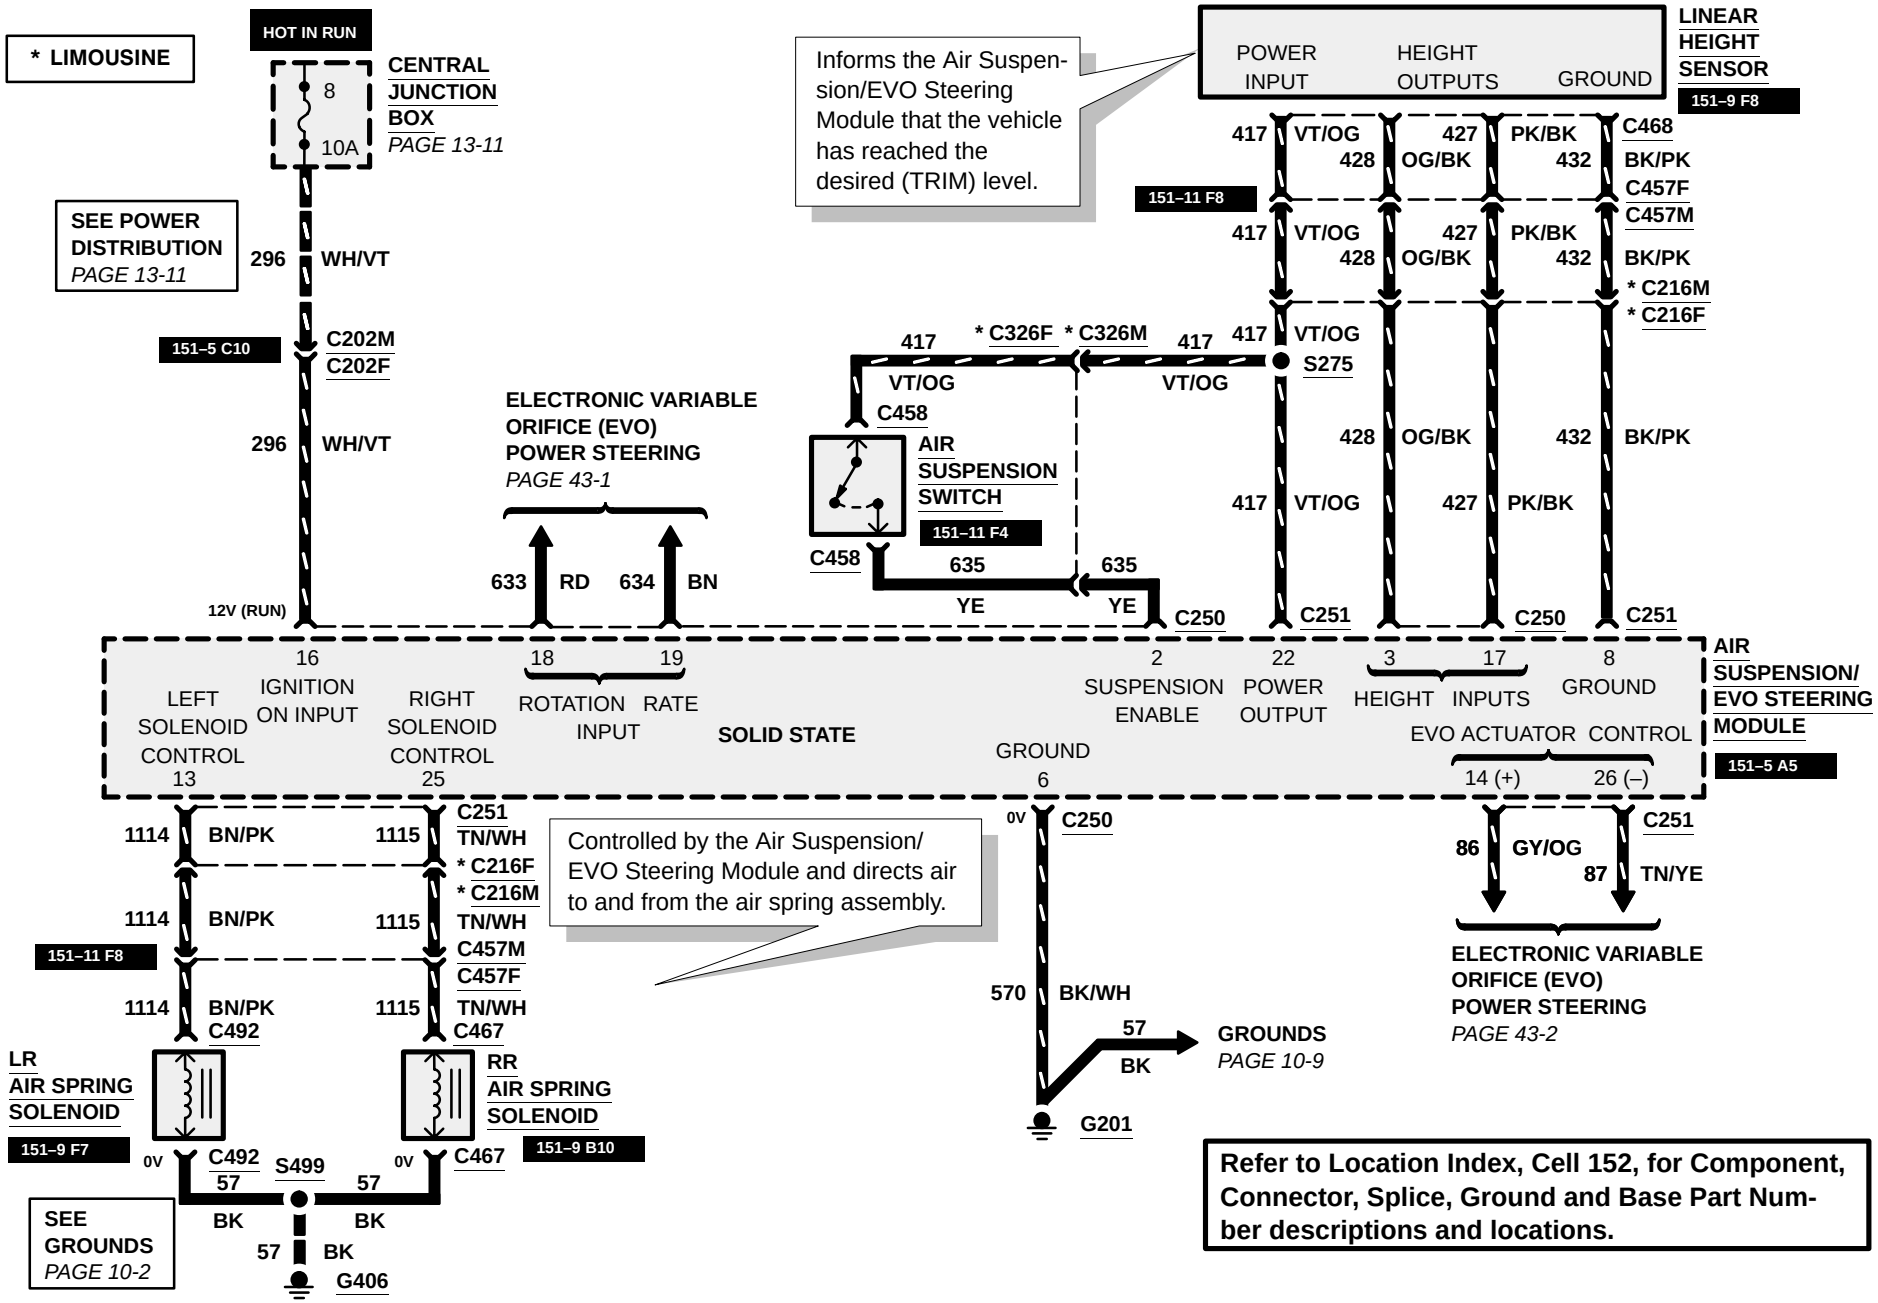
* LIMOUSINE
HOT IN RUN
8
10A
CENTRAL JUNCTION BOX
PAGE 13-11
SEE POWER DISTRIBUTION
PAGE 13-11
296 WH/VT
151–5 C10
C202M
C202F
296 WH/VT
12V (RUN)
ELECTRONIC VARIABLE ORIFICE (EVO) POWER STEERING
PAGE 43-1
633 RD
634 BN
Informs the Air Suspension/EVO Steering Module that the vehicle has reached the desired (TRIM) level.
POWER INPUT
HEIGHT OUTPUTS
GROUND
LINEAR HEIGHT SENSOR
151–9 F8
151–11 F8
417 VT/OG
428 OG/BK
427 PK/BK
432 BK/PK
C468
C457F
C457M
* C216M
* C216F
* C326F
* C326M
C458
AIR SUSPENSION SWITCH
151–11 F4
S275
635 YE
C250
C251
AIR SUSPENSION/ EVO STEERING MODULE
151–5 A5
16 IGNITION ON INPUT
18 ROTATION INPUT
19 RATE INPUT
SOLID STATE
2 SUSPENSION ENABLE
22 POWER OUTPUT
3 HEIGHT INPUTS
17 EVO ACTUATOR CONTROL
8 GROUND
13 LEFT SOLENOID CONTROL
25 RIGHT SOLENOID CONTROL
6 GROUND
14 (+)
26 (–)
Controlled by the Air Suspension/ EVO Steering Module and directs air to and from the air spring assembly.
1114 BN/PK
1115 TN/WH
C492
C467
LR AIR SPRING SOLENOID
151–9 F7
RR AIR SPRING SOLENOID
151–9 B10
0V
S499
57 BK
G406
570 BK/WH
GROUNDS
PAGE 10-9
G201
86 GY/OG
87 TN/YE
ELECTRONIC VARIABLE ORIFICE (EVO) POWER STEERING
PAGE 43-2
SEE GROUNDS
PAGE 10-2
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.