C896

14K024

P140
Air bag sliding contact (14A664)

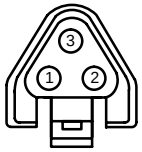

F03015

Pin	Circuit	Circuit function
1	31-PG13 (BK)	Ground
2	31S-GJ7 (BK/BU)	Ground, Switched
3	8-PG13 (WH)	Sensor signal

C897

14K733

N21
Engine compartment switch

F02005

Pin	Circuit	Circuit function
1	31S-GJ7 (BK/YE)	Ground, Switched
2	31-GL7 (BK)	Ground

C900

14014

A195
Fuel pump driver module (9H307)

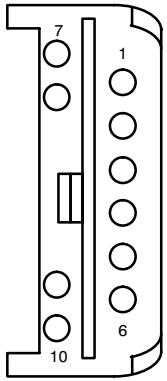

F10009

Pin	Circuit	Circuit function
1	91S-RH5 (BK/BU)	Ground, Switched
2	31-RE31 (BK)	Ground
3	9-RE31 (BN/YE)	Sensor signal return (reference/ground)
4	–	not used
5	–	not used
6	–	not used
7	15S-RE16 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), Switched
8	–	not used
9	15S-RG2 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), Switched
10	8-RE31 (WH/BK)	Sensor signal