C20 (YE)

14K024

A29
Air bag diagnostic monitor

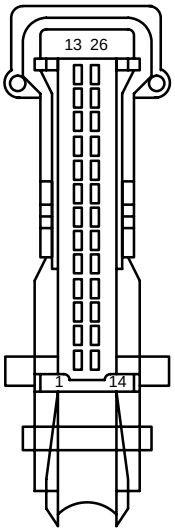

F26002

Pin	Circuit	Circuit Function
1	15S-JA37 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	15S-JA11 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched
3	15S-JA8 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
4	–	not used
5	–	not used
6	8-JA37 (WH/GN)	Sensor signal
7	9-JA37 (BN/GN)	Sensor signal return (reference/ground)
8	8-JA38 (WH/BK)	Sensor signal
9	9-JA38 (BN/YE)	Sensor signal return (reference/ground)
10	–	not used
11	91S-JA14 (BK/GN)	Ground, switched
12	–	not used
13	15S-JA38 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
14	91S-JA37 (BK/GN)	Ground, switched
15	91S-JA11 (BK/WH)	Ground, switched
16	91S-JA8 (BK/OG)	Ground, switched
17	–	not used
18	–	not used
19	15-JA10 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)
20	91-JA10 (BK/RD)	Ground
21	–	not used
22	–	not used
23	–	not used
24	8-JA7 (WH/RD)	Sensor signal
25	91-JA10C (BK/RD)	Ground
26	91S-JA38 (BK/RD)	Ground, switched

C21 (YE)

14K024

P140
Air bag sliding contact

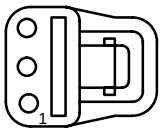

F03035

Pin	Circuit	Circuit Function
1	15S-JA8 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	–	not used
3	91S-JA8 (BK/OG)	Ground, switched

C22 (BN)

14K024

A43
Passenger air bag module

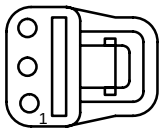

F03035

Pin	Circuit	Circuit Function
1	15S-JA11 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	–	not used
3	91S-JA11 (BK/WH)	Ground, switched