## C270b

### 14401

P91
Central Junction
Box (CJB) (14A068)

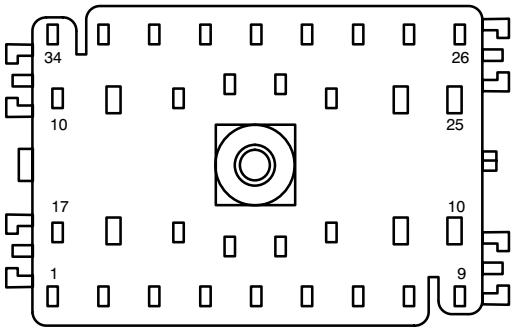


F34007

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 533 (TN/RD) | Voltage supplied in Start and Run (overload protected) |
| | 294 (WH/LB) | Voltage supplied in Start and Run (overload protected) |
| 2 | 188 (WH/PK) | Hot with Headlamps on |
| 3 | – | not used |
| 4 | – | not used |
| 5 | 829 (WH/VT) | Voltage supplied at all times (overload protected) |
| 6 | 160 (DB/WH) | Headlamp, left (13008), (Low beam lamp feed) |
| 7 | 13 (RD/BK) | Power, Hot with Low Beams on |
| 8 | 296 (WH/VT) | Voltage in Run (overload protected) |
| 9 | – | not used |
| 10 | 991 (TN/LB) | Master window adjust switch (14529), return, Down |
| 11 | 1052 (TN/BK) | Fused battery feed, from, Battery Junction Box (BJB) |
| 12 | 687 (GY/YE) | Voltage in Run (overload protected) |
| 13 | – | not used |
| 14 | 679 (GY/BK) | Vehicle Speed Sensor (VSS) + |
| 15 | 161 (DG/OG) | Headlamp, right (13008), (Low beam lamp feed) |
| 16 | 964 (DB/LG) | fused feed, Hot in start or run |
| 17 | 797 (LG/VT) | F2.31, feed |

| Pin | Circuit | Circuit function |
|---|---|---|
| 18 | 32 (RD/LB) | Voltage supplied in Start (overload protected) |
| 19 | – | not used |
| 20 | 950 (WH/BK) | Voltage in Run or Accessory (overload protected) |
| 21 | 679 (GY/BK) | Vehicle Speed Sensor (VSS) + |
| 22 | 679 (GY/BK) | Vehicle Speed Sensor (VSS) + |
| 23 | 186 (BN/LB) | Rear window defrost relay, switched power |
| 24 | 57 (BK) | Ground |
| 25 | 1001 (WH/YE) | Voltage supplied at all times (overload protected) |
| 26 | – | not used |
| 27 | – | not used |
| 28 | 995 (GY) | Window motor, feed, Down |
| 29 | 325 (DB/OG) | Starter relay (11450), control |
| 30 | – | not used |
| 31 | 640 (RD/YE) | Voltage supplied in Start and Run (overload protected) |
| 32 | 705 (LG/OG) | Battery saver relay, switched power |
| 33 | 14 (BN) | F2.18, feed |
| 34 | 16 (RD/LG) | Voltage supplied in Start and Run (overload protected) |