C2099 (BK)

14401

Passenger Air bag Deactivation (PAD) switch

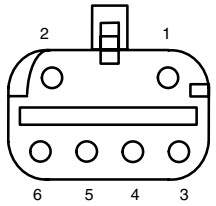

F06263

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	298 (VT/OG)	Voltage in Run (overload protected)
4	629 (BN)	Passenger Air bag Deactivation (PAD) switch, indicator, control
5	1112 (WH/LB)	Passenger Air bag Deactivation (PAD) switch, position, signal
6	649 (BK/OG)	Air bag, dedicated ground

C2107

14401

Mechanical Shift On the Fly (MSOF) relay

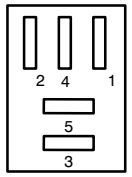

F05110

Pin	Circuit	Circuit function
1	294 (WH/LB)	Voltage in Run (overload protected)
2	976 (OG)	Mechanical Shift On the Fly (MSOF) relay, control
3	704 (DG/LG)	Voltage supplied at all times (overload protected)
4	–	not used
5	779 (BN)	Mechanical Shift On the Fly (MSOF) relay, switched output

C2129

14401

Headlamp relay

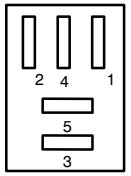

F05110

Pin	Circuit	Circuit function
1	196 (DB/OG)	Voltage supplied at all times (overload protected)
2	7 (LG/YE)	Headlamp relay, control
3	196 (DB/OG)	Voltage supplied at all times (overload protected)
4	–	not used
5	15 (RD/YE)	Headlamp relay, switched power, output

C2188

14401

Radio (18806)

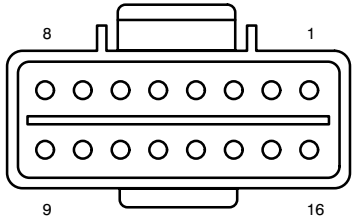

F16181

Pin	Circuit	Circuit function
1	694 (BK/LG)	audio ground
2	1002 (BK/PK)	Voltage in Run or Accessory (overload protected)
3	–	not used
4	–	not used
5	805 (WH/LG)	Speaker, right front (18808) +
6	811 (DG/OG)	Speaker, right front (18808) –
7	813 (LB/WH)	Speaker, left front (18808) –
8	804 (OG/LG)	Speaker, left front (18808) +
9	800 (GY/LB)	Speaker, left rear (18808) +
10	801 (TN/YE)	Speaker, left rear (18808) –
11	803 (BN/PK)	Speaker, right rear (18808) –
12	802 (OG/RD)	Speaker, right rear (18808) +
13	–	not used
14	–	not used
15	19 (LB/RD)	Instrument illumination, feed
16	797 (LG/VT)	Voltage supplied at all times (overload protected)