C609

14630

A173
Door lock unit, passenger side front

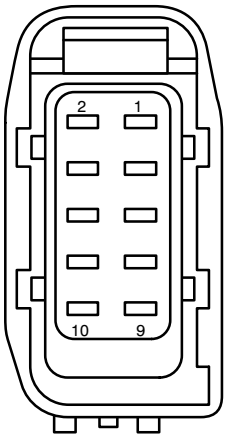

F10089

Pin	Circuit	Circuit Function
1	-	not used
2	117 (PK/BK)	Door lock, output
3	-	not used
4	-	not used
5	1297 (YE/RD)	Passenger front door lock switch, Door unlock, input
6	57 (BK)	Ground
7	1296 (OG/BK)	Passenger front door lock switch, Door lock, input
8	867 (DB)	Door ajar switch, passenger side front
9	-	not used
10	118 (PK/OG)	Door unlock, output

C612

14630

Y18
Speaker, right front

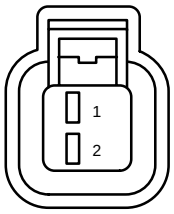

F02069

Pin	Circuit	Circuit Function
1	187 (DB/OG)	Tweeter, right front, to, Speaker, right front +
	805 (WH/LG)	Speaker, right front +
2	189 (TN/LB)	Tweeter, right front, to, Speaker, right front -
	811 (DG/OG)	Speaker, right front -

C613

14630

Y214
Tweeter, right front

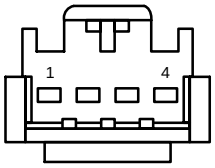

F042357

Pin	Circuit	Circuit Function
1	805 (WH/LG)	Speaker, right front +
2	811 (DG/OG)	Speaker, right front -
3	187 (DB/OG)	Tweeter, right front, to, Speaker, right front +
4	189 (TN/LB)	Tweeter, right front, to, Speaker, right front -