C504b (GY)

14A005

Master window adjust switch (14529)

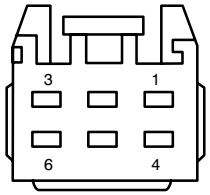

F06303

Pin	Circuit	Circuit function
1	193 (YE/LG)	Window lockout, feed
2	57 (BK)	Ground
3	319 (YE/BK)	Window switch, feed, right rear, – Down
4	400 (LB/BK)	Accessory relay, switched power, output
5	317 (GY/OG)	Window switch, feed, left rear – Down
6	316 (YE/LB)	Window switch, feed, right rear – Up

C505 (GN)

14A005

Door lock switch, driver side (14028)

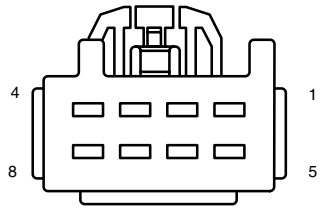

F08193

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	120 (PK/LG)	Door unlock, switch, input
4	57 (BK)	Ground
5	400 (LB/BK)	Accessory delay relay, switched output
6	–	not used
7	119 (PK/YE)	Door lock switch, input
8	–	not used

C506 (TN)

14A005

Door entry lamp, left front (13776)

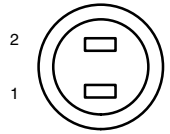

F02063

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	53 (BK/LB)	Interior lamp relay, switched power