C175 (GY)

12B637

Powertrain Control Module (PCM) (12A650)

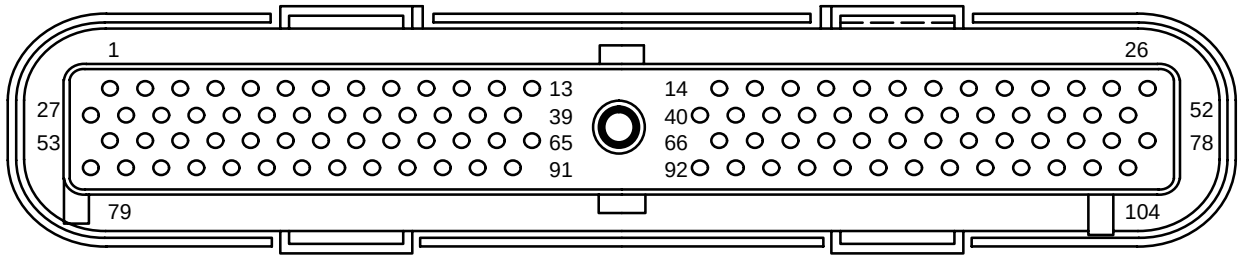

F104001

Pin	Circuit	Circuit function
1	315 (VT/OG)	Shift solenoid B
2	658 (PK/LG)	Malfunction Indicator Lamp (MIL), control
3	1144 (YE/BK)	Digital Transmission Range (DTR) sensor TR1
4	1093 (TN/RD)	Voltage supplied in Start (overload protected)
5	–	not used
6	970 (DG/WH)	Turbine shaft speed sensor (7M101)
7	–	not used
8	–	not used
9	–	not used
10	–	not used
11	–	not used
12	29 (YE/WH)	Fuel pump/fuel gauge sender
13	107 (VT)	Flash/EEPROM power supply
14	–	not used
15	915 (PK/LB)	SCP Bus -
16	914 (TN/OG)	SCP Bus +
17	1224 (BN/YE)	RX, signal
18	1223 (GY/RD)	TX, signal
19	–	not used
20	1181 (GY/YE)	Generator, signal 2, monitor
21	350 (GY)	Crankshaft position sensor (6C315) +

Pin	Circuit	Circuit function
22	349 (DB)	Crankshaft position sensor (6C315) -
23	–	not used
24	570 (BK/WH)	Ground
25	57 (BK)	Ground
26	850 (YE/BK)	Ignition coil (12029) A, cylinder 1 and 5
27	237 (OG/YE)	Shift solenoid A
28	386 (LB)	Engine cooling fan brake relay, control
29	–	not used
30	343 (DB/LG)	Anti–theft, indicator, input
31	328 (YE/LG)	Power steering pressure sensor, input
32	1273 (YE)	Powertrain Control Module (PCM) (12A650), to knock sensor
33	–	not used
34	–	not used
35	94 (RD/BK)	Heated Oxygen Sensor (HO2S) #12 (9G444), input
36	968 (TN/LB)	Mass Air Flow (MAF) sensor (12B579), signal, return
37	923 (OG/BK)	Transmission Fluid Temperature (TFT) sensor, input
38	354 (LG/RD)	Engine Coolant Temperature (ECT) sensor (12A648), input
39	743 (GY)	Intake Air Temperature (IAT) sensor (12A697), input
40	238 (DG/YE)	Fuel pump driver module (9H307), input

Pin	Circuit	Circuit function
41	879 (DG/WH)	A/C high pressure switch (19D594), input
42	232 (LG/YE)	Engine cooling fan relay, control
43	–	not used
44	329 (PK)	Starter relay (11450), control
45	3990 (LB/RD)	Sensor signal, Generator, output
46	639 (LG/VT)	High speed cooling fan relay, control
47	360 (BN/PK)	EGR Vacuum Regulator (EVR), control
48	11 (TN/YE)	Tachometer
49	1145 (LB/BK)	Digital Transmission Range (DTR) sensor, TR2
50	1143 (WH/BK)	Digital Transmission Range (DTR) sensor, TR4
51	570 (BK/WH)	Ground
52	851 (YE/RD)	Ignition coil (12029) B, cylinder 3 and 4
53	971 (PK/BK)	Shift solenoid C
54	480 (VT/YE)	Torque Converter Clutch (TCC) solenoid
55	883 (PK/LB)	keep alive memory
56	101 (GY/YE)	EVAP canister purge valve
57	310 (YE/RD)	Knock sensor (12A699)
58	–	not used
59	–	not used
60	74 (GY/LB)	Heated Oxygen Sensor (HO2S) #11 (9F472), input
61	393 (VT/LG)	Heated Oxygen Sensor (HO2S) #22 (9G444), input
62	791 (RD/PK)	Fuel tank pressure transducer sensor (9C968)
63	925 (WH/YE)	Injector pressure sensor, input
64	1268 (RD/BK)	Digital Transmission Range (DTR) sensor, TR3A
65	352 (BN/LG)	Differential Pressure Feedback EGR (DPFE) sensor, input
66	3063 (TN/OG)	Evaporator discharge air temperature sensor (19C734)
67	91 (VT/WH)	Evaporative emission (EVAP) canister vent valve (9F945)
68	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
69	331 (PK/YE)	A/C clutch relay, control
70	–	not used
71	361 (RD)	Voltage supplied in Start and Run (overload protected)
72	–	not used

Pin	Circuit	Circuit function
73	559 (TN/BK)	Fuel injector 5, control
74	557 (BN/YE)	Fuel injector 3, control
75	555 (TN)	Fuel injector 1, control
76	570 (BK/WH)	Ground
77	570 (BK/WH)	Ground
78	852 (YE/WH)	Ignition coil (12029) C, cylinder 2 and 6
79	911 (WH/LG)	Check Transaxle lamp
80	926 (LB/OG)	Fuel pump driver module (9H307), output
81	924 (BN/OG)	to Electronic Pressure Control (EPC) solenoid
82	1017 (BK/WH)	Check cap indicator lamp
83	264 (WH/LB)	Idle Air Control (IAC) valve (9F715), control
84	136 (DB/YE)	Output Shaft Speed (OSS) sensor (7H103)
85	282 (DB/OG)	Camshaft position sensor (6B288), input
86	347 (BK/YE)	A/C high pressure switch (19D594), switched output
87	392 (RD/LG)	Heated Oxygen Sensor (HO2S) #21 (9F472), input
88	967 (LB/RD)	Mass Air Flow (MAF) sensor (12B579), output
89	355 (GY/WH)	Throttle Position Sensor (TPS) (9B989), input
90	351 (BN/WH)	Reference, voltage
91	359 (GY/RD)	signal, return
92	810 (RD/LG)	Brake pedal position switch (13480), input
93	387 (RD/WH)	Heated Oxygen Sensor (HO2S) #11 (9F472), heater
94	389 (WH/BK)	Heated Oxygen Sensor (HO2S) #21 (9F472), heater
95	388 (YE/LB)	Heated Oxygen Sensor (HO2S) #12 (9G444), heater
96	390 (TN/YE)	Heated Oxygen Sensor (HO2S) #22 (9G444), heater
97	–	not used
98	904 (LG/RD)	Generator/Battery indicator, control
99	560 (LG/OG)	Fuel injector 6, control
100	558 (BN/LB)	Fuel injector 4, control
101	556 (WH)	Fuel injector 2, control
102	–	not used
103	570 (BK/WH)	Ground
104	–	not used