Late build

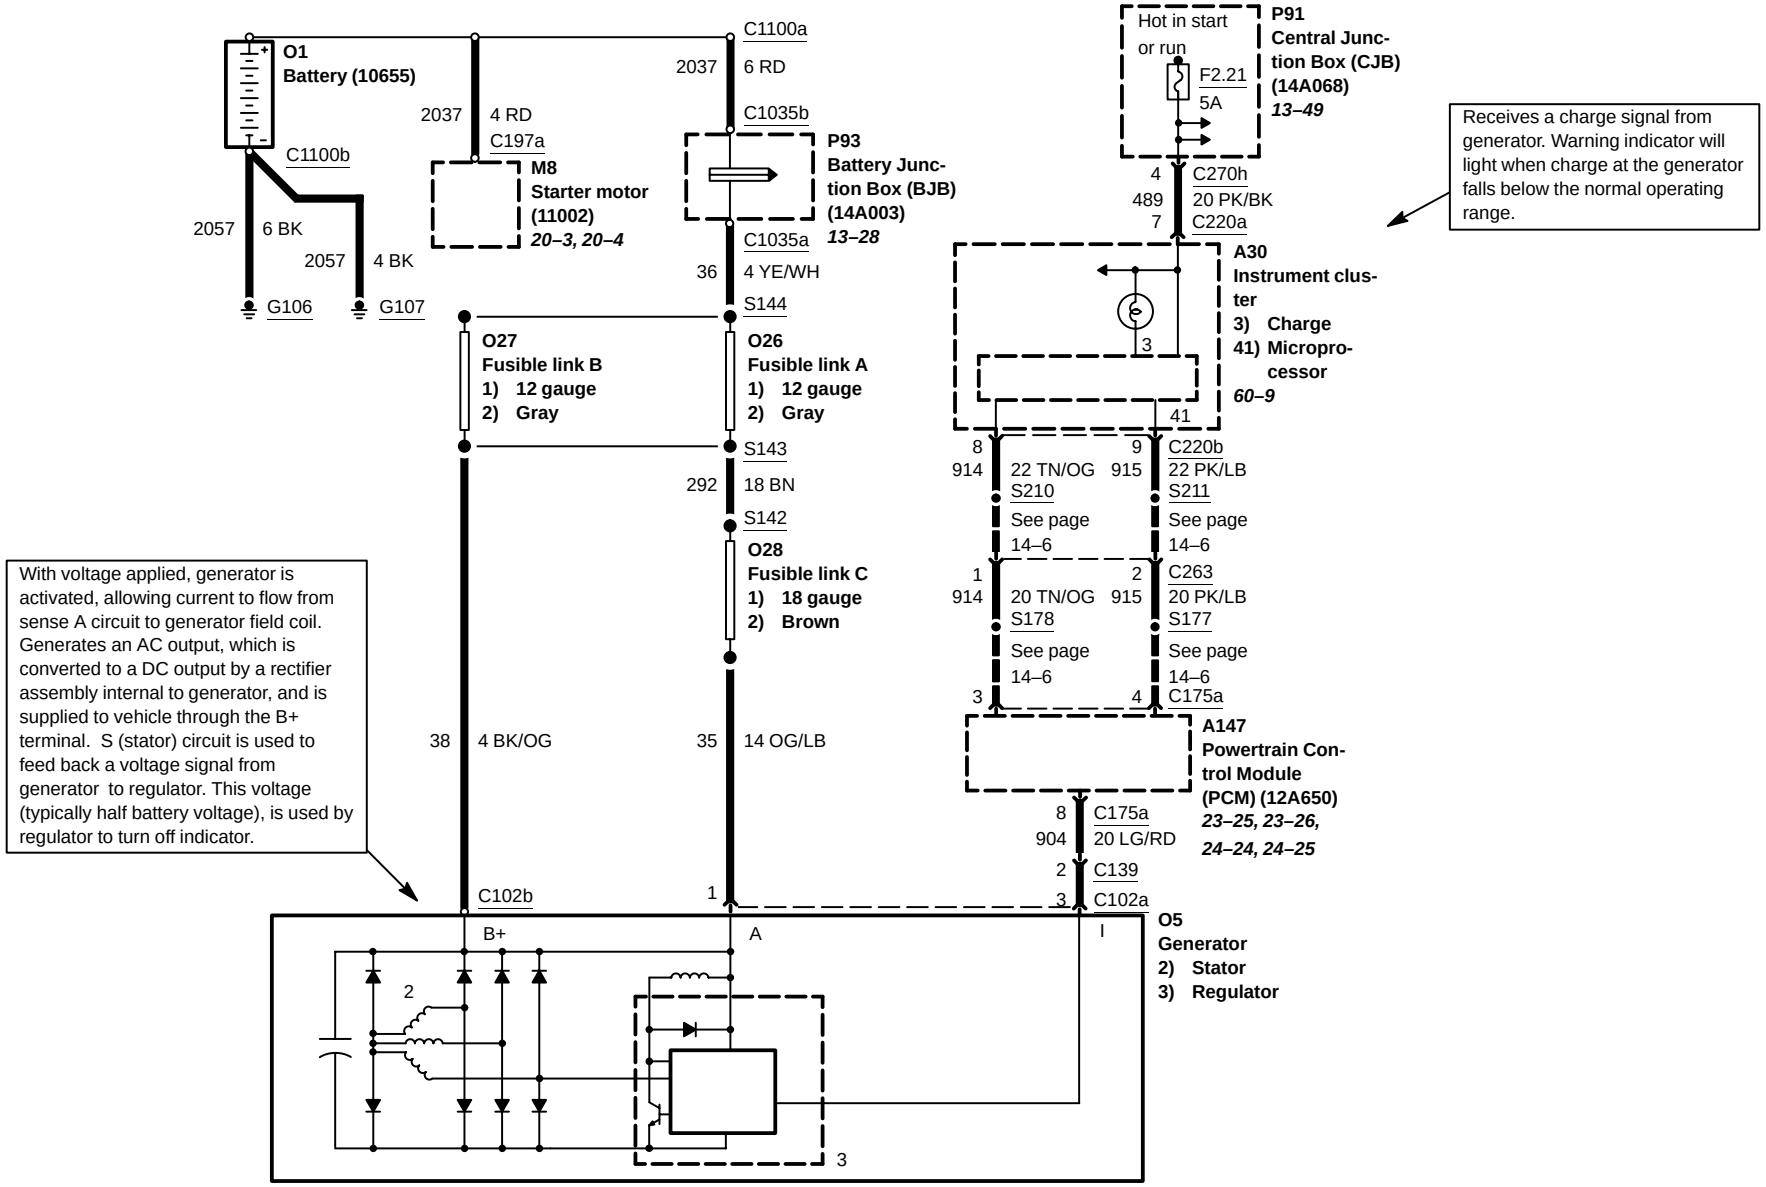
O1
Battery (10655)
C1100b
2057 6 BK
2057 4 BK
G106
G107
2037 4 RD
C197a
M8
Starter motor
(11002)
20–3, 20–4
C1100a
2037 6 RD
C1035b
P93
Battery Junction Box (BJB)
(14A003)
13–28
C1035a
36 4 YE/WH
S144
O27
Fusible link B
1) 12 gauge
2) Gray
O26
Fusible link A
1) 12 gauge
2) Gray
S143
292 18 BN
S142
O28
Fusible link C
1) 18 gauge
2) Brown
38 4 BK/OG
35 14 OG/LB
C102b
B+
A
1
2
3
Hot in start
or run
F2.21
5A
P91
Central Junction Box (CJB)
(14A068)
13–49
4 C270h
489 20 PK/BK
7 C220a
Receives a charge signal from generator. Warning indicator will light when charge at the generator falls below the normal operating range.
A30
Instrument cluster
3) Charge
41) Microprocessor
60–9
3
41
8 914 22 TN/OG S210
See page 14–6
9 915 C220b 22 PK/LB S211
See page 14–6
1 914 20 TN/OG S178
See page 14–6
2 915 C263 20 PK/LB S177
See page 14–6
3
4 C175a
A147
Powertrain Control Module
(PCM) (12A650)
23–25, 23–26,
24–24, 24–25
8 C175a
904 20 LG/RD
2 C139
3 C102a
I
O5
Generator
2) Stator
3) Regulator
With voltage applied, generator is activated, allowing current to flow from sense A circuit to generator field coil. Generates an AC output, which is converted to a DC output by a rectifier assembly internal to generator, and is supplied to vehicle through the B+ terminal. S (stator) circuit is used to feed back a voltage signal from generator to regulator. This voltage (typically half battery voltage), is used by regulator to turn off indicator.