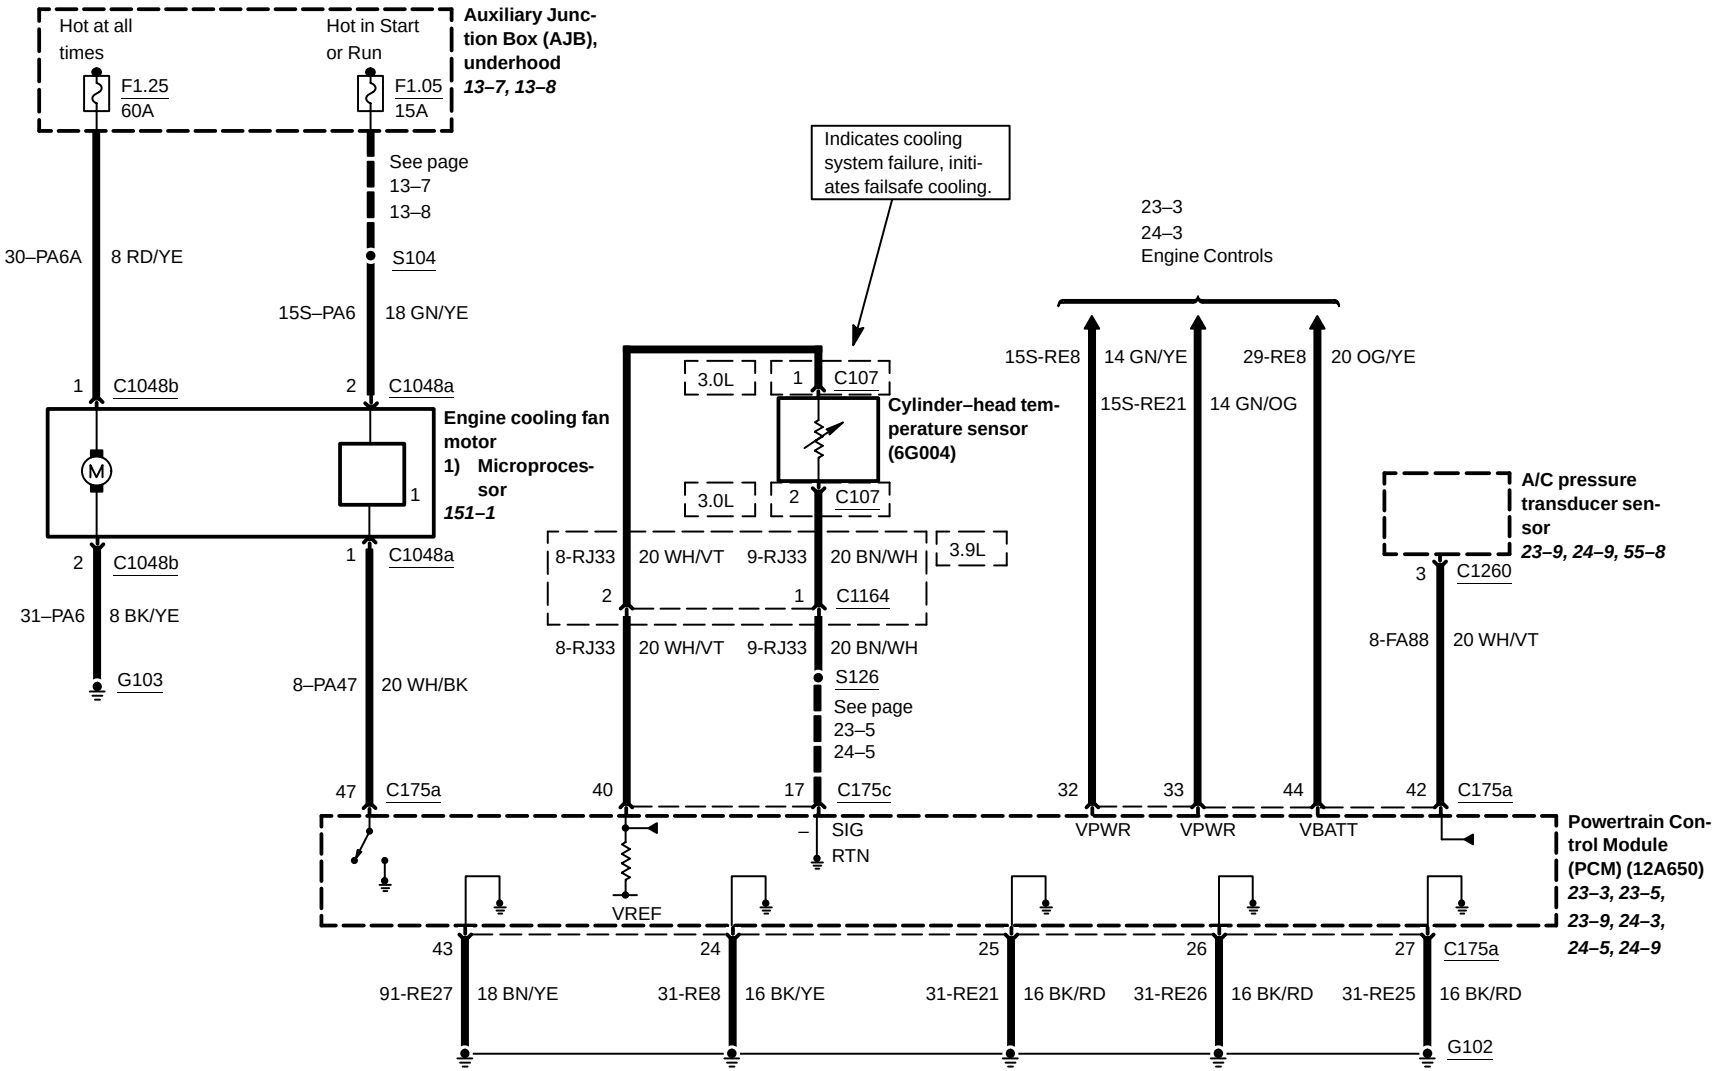
Hot at all times
Hot in Start or Run
Auxiliary Junction Box (AJB), underhood
13–7, 13–8
F1.25
60A
F1.05
15A
See page 13–7 13–8
30–PA6A
8 RD/YE
S104
15S–PA6
18 GN/YE
1
C1048b
2
C1048a
Engine cooling fan motor
1) Microprocessor
151–1
M
1
2
C1048b
1
C1048a
31–PA6
8 BK/YE
G103
8–PA47
20 WH/BK
Indicates cooling system failure, initiates failsafe cooling.
3.0L
1
C107
Cylinder–head temperature sensor (6G004)
3.0L
2
C107
8-RJ33
20 WH/VT
9-RJ33
20 BN/WH
3.9L
2
1
C1164
8-RJ33
20 WH/VT
9-RJ33
20 BN/WH
S126
See page 23–5 24–5
47
C175a
40
17
C175c
–
SIG RTN
VREF
23–3
24–3
Engine Controls
15S-RE8
14 GN/YE
29-RE8
20 OG/YE
15S-RE21
14 GN/OG
A/C pressure transducer sensor
23–9, 24–9, 55–8
3
C1260
8-FA88
20 WH/VT
32
33
44
42
C175a
VPWR
VPWR
VBATT
Powertrain Control Module (PCM) (12A650)
23–3, 23–5, 23–9, 24–3, 24–5, 24–9
43
24
25
26
27
C175a
91-RE27
18 BN/YE
31-RE8
16 BK/YE
31-RE21
16 BK/RD
31-RE26
16 BK/RD
31-RE25
16 BK/RD
G102