4.6L

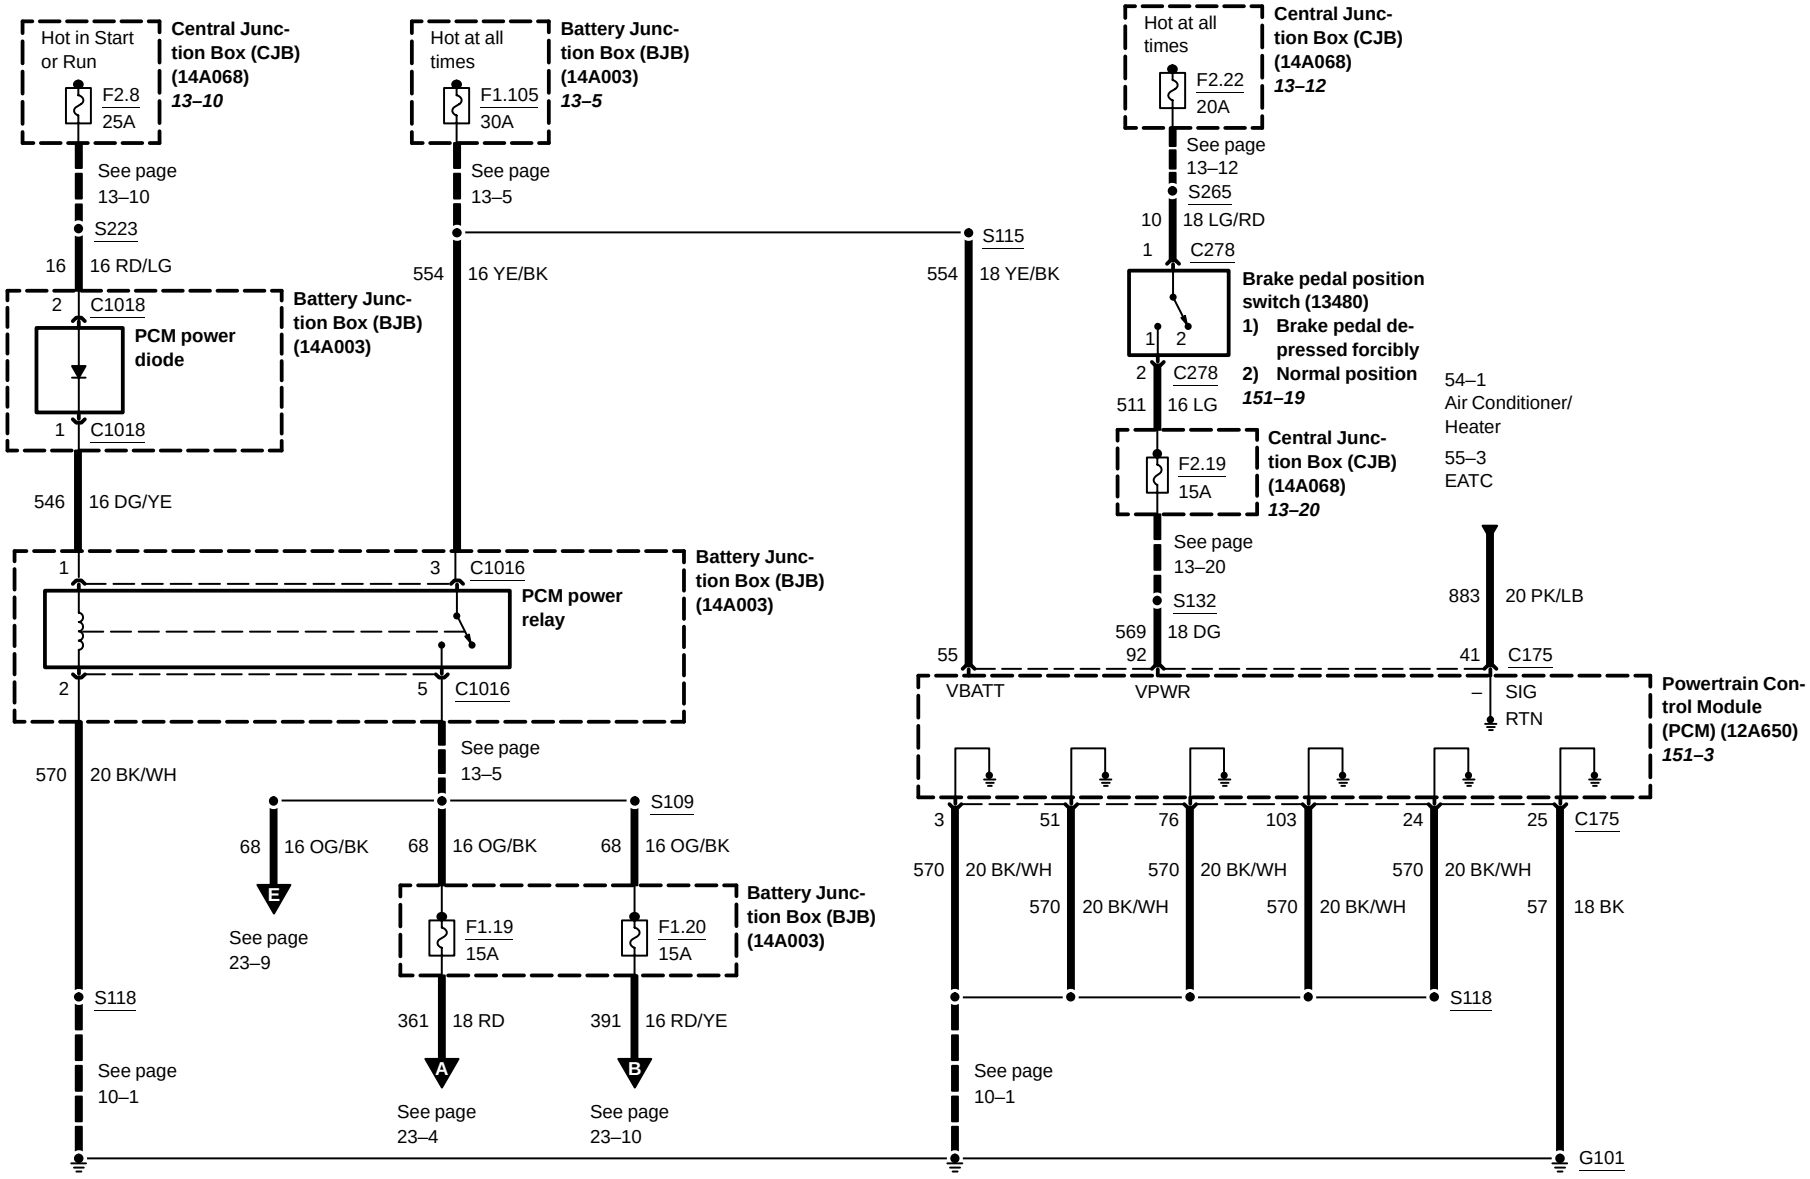
Hot in Start or Run
F2.8
25A
Central Junction Box (CJB) (14A068)
13–10
See page 13–10
S223
16 RD/LG
C1018
PCM power diode
Battery Junction Box (BJB) (14A003)
546 16 DG/YE
Hot at all times
F1.105
30A
Battery Junction Box (BJB) (14A003)
13–5
See page 13–5
554 16 YE/BK
S115
554 18 YE/BK
Hot at all times
F2.22
20A
Central Junction Box (CJB) (14A068)
13–12
See page 13–12
S265
10 18 LG/RD
C278
Brake pedal position switch (13480)
1) Brake pedal depressed forcibly
2) Normal position
151–19
511 16 LG
F2.19
15A
Central Junction Box (CJB) (14A068)
13–20
See page 13–20
S132
569 18 DG
92
54–1 Air Conditioner/ Heater
55–3 EATC
883 20 PK/LB
41 C175
PCM power relay
Battery Junction Box (BJB) (14A003)
C1016
570 20 BK/WH
See page 13–5
S109
68 16 OG/BK
68 16 OG/BK
68 16 OG/BK
See page 23–9
F1.19
15A
F1.20
15A
Battery Junction Box (BJB) (14A003)
361 18 RD
391 16 RD/YE
See page 23–4
See page 23–10
S118
See page 10–1
55
VBATT
VPWR
SIG RTN
Powertrain Control Module (PCM) (12A650)
151–3
3 51 76 103 24 25 C175
570 20 BK/WH
570 20 BK/WH
570 20 BK/WH
570 20 BK/WH
570 20 BK/WH
570 20 BK/WH
57 18 BK
S118
See page 10–1
G101