Late build

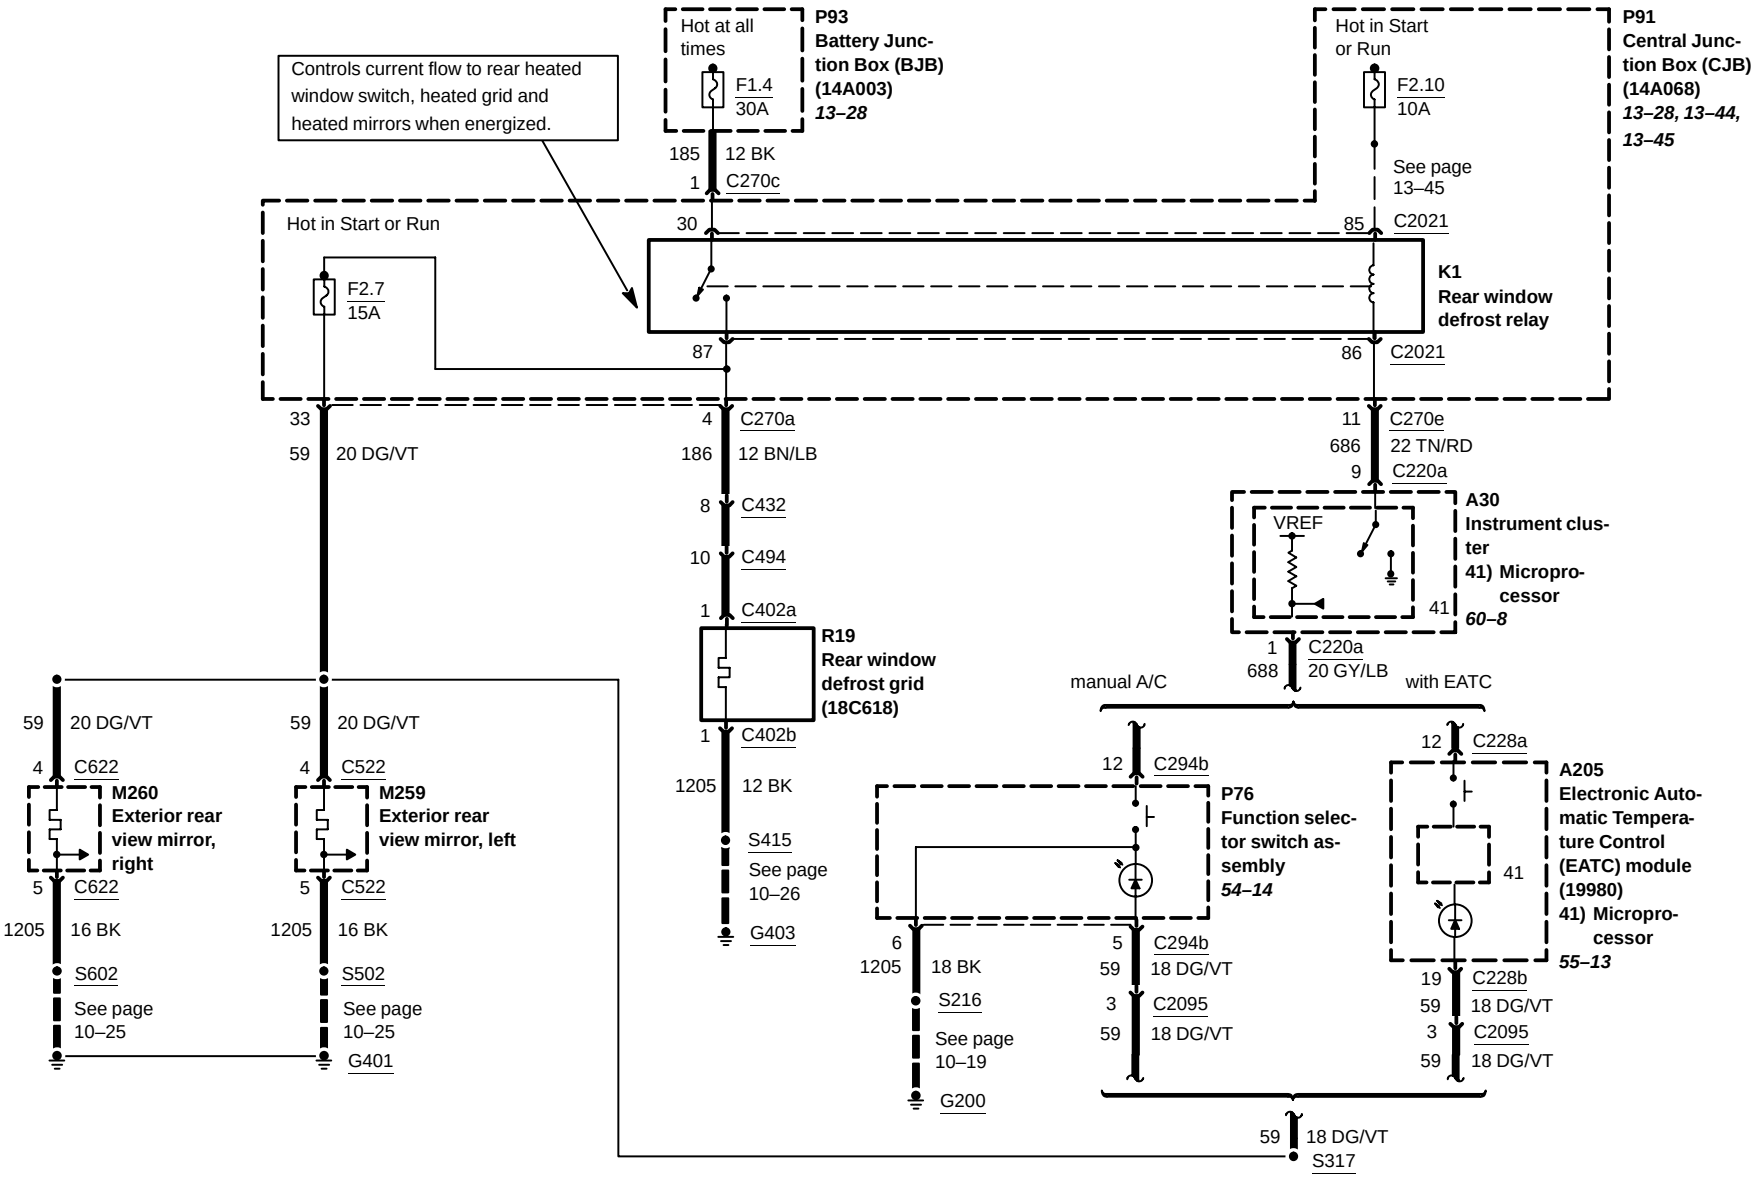
Controls current flow to rear heated window switch, heated grid and heated mirrors when energized.
Hot at all times
P93
Battery Junction Box (BJB)
(14A003)
13–28
F1.4
30A
185
12 BK
1
C270c
Hot in Start or Run
F2.10
10A
See page 13–45
P91
Central Junction Box (CJB)
(14A068)
13–28, 13–44, 13–45
Hot in Start or Run
F2.7
15A
30
85
C2021
K1
Rear window defrost relay
87
86
C2021
33
59
20 DG/VT
4
C270a
186
12 BN/LB
11
C270e
686
22 TN/RD
9
C220a
A30
Instrument cluster
41) Microprocessor
60–8
VREF
41
8
C432
10
C494
1
C402a
R19
Rear window defrost grid
(18C618)
1
C220a
688
20 GY/LB
manual A/C
with EATC
1
C402b
1205
12 BK
S415
See page 10–26
G403
59
20 DG/VT
4
C622
M260
Exterior rear view mirror, right
5
C622
1205
16 BK
S602
See page 10–25
G401
59
20 DG/VT
4
C522
M259
Exterior rear view mirror, left
5
C522
1205
16 BK
S502
See page 10–25
G401
12
C294b
P76
Function selector switch assembly
54–14
6
1205
18 BK
S216
See page 10–19
G200
5
C294b
59
18 DG/VT
3
C2095
59
18 DG/VT
12
C228a
A205
Electronic Automatic Temperature Control (EATC) module
(19980)
41) Microprocessor
55–13
41
19
C228b
59
18 DG/VT
3
C2095
59
18 DG/VT
59
18 DG/VT
S317