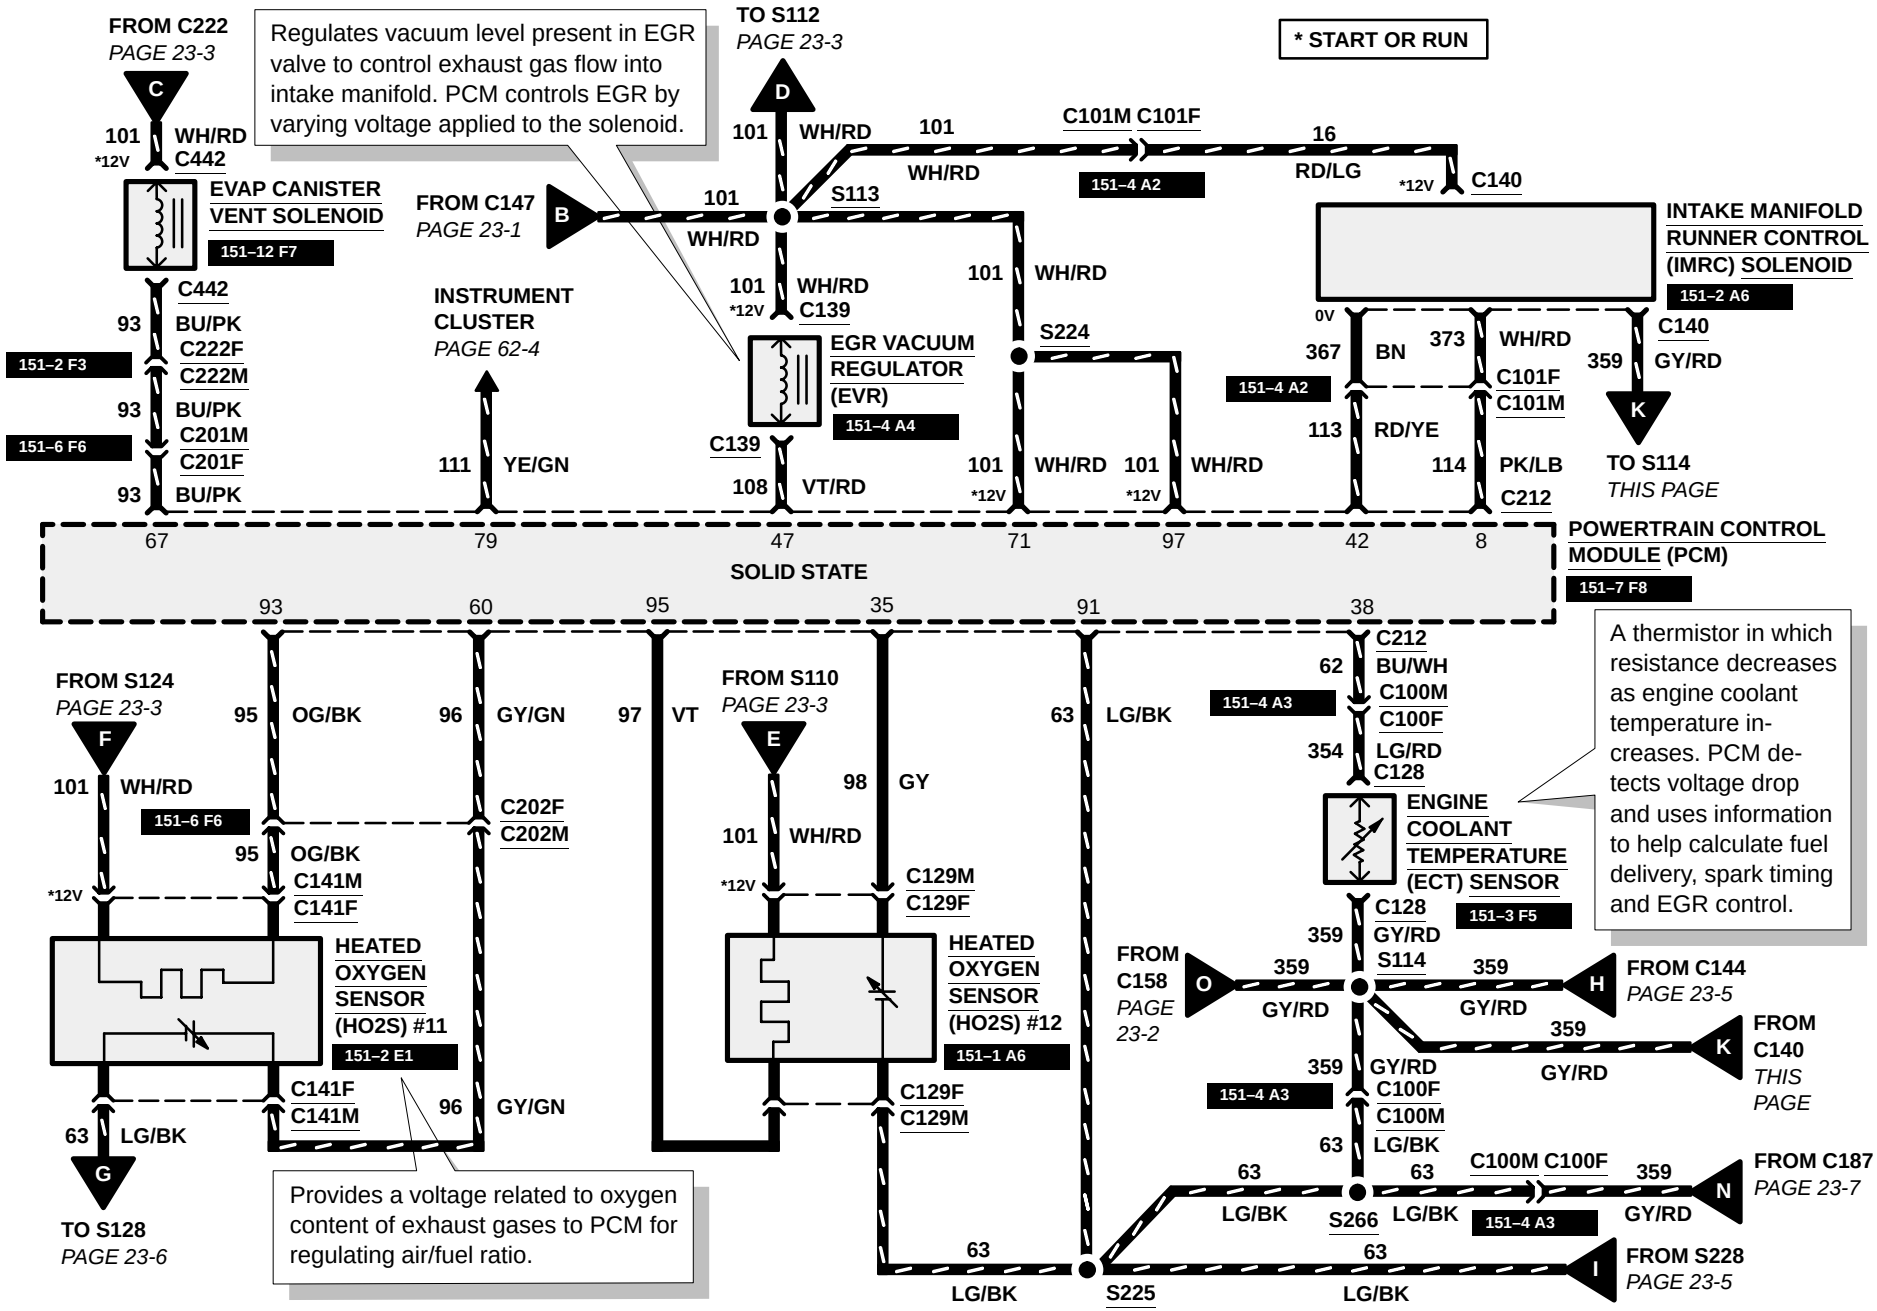
FROM C222
PAGE 23-3
C
101
*12V
WH/RD
C442
EVAP CANISTER VENT SOLENOID
151–12 F7
C442
93
BU/PK
C222F
C222M
151–2 F3
93
BU/PK
C201M
C201F
151–6 F6
93
BU/PK
Regulates vacuum level present in EGR valve to control exhaust gas flow into intake manifold. PCM controls EGR by varying voltage applied to the solenoid.
TO S112
PAGE 23-3
D
101
WH/RD
101
WH/RD
C101M C101F
151–4 A2
16
RD/LG
*12V
C140
* START OR RUN
FROM C147
PAGE 23-1
B
101
WH/RD
S113
INTAKE MANIFOLD RUNNER CONTROL (IMRC) SOLENOID
151–2 A6
INSTRUMENT CLUSTER
PAGE 62-4
101
*12V
WH/RD
C139
101
WH/RD
S224
0V
367
BN
373
WH/RD
C101F
C101M
359
GY/RD
C140
K
TO S114
THIS PAGE
EGR VACUUM REGULATOR (EVR)
151–4 A4
C139
108
VT/RD
111
YE/GN
101
*12V
WH/RD
101
*12V
WH/RD
151–4 A2
113
RD/YE
114
PK/LB
C212
67
79
47
71
97
42
8
POWERTRAIN CONTROL MODULE (PCM)
151–7 F8
SOLID STATE
93
60
95
35
91
38
FROM S124
PAGE 23-3
F
95
OG/BK
96
GY/GN
97
VT
FROM S110
PAGE 23-3
E
63
LG/BK
C212
62
BU/WH
C100M
C100F
354
LG/RD
C128
151–4 A3
A thermistor in which resistance decreases as engine coolant temperature increases. PCM detects voltage drop and uses information to help calculate fuel delivery, spark timing and EGR control.
101
WH/RD
151–6 F6
C202F
C202M
95
OG/BK
C141M
C141F
98
GY
101
WH/RD
C129M
C129F
*12V
*12V
ENGINE COOLANT TEMPERATURE (ECT) SENSOR
151–3 F5
C128
359
GY/RD
S114
FROM C158
PAGE 23-2
O
359
GY/RD
359
GY/RD
H
FROM C144
PAGE 23-5
359
GY/RD
K
FROM C140
THIS PAGE
HEATED OXYGEN SENSOR (HO2S) #11
151–2 E1
HEATED OXYGEN SENSOR (HO2S) #12
151–1 A6
C141F
C141M
96
GY/GN
C129F
C129M
359
GY/RD
C100F
C100M
151–4 A3
63
LG/BK
63
LG/BK
G
TO S128
PAGE 23-6
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.
63
LG/BK
S225
63
LG/BK
63
LG/BK
S266
63
LG/BK
C100M C100F
151–4 A3
359
GY/RD
N
FROM C187
PAGE 23-7
I
FROM S228
PAGE 23-5