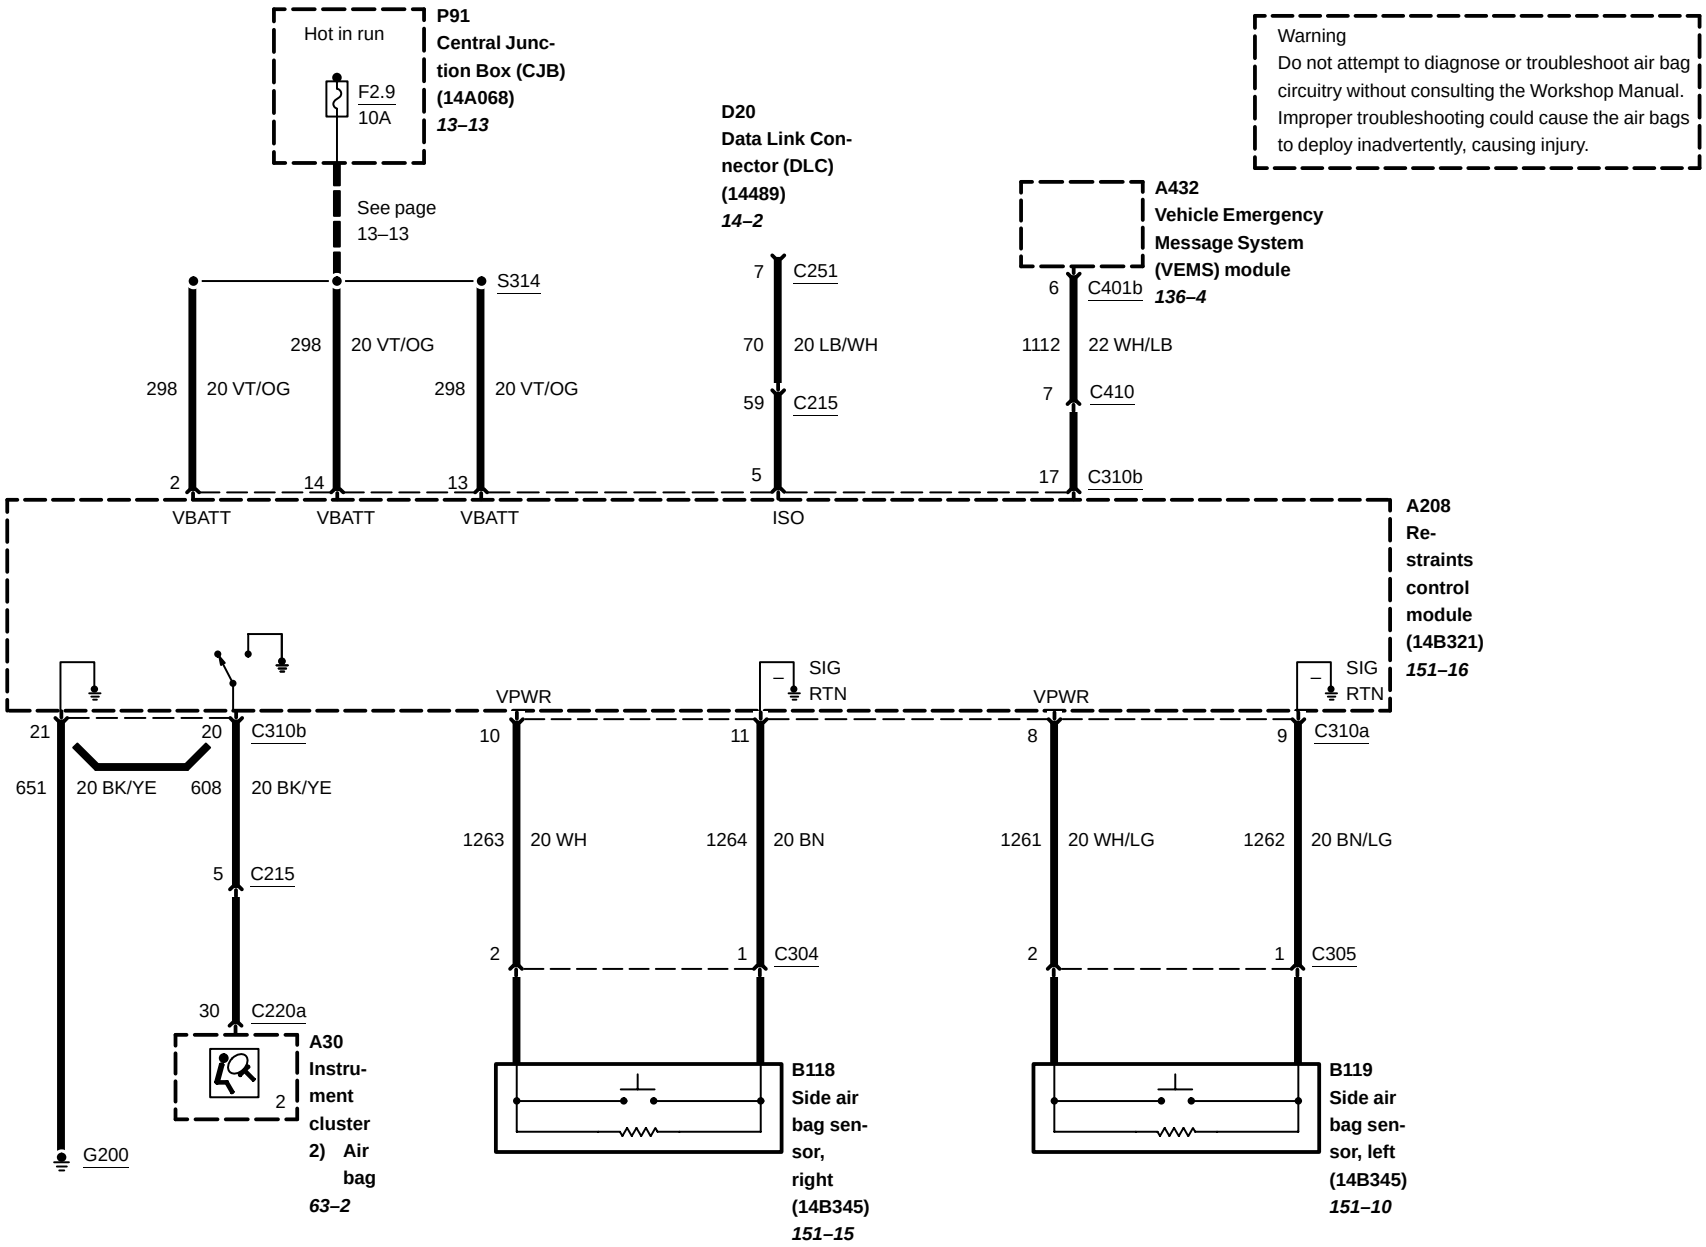
Hot in run
F2.9
10A
P91
Central Junction Box (CJB)
(14A068)
13–13
See page 13–13
D20
Data Link Connector (DLC)
(14489)
14–2
A432
Vehicle Emergency Message System (VEMS) module
136–4
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
S314
298 20 VT/OG
298 20 VT/OG
298 20 VT/OG
7 C251
70 20 LB/WH
59 C215
5
6 C401b
1112 22 WH/LB
7 C410
17 C310b
2 VBATT
14 VBATT
13 VBATT
ISO
A208
Restraints control module
(14B321)
151–16
21
20 C310b
651 20 BK/YE
608 20 BK/YE
5 C215
30 C220a
2
A30
Instrument cluster
2) Air bag
63–2
G200
VPWR
SIG RTN
10
11
1263 20 WH
1264 20 BN
2
1 C304
B118
Side air bag sensor, right
(14B345)
151–15
VPWR
SIG RTN
8
9 C310a
1261 20 WH/LG
1262 20 BN/LG
2
1 C305
B119
Side air bag sensor, left
(14B345)
151–10