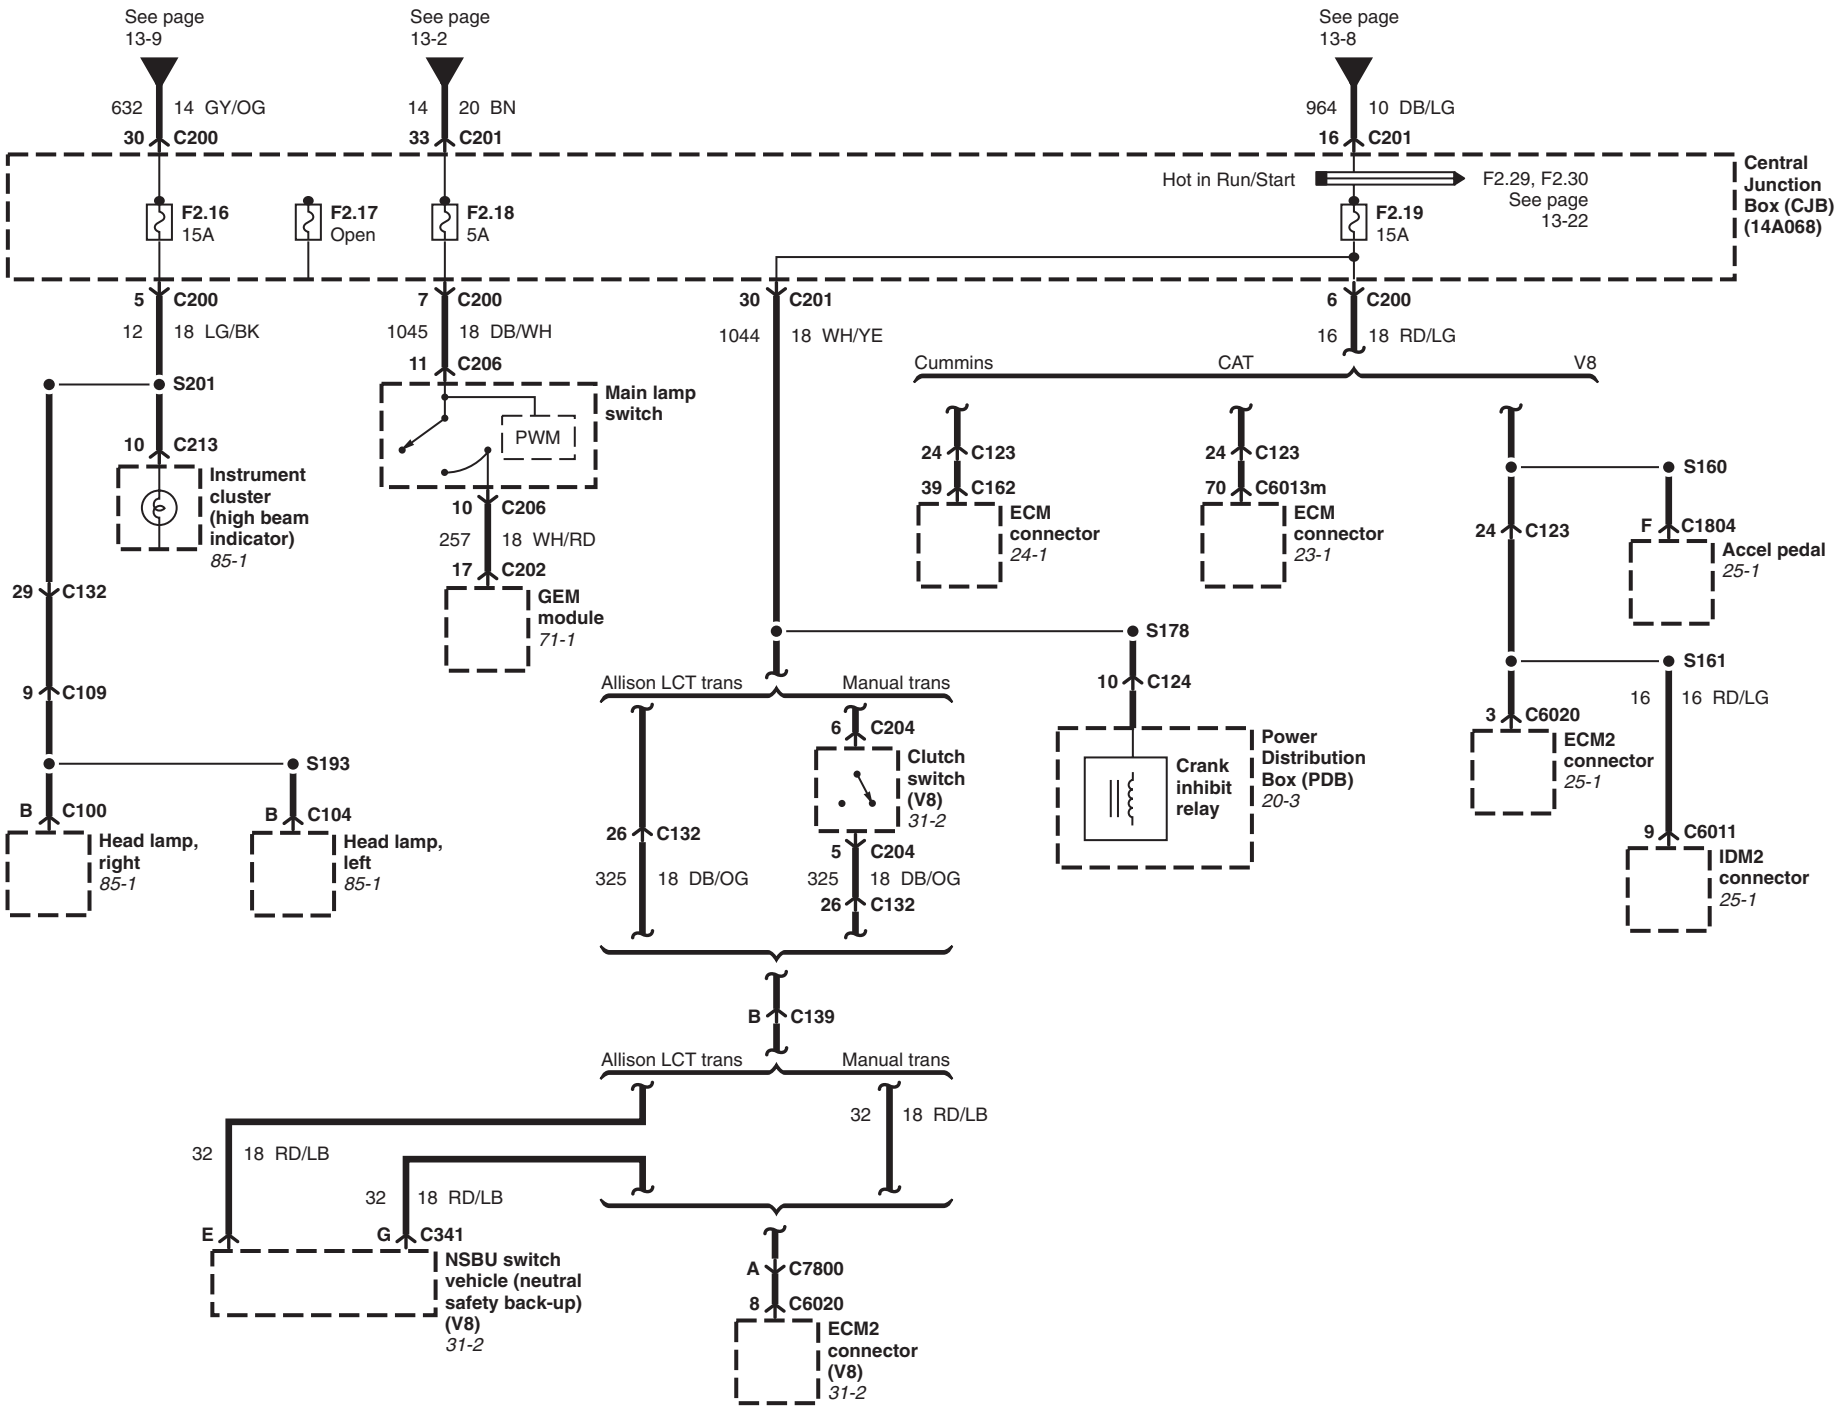
See page 13-9
See page 13-2
See page 13-8
632 14 GY/OG
30 C200
14 20 BN
33 C201
964 10 DB/LG
16 C201
Central Junction Box (CJB) (14A068)
Hot in Run/Start
F2.29, F2.30 See page 13-22
F2.16 15A
F2.17 Open
F2.18 5A
F2.19 15A
5 C200
12 18 LG/BK
7 C200
1045 18 DB/WH
30 C201
1044 18 WH/YE
6 C200
16 18 RD/LG
Cummins
CAT
V8
S201
10 C213
Instrument cluster (high beam indicator) 85-1
11 C206
Main lamp switch
PWM
10 C206
257 18 WH/RD
17 C202
GEM module 71-1
24 C123
39 C162
ECM connector 24-1
24 C123
70 C6013m
ECM connector 23-1
24 C123
S160
F C1804
Accel pedal 25-1
29 C132
9 C109
S193
B C100
Head lamp, right 85-1
B C104
Head lamp, left 85-1
Allison LCT trans
Manual trans
6 C204
Clutch switch (V8) 31-2
26 C132
325 18 DB/OG
5 C204
325 18 DB/OG
26 C132
S178
10 C124
Power Distribution Box (PDB) 20-3
Crank inhibit relay
S161
16 16 RD/LG
3 C6020
ECM2 connector 25-1
9 C6011
IDM2 connector 25-1
B C139
Allison LCT trans
Manual trans
32 18 RD/LB
32 18 RD/LB
32 18 RD/LB
E
G C341
NSBU switch vehicle (neutral safety back-up) (V8) 31-2
A C7800
8 C6020
ECM2 connector (V8) 31-2