C126

14290

D16
ABS test connector

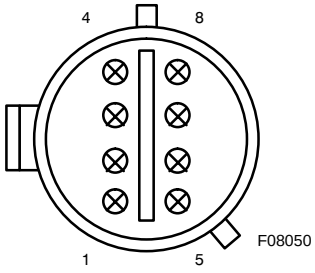

F08050

Pin	Circuit	Circuit Function
1	20-CF6 (PK/YE)	Voltage, hot in run only
2	31-CF53B (BK/WH)	Ground
3	31-CF53A (BK/WH)	Ground
4	4-CF53 (GY/WH)	Data link, bus positive
5	20-CF6A (PK/YE)	Voltage, hot in run only
6	30-CF53B (RD/WH)	Voltage supplied at all times (not overload protected)
7	30-CF53A (RD/WH)	Voltage supplied at all times (not overload protected)
8	–	not used

C127

14290

N415
Anti–theft hood switch

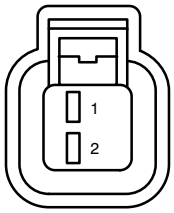

F02069

Pin	Circuit	Circuit Function
1	8-GL7 (WH)	Sensor signal
2	31-GL7 (BK/YE)	Ground

C128

14290

B22
Mass Air Flow (MAF) sensor

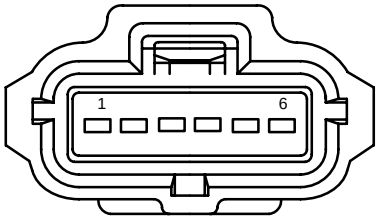

F06077

Pin	Circuit	Circuit Function
1	–	not used
2	15S-RJ22 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), Switched
3	31-RJ22 (BK/OG)	Ground
4	9-RJ22 (BN/BU)	Sensor signal return (reference/ ground)
5	8-RJ22 (WH/BU)	Sensor signal
6	–	not used

C129

14290

B213
Intake Air Temperature (IAT) sensor

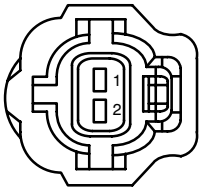

F02027

Pin	Circuit	Circuit Function
1	8-RJ17 (WH/VT)	Sensor signal
2	9-RJ17 (BN/WH)	Sensor signal return (reference/ ground)