C801

14A005

N110
Window adjust switch, right rear (14A412)

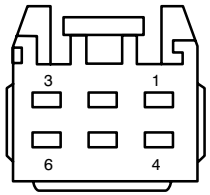

F06303

Pin	Circuit	Circuit function
1	320 (RD/BK)	Window switch, feed, right rear, Down
2	881 (BN)	Window switch, to, Window motor, +/–
3	193 (YE/LG)	Window safety relay, switched output
4	–	not used
5	882 (BN/YE)	Window switch, to, Window motor, +/–
6	319 (YE/BK)	Window switch, feed, right rear, Up

C802

14632
14A005

Y19
Speaker, right rear (18808)

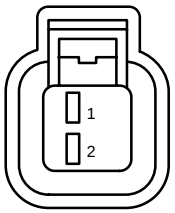

F02069

Pin	Circuit	Circuit function
1	802 (OG/RD)	Speaker, right rear (18808) +
2	803 (BN/PK)	Speaker, right rear (18808) –

C803

14A005

M117
Power window motor, right rear (23394)

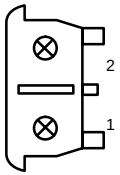

F02073

Pin	Circuit	Circuit function
1	881 (BN)	Window switch, to, Window motor, +/–
2	882 (BN/YE)	Window switch, to, Window motor, +/–

C804

14A005

M65
Door lock actuator, right rear (218A42)

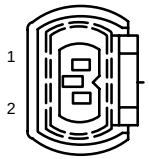

F02116

Pin	Circuit	Circuit function
1	118 (PK/OG)	Door ajar switch, right rear, signal
2	117 (PK/BK)	Ground

C820

14A005

N238
Door ajar switch, passenger side rear (14018)

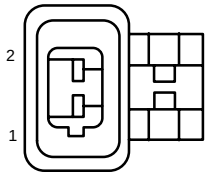

F02117

Pin	Circuit	Circuit function
1	346 (BK/WH)	Door ajar switch, right rear, signal
2	57 (BK)	Ground