5.4L EXCURSION

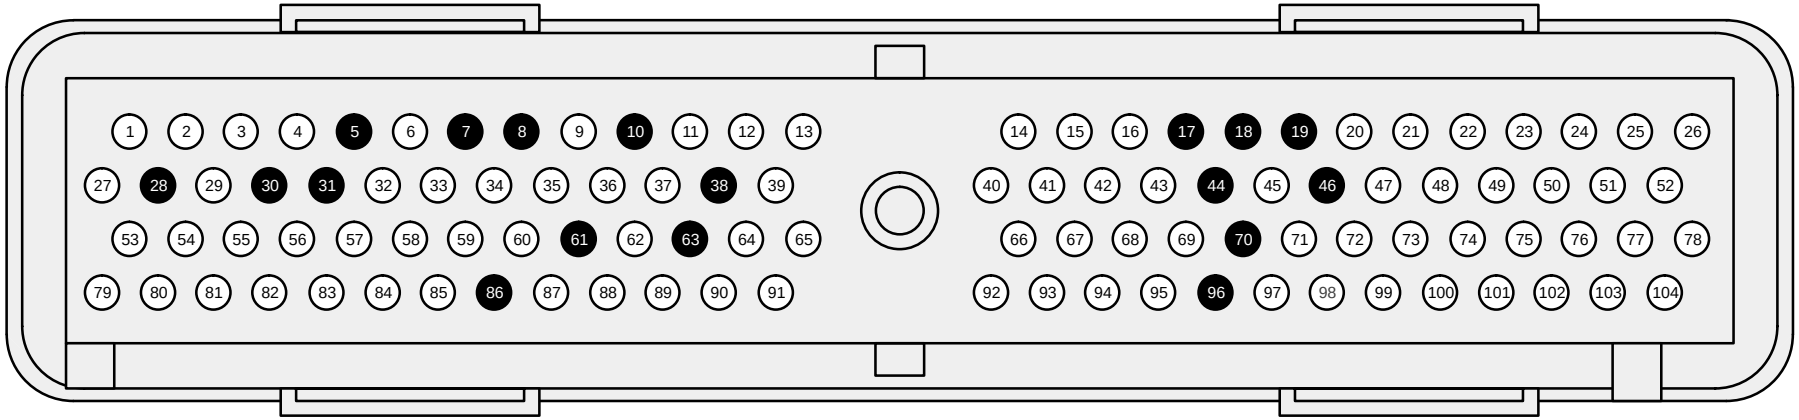

C1027

POWERTRAIN CONTROL MODULE (PCM)

5.4L EXCURSION

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	1025 (OG/YE)	Coil On Plug (COP) #6	37	923 (OG/BK)	Transmission Fluid Temperature Sensor
2	658 (PK/LG)	MIL Lamp Control			
3	570 (BK/WH)	Ground	38	–	NOT USED
4	–	NOT USED	39	743 (GY)	Intake Air Temperature Input
5	–	NOT USED	40	238 (DG/YE)	Fuel Pump Monitor
6	237 (OG/YE)	Shift Solenoid #1	41	439 (TN/LG)	A/C Head Pressure Switch
7	–	NOT USED	42	1101 (GY/RD)	NOT USED
8	–	NOT USED	43	71 (OG/LG)	Data Output Link
9	29 (YE/WH)	Fuel Gauge to Fuel Gauge Sender	44	–	NOT USED
			45	39 (RD/WH)	Temperature Output to Dash
10	–	NOT USED	46	–	NOT USED
11	315 (VT/OG)	Shift Solenoid #2	47	360 (BN/PK)	Exhaust Gas Recirculation (EGR) Solenoid
12	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL)	48	648 (WH/PK)	Clean Tach Output
13	107 (VT)	Flash EPROM Power Supply (FEPS)	49	1145 (DB/WH)	Digital Transmission Range (DTR) Sensor (TR2)
14	784 (LB/BK)	4X4 High/Low Indicator Switch			
15	915 (PK/LB)	SCP Data Bus (–)	50	1143 (DG/YE)	Digital Transmission Range (DTR) Sensor (TR4)
16	914 (TN/OG)	SCP Data Bus (+)			
17	–	NOT USED	51	570 (BK/WH)	Ground
18	–	NOT USED	52	1028 (WH/PK)	Coil On Plug (COP) #3
19	–	NOT USED	53	1030 (DG/VT)	Coil On Plug (COP) #4
20	924 (BN/OG)	Coast Clutch Solenoid	54	480 (VT/YE)	Torque Converter Clutch (TCC) Solenoid
21	349 (DB)	Crankshaft Position Sensor (+)			
22	350 (GY)	Crankshaft Position Sensor (–)	55	729 (RD/WH)	Power (Hot at All Times) (KAPWR)
23	570 (BK/WH)	Ground	56	191 (LG/BK)	EVAP Canister Purge Valve
24	570 (BK/WH)	Ground	57	310 (YE/RD)	Knock Sensor (KS+)
25	567 (LB/YE)	Case Ground	58	679 (GY/BK)	Vehicle Speed Sensor (+)
26	1024 (LG/WH)	Coil On Plug (COP) #1	59	970 (DG/WH)	Turbine Speed Sensor (+)
27	1021 (LG/YE)	Coil On Plug (COP) #5	60	74 (GY/LB)	HEGO #11
28	–	NOT USED	61	–	NOT USED
29	224 (TN/WH)	Transmission Control Switch	62	791 (RD/PK)	Fuel Tank Pressure Transducer
30	–	NOT USED	63	–	NOT USED
31	–	NOT USED	64	199 (LB/YE)	Digital Transmission Range (DTR) Sensor (TR3A)
32	311 (DG/VT)	Knock Sensor (KS–)			
33	676 (PK/OG)	Vehicle Speed Sensor (–)	65	352 (BN/LG)	Delta Pressure Feedback EGR (DPFE) Sensor
34	1144 (WH/YE)	Digital Transmission Range (DTR) Sensor (TR1)			
35	392 (RD/LG)	HEGO #12			
36	968 (TN/LB)	Mass Air Flow (MAF) Sensor Return			

5.4L EXCURSION

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
66	1102 (YE/LG)	Cylinder Head Temperature Sensor	87	94 (RD/BK)	HEGO #21
67	91 (VT/WH)	Canister Vent Solenoid	88	967 (LB/RD)	Mass Air Flow (MAF) Sensor
68	1100 (GY/BK)	NOT USED	89	355 (GY/WH)	Throttle Position (TP) Sensor
69	331 (PK/YE)	A/C Clutch Relay	90	351 (BN/WH)	Reference Output Voltage
70	–	NOT USED	91	359 (GY/RD)	Sensor Signal Return
71	361 (RD)	Power Input	92	810 (RD/LG)	Brake Pedal Position (BPP) Switch
72	561 (TN/RD)	Fuel Injector #7	93	387 (RD/WH)	HEGO Sensor Heater #11 Voltage Monitor
73	559 (TN/BK)	Fuel Injector #5	94	388 (YE/LB)	HEGO Sensor Heater #21 Voltage Monitor
74	557 (BN/YE)	Fuel Injector #3	95	389 (WH/BK)	HEGO Sensor Heater #12 Voltage Monitor
75	555 (TN)	Fuel Injector #1	96	–	NOT USED
76	570 (BK/WH)	Ground	97	361 (RD)	Power Input
77	570 (BK/WH)	Ground	98	562 (LB)	Fuel Injector #8
78	1027 (PK/LB)	Coil On Plug (COP) #7	99	560 (LG/OG)	Fuel Injector #6
79	1029 (WH/RD)	Coil On Plug (COP) #8	100	558 (BN/LG)	Fuel Injector #4
80	926 (LB/OG)	Fuel Pump Relay Control	101	556 (WH)	Fuel Injector #2
81	925 (WH/YE)	Electronic Pressure Control (EPC) Solenoid	102	1141 (YE/BK)	NOT USED
82	1142 (WH/RD)	NOT USED	103	570 (BK/WH)	Ground
83	264 (WH/LB)	Idle Air Control (IAC) Valve	104	1026 (PK/WH)	Coil On Plug (COP) #2
84	136 (DB/YE)	Output Shaft Speed Sensor (OSS+)			
85	795 (DG)	Camshaft Position Sensor			
86	–	NOT USED			