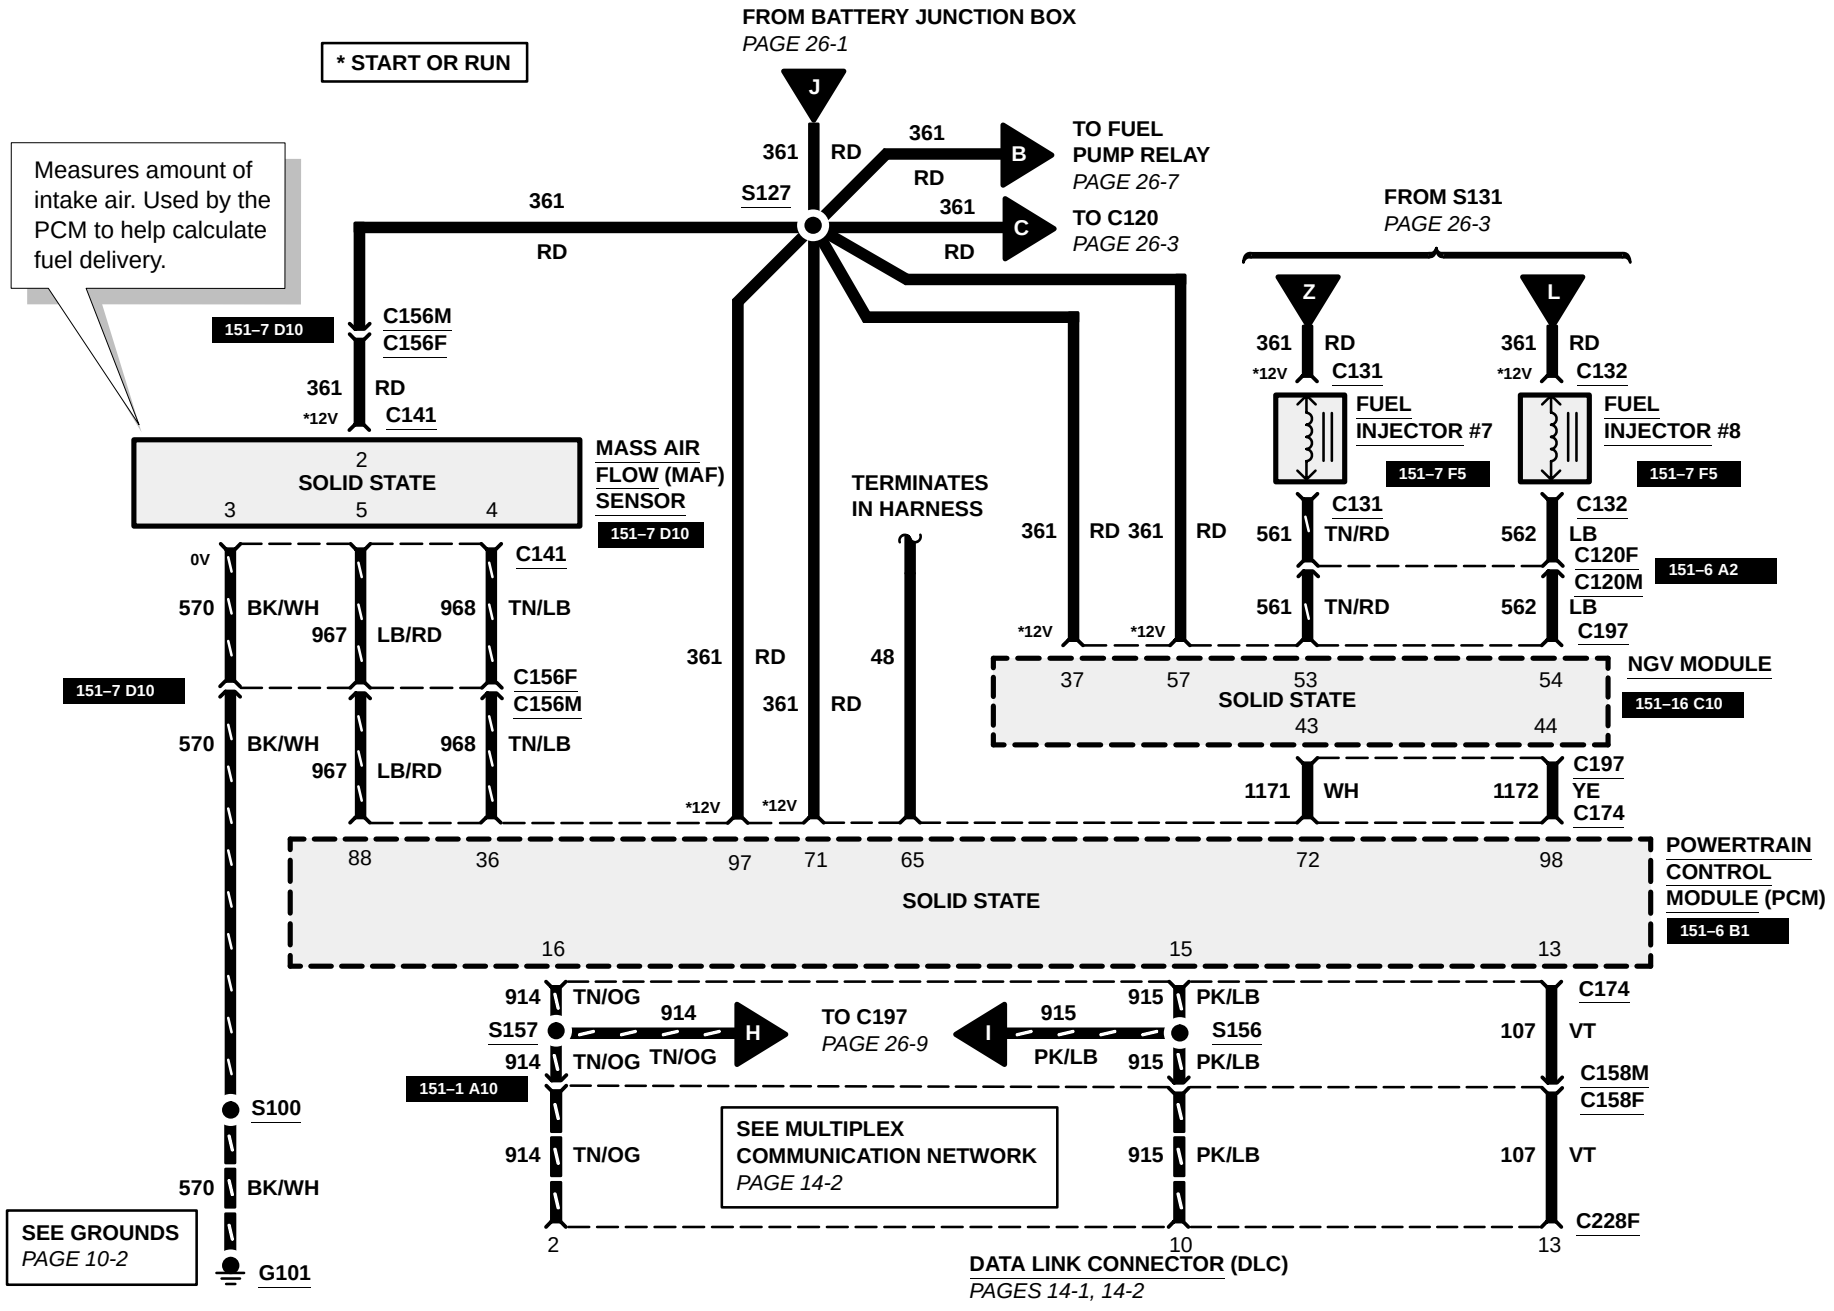
FROM BATTERY JUNCTION BOX
PAGE 26-1
* START OR RUN
J
361 RD
S127
361 RD
B
TO FUEL PUMP RELAY
PAGE 26-7
361 RD
C
TO C120
PAGE 26-3
FROM S131
PAGE 26-3
Measures amount of intake air. Used by the PCM to help calculate fuel delivery.
151–7 D10
C156M
C156F
361 RD
*12V
C141
2
SOLID STATE
3 5 4
MASS AIR FLOW (MAF) SENSOR
151–7 D10
TERMINATES IN HARNESS
48
Z
361 RD
*12V
C131
FUEL INJECTOR #7
151–7 F5
L
361 RD
*12V
C132
FUEL INJECTOR #8
151–7 F5
361 RD 361 RD
*12V *12V
561 TN/RD
562 LB
C131
C132
C120F
C120M
151–6 A2
561 TN/RD
562 LB
C197
NGV MODULE
151–16 C10
37 57 53 54
SOLID STATE
43 44
1171 WH 1172 YE
C197
C174
0V
570 BK/WH
967 LB/RD
968 TN/LB
C141
C156F
C156M
151–7 D10
570 BK/WH
967 LB/RD
968 TN/LB
361 RD
361 RD
*12V *12V
88 36 97 71 65 72 98
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–6 B1
16 15 13
914 TN/OG
S157
914 TN/OG
914 TN/OG
TN/OG
H
TO C197
PAGE 26-9
I
915 PK/LB
S156
915 PK/LB
915 PK/LB
PK/LB
C174
107 VT
C158M
C158F
107 VT
C228F
151–1 A10
S100
570 BK/WH
G101
SEE GROUNDS
PAGE 10-2
914 TN/OG
915 PK/LB
SEE MULTIPLEX COMMUNICATION NETWORK
PAGE 14-2
2 10 13
DATA LINK CONNECTOR (DLC)
PAGES 14-1, 14-2