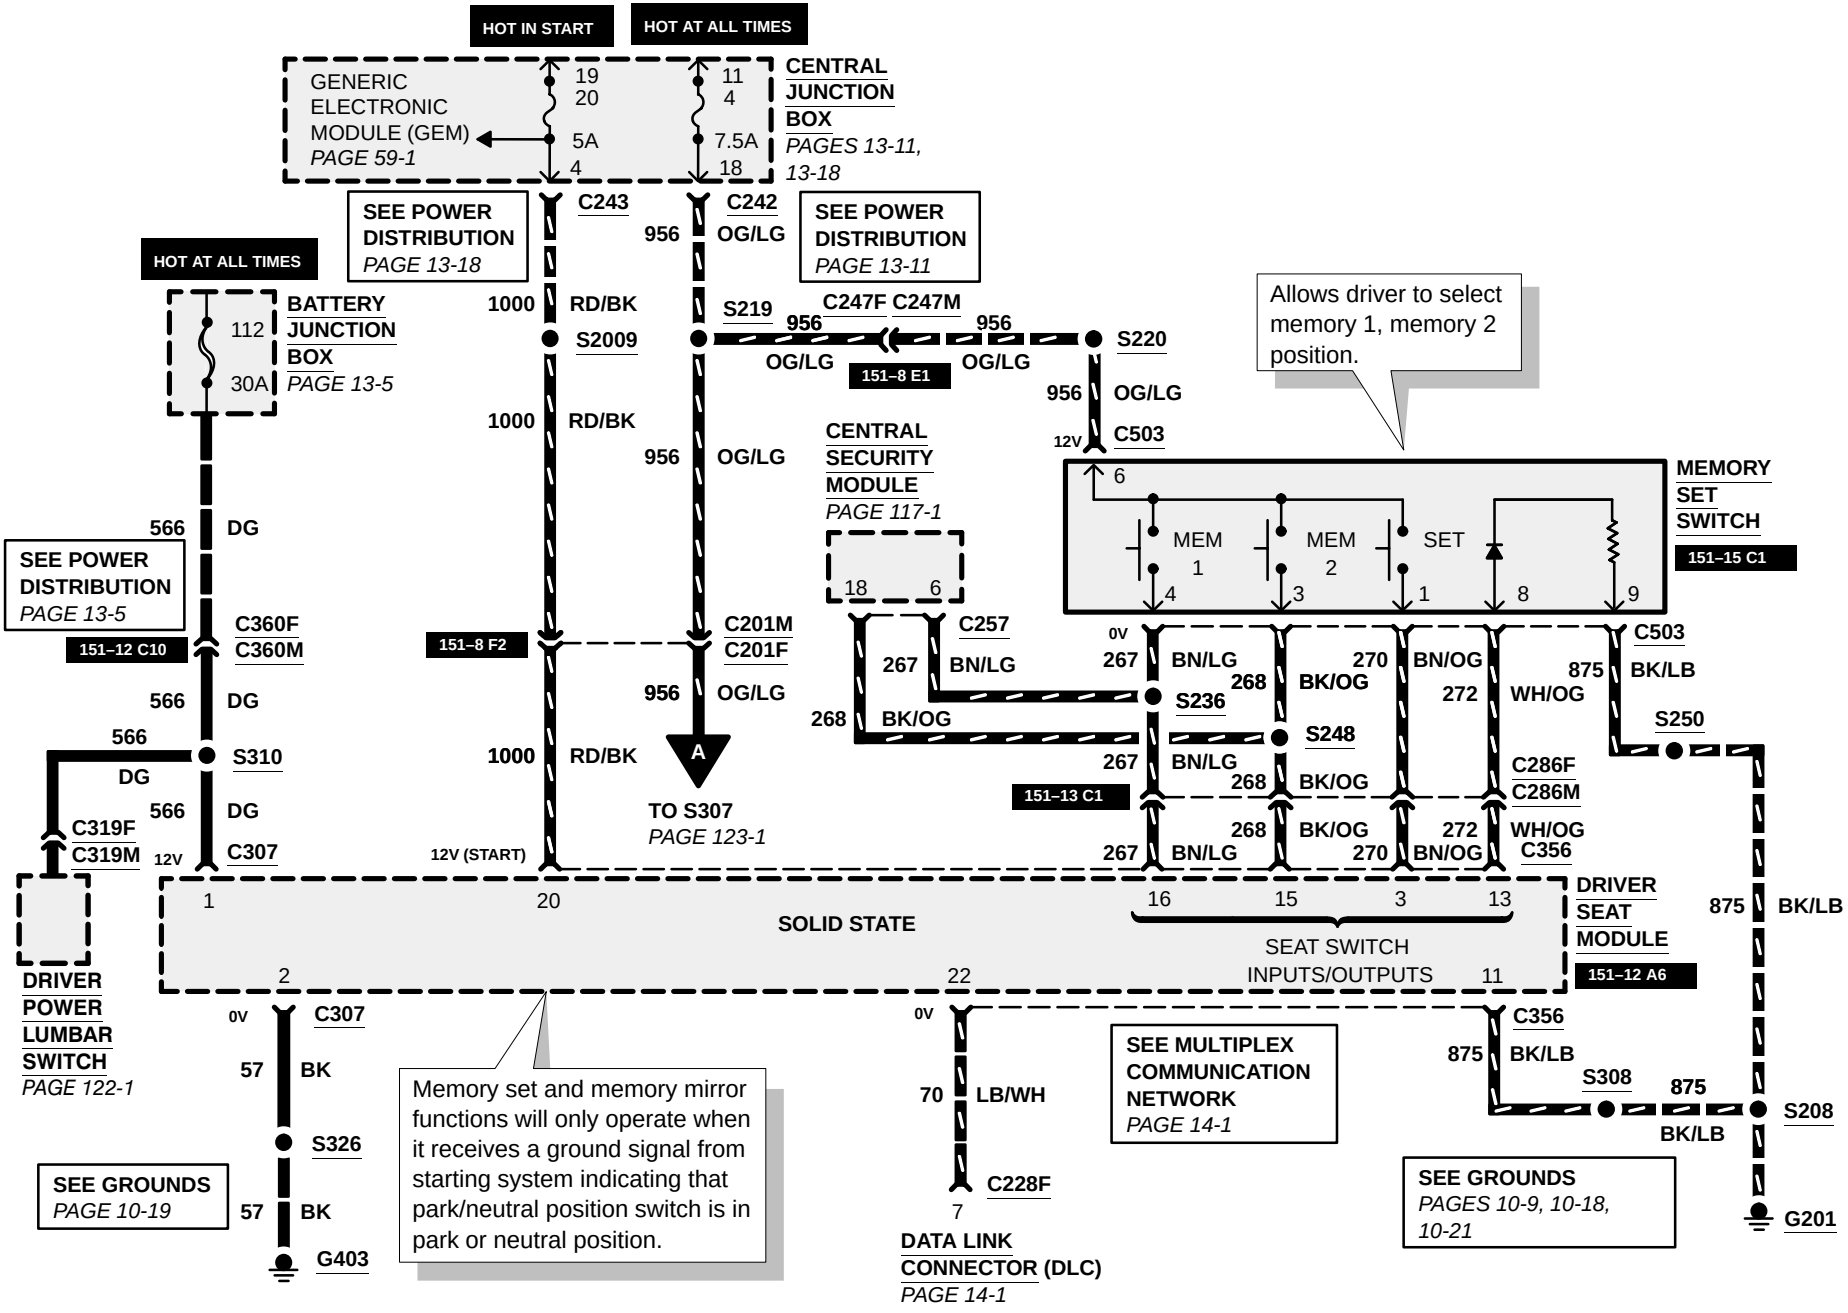
HOT IN START
HOT AT ALL TIMES
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-1
19
20
5A
4
11
4
7.5A
18
CENTRAL JUNCTION BOX
PAGES 13-11, 13-18
SEE POWER DISTRIBUTION
PAGE 13-18
SEE POWER DISTRIBUTION
PAGE 13-11
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-5
112
30A
C243
C242
956
OG/LG
1000
RD/BK
S2009
S219
C247F C247M
956
OG/LG
956
OG/LG
151–8 E1
S220
956
OG/LG
12V
C503
Allows driver to select memory 1, memory 2 position.
MEMORY SET SWITCH
151–15 C1
6
MEM 1
MEM 2
SET
4
3
1
8
9
CENTRAL SECURITY MODULE
PAGE 117-1
18
6
C257
267
BN/LG
268
BK/OG
S236
S248
267
BN/LG
268
BK/OG
151–13 C1
0V
267
BN/LG
270
BK/OG
268
BK/OG
272
BN/OG
875
WH/OG
C503
875
BK/LB
S250
C286F
C286M
C356
WH/OG
566
DG
SEE POWER DISTRIBUTION
PAGE 13-5
151–12 C10
C360F
C360M
566
DG
566
DG
S310
566
DG
C319F
C319M
12V
C307
151–8 F2
C201M
C201F
956
OG/LG
1000
RD/BK
A
TO S307
PAGE 123-1
12V (START)
1
20
SOLID STATE
16
15
3
13
SEAT SWITCH INPUTS/OUTPUTS
DRIVER SEAT MODULE
151–12 A6
875
BK/LB
DRIVER POWER LUMBAR SWITCH
PAGE 122-1
2
22
11
0V
C307
57
BK
S326
57
BK
G403
SEE GROUNDS
PAGE 10-19
Memory set and memory mirror functions will only operate when it receives a ground signal from starting system indicating that park/neutral position switch is in park or neutral position.
0V
70
LB/WH
C228F
7
DATA LINK CONNECTOR (DLC)
PAGE 14-1
SEE MULTIPLEX COMMUNICATION NETWORK
PAGE 14-1
C356
875
BK/LB
S308
875
BK/LB
S208
G201
SEE GROUNDS
PAGES 10-9, 10-18, 10-21