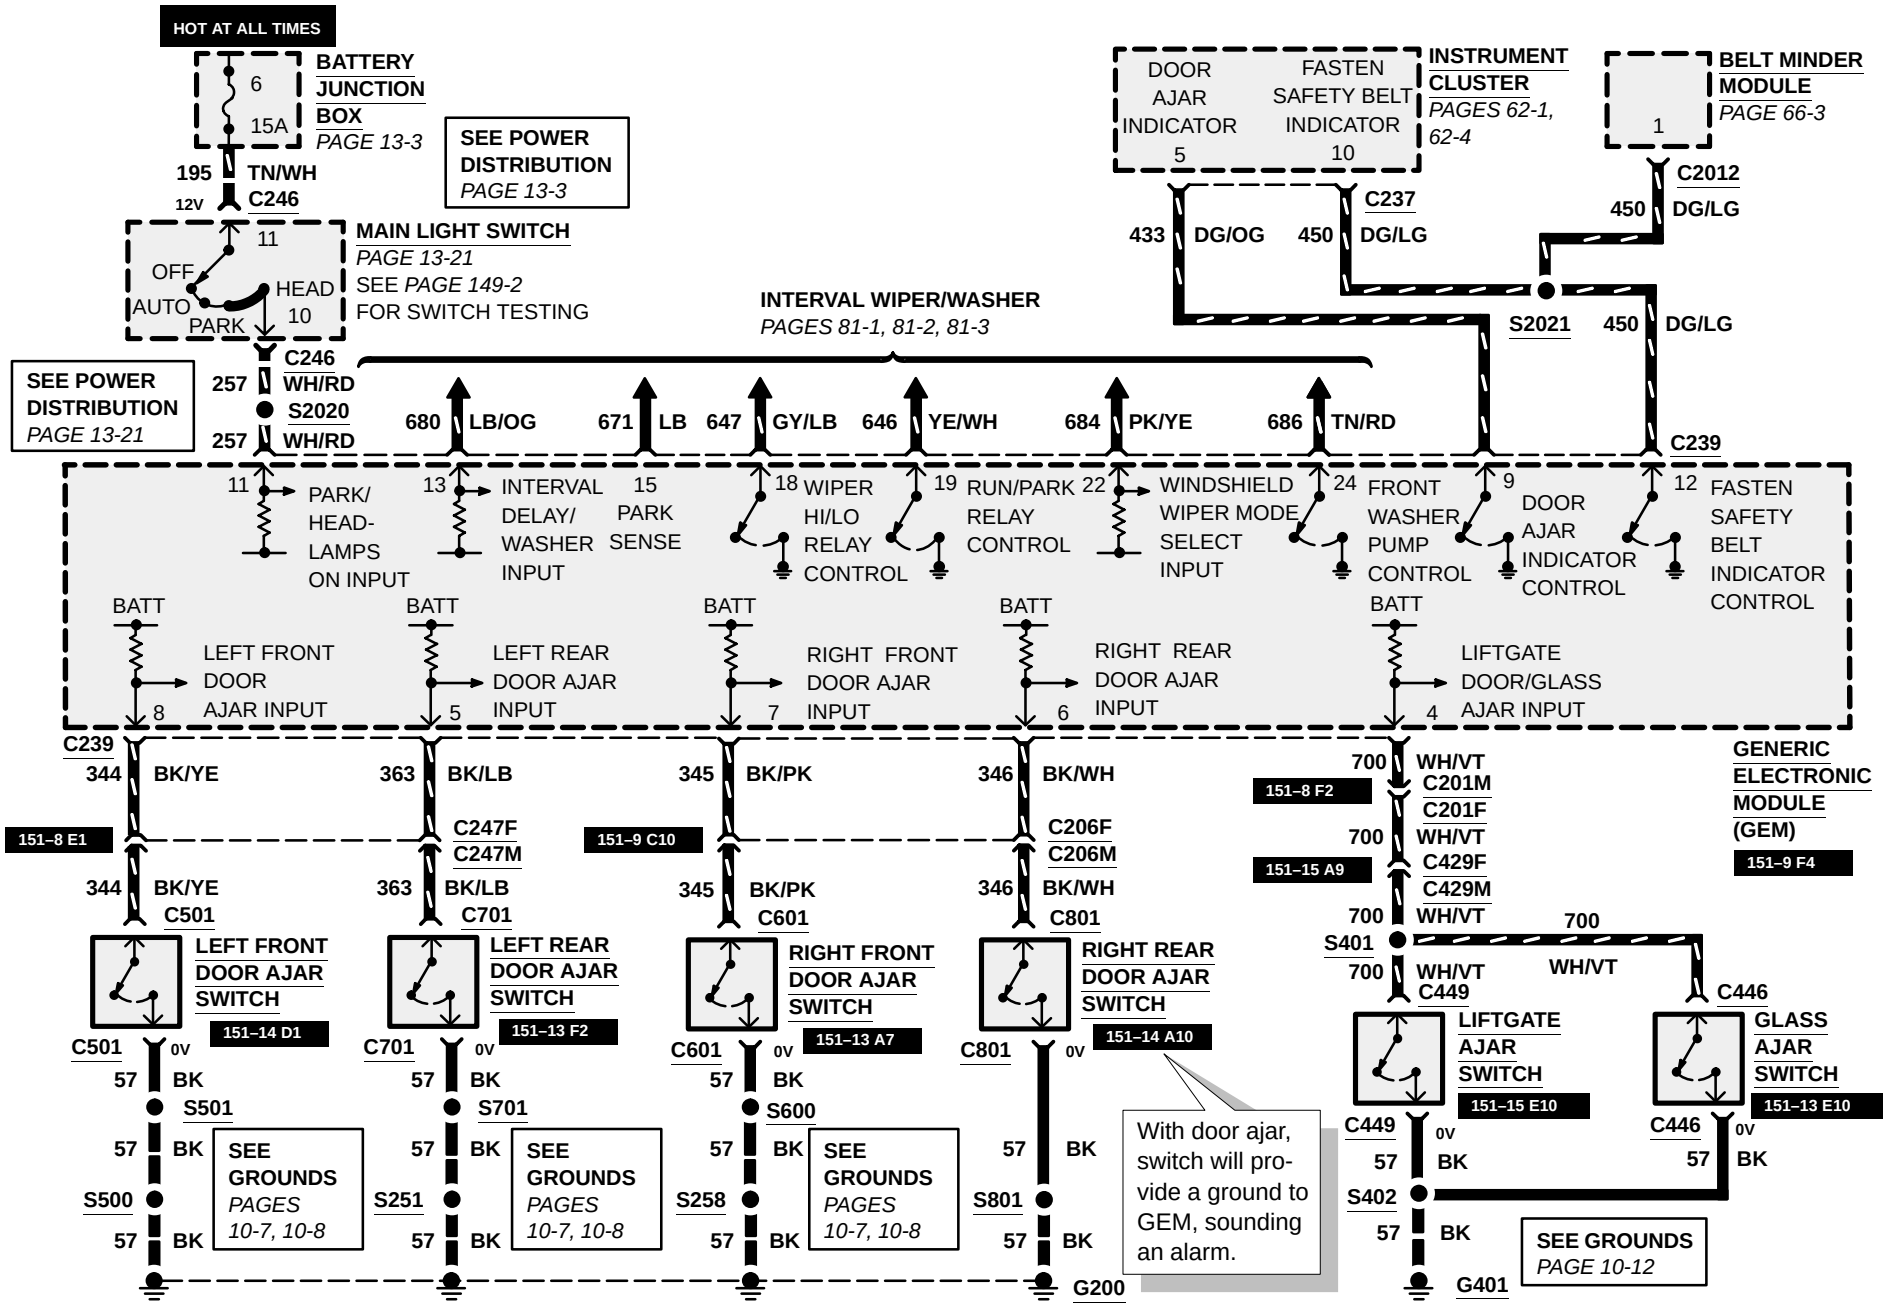
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-3
6
15A
195 TN/WH
12V
C246
SEE POWER DISTRIBUTION
PAGE 13-3
MAIN LIGHT SWITCH
PAGE 13-21
SEE PAGE 149-2 FOR SWITCH TESTING
OFF
AUTO
PARK
HEAD
11
10
SEE POWER DISTRIBUTION
PAGE 13-21
C246
257 WH/RD
S2020
257 WH/RD
INTERVAL WIPER/WASHER
PAGES 81-1, 81-2, 81-3
680 LB/OG
671 LB
647 GY/LB
646 YE/WH
684 PK/YE
686 TN/RD
DOOR AJAR INDICATOR
5
FASTEN SAFETY BELT INDICATOR
10
INSTRUMENT CLUSTER
PAGES 62-1, 62-4
433 DG/OG
C237
450 DG/LG
BELT MINDER MODULE
PAGE 66-3
1
C2012
450 DG/LG
S2021
450 DG/LG
C239
11 PARK/ HEAD-LAMPS ON INPUT
13 INTERVAL DELAY/ WASHER INPUT
15 PARK SENSE
18 WIPER HI/LO RELAY CONTROL
19 RUN/PARK RELAY CONTROL
22 WINDSHIELD WIPER MODE SELECT INPUT
24 FRONT WASHER PUMP CONTROL
9 DOOR AJAR INDICATOR CONTROL
12 FASTEN SAFETY BELT INDICATOR CONTROL
BATT
8 LEFT FRONT DOOR AJAR INPUT
5 LEFT REAR DOOR AJAR INPUT
7 RIGHT FRONT DOOR AJAR INPUT
6 RIGHT REAR DOOR AJAR INPUT
4 LIFTGATE DOOR/GLASS AJAR INPUT
C239
344 BK/YE
151–8 E1
363 BK/LB
C247F
C247M
151–9 C10
345 BK/PK
346 BK/WH
C206F
C206M
700 WH/VT
151–8 F2
C201M
C201F
700 WH/VT
151–15 A9
C429F
C429M
700 WH/VT
GENERIC ELECTRONIC MODULE (GEM)
151–9 F4
344 BK/YE
C501
363 BK/LB
C701
345 BK/PK
C601
346 BK/WH
C801
S401
700 WH/VT
C449
700 WH/VT
C446
LEFT FRONT DOOR AJAR SWITCH
151–14 D1
LEFT REAR DOOR AJAR SWITCH
151–13 F2
RIGHT FRONT DOOR AJAR SWITCH
151–13 A7
RIGHT REAR DOOR AJAR SWITCH
151–14 A10
LIFTGATE AJAR SWITCH
151–15 E10
GLASS AJAR SWITCH
151–13 E10
C501 0V
57 BK
S501
57 BK
S500
57 BK
C701 0V
57 BK
S701
57 BK
S251
57 BK
C601 0V
57 BK
S600
57 BK
S258
57 BK
C801 0V
57 BK
S801
57 BK
G200
SEE GROUNDS PAGES 10-7, 10-8
SEE GROUNDS PAGES 10-7, 10-8
SEE GROUNDS PAGES 10-7, 10-8
With door ajar, switch will provide a ground to GEM, sounding an alarm.
C449 0V
57 BK
C446 0V
57 BK
S402
57 BK
G401
SEE GROUNDS
PAGE 10-12