## C21 (YE)

**14K024**

P140
Air bag sliding contact (14A664)

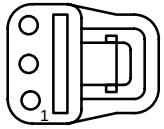

F03035

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 15S-JA8 (GN/RD) | Voltage, ignition switch in Start or Run (not overload protected), Switched |
| 2 | – | not used |
| 3 | 91S-JA8 (BK/OG) | Ground, Switched |

## C22 (BN)

**14K024**

A43
Passenger air bag module (15044A74)

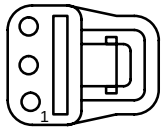

F03035

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 15S-JA11 (GN/WH) | Voltage, ignition switch in Start or Run (not overload protected), Switched |
| 2 | – | not used |
| 3 | 91S-JA11 (BK/WH) | Ground, Switched |

## C23

A38
Central Timer Module (CTM)

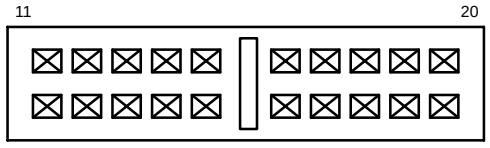

F20004

## C50

**14K733**

K4
Fuel pump relay

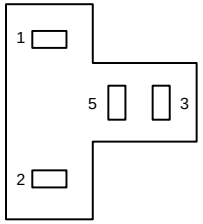

F04018

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 15-RN2 (GN/BU) | Voltage, ignition switch in Start or Run (not overload protected) |
| 2 | 91S-RH6 (BK/OG) | Ground, Switched |
| 3 | 30-RP3 (RD) | Voltage supplied at all times (not overload protected) |
| 5 | 15S-RP3 (GN/OG) | Voltage, ignition switch in Start or Run (not overload protected), Switched |