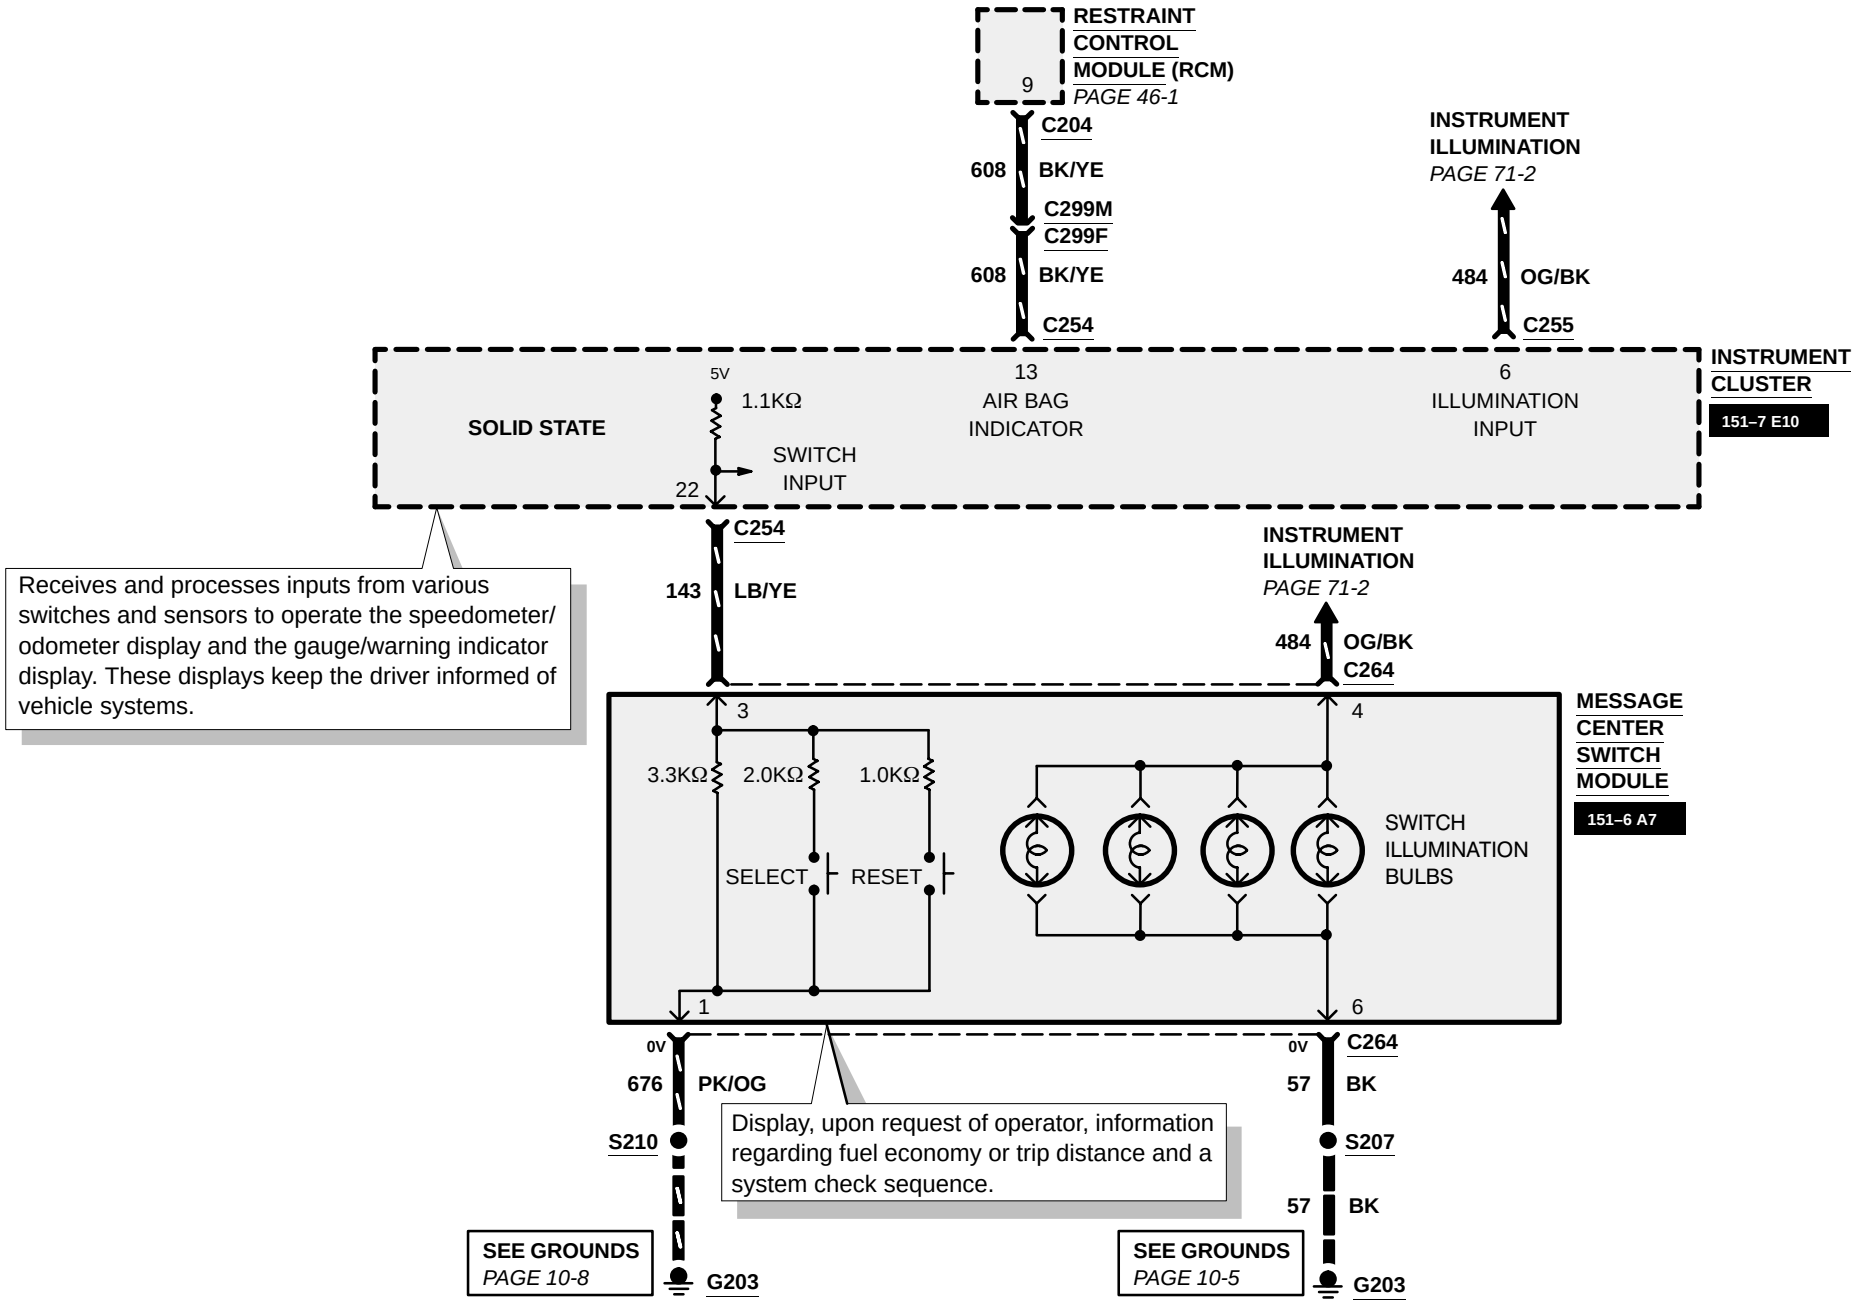
RESTRAINT CONTROL MODULE (RCM)
PAGE 46-1
9
C204
608 BK/YE
C299M
C299F
608 BK/YE
C254
INSTRUMENT ILLUMINATION
PAGE 71-2
484 OG/BK
C255
INSTRUMENT CLUSTER
151–7 E10
SOLID STATE
5V
1.1KΩ
SWITCH INPUT
22
13
AIR BAG INDICATOR
6
ILLUMINATION INPUT
Receives and processes inputs from various switches and sensors to operate the speedometer/ odometer display and the gauge/warning indicator display. These displays keep the driver informed of vehicle systems.
C254
143 LB/YE
INSTRUMENT ILLUMINATION
PAGE 71-2
484 OG/BK
C264
MESSAGE CENTER SWITCH MODULE
151–6 A7
3
4
3.3KΩ
2.0KΩ
1.0KΩ
SELECT
RESET
SWITCH ILLUMINATION BULBS
1
6
0V
676 PK/OG
S210
SEE GROUNDS
PAGE 10-8
G203
Display, upon request of operator, information regarding fuel economy or trip distance and a system check sequence.
0V
C264
57 BK
S207
57 BK
SEE GROUNDS
PAGE 10-5
G203