C310a (BK)

14A005

Restraints control module (14B321)

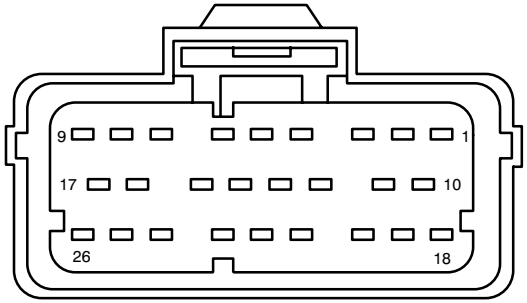

F26023

Pin	Circuit	Circuit function
1	1556 (DG/VT)	Restraints control module (14B321), signal
2	1557 (DB/OG)	Restraints control module (14B321), signal
3	1079 (LG/RD)	Driver safety belt retractor pretensioner, return
4	1080 (LG/BK)	Driver safety belt retractor pretensioner, feed
5	85 (BN/LB)	Safety belt buckle switch, driver, feed
6	1081 (YE/RD)	Passenger safety belt retractor pretensioner, feed
7	1082 (YE/BK)	Passenger safety belt retractor pretensioner, return
8	1520 (LG)	Seat track position sensor, left, feed
9	1558 (TN/BK)	Seat track position sensor, left, return
10	1514 (RD/BK)	Safety belt buckle switch, passenger, feed
11	1516 (YE/WH)	Driver air bag, feed #2
12	1517 (RD/OG)	Driver air bag, return #2
13	1261 (WH/LG)	Side air bag sensor, left (14B345), feed
14	1262 (BN/LG)	Side air bag sensor, left (14B345), return
15	1257 (WH/LB)	Side air bag module, left, feed
16	1258 (RD)	Side air bag module, left, return
17	1263 (WH)	Side air bag sensor, right (14B345), feed
18	1264 (BN)	Side air bag sensor, right (14B345), return
19	–	not used
20	1518 (RD/WH)	Passenger air bag, return #2
21	1519 (LG/RD)	Passenger air bag, feed #2
22	–	not used
23	1259 (WH/YE)	Side air bag module, right, return
24	1260 (BN/YE)	Side air bag module, right, feed
25	617 (PK/OG)	Forward crash sensor, feed
26	618 (VT/LG)	Forward crash sensor, return

C310b (BK)

14A005

Restraints control module (14B321)

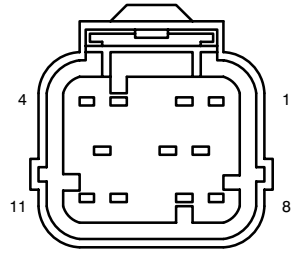

F11018

Pin	Circuit	Circuit function
1	964 (DB/LG)	Voltage supplied in Start and Run (overload protected)
2	615 (GY/WH)	Driver air bag, return #1
3	614 (GY/OG)	Driver air bag, feed #1
4	70 (LB/WH)	ISO Bus
5	616 (PK/BK)	Passenger air bag, feed #1 switch
6	607 (LB/OG)	Passenger air bag, return #1 switch
7	–	not used
8	57 (BK)	Ground
9	608 (BK/YE)	Air bag indicator Warning Lamp, control
10	57 (BK)	Ground
11	1083 (LB/BK)	Air bag tone driver signal