## C361 (GY)

**14A699**

Lumbar adjust switch, left front (14B691)

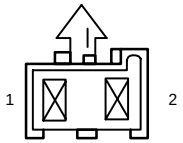


F02478

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 490 (RD) | Front seat lumbar compressor motor, switched power |
| 2 | 566 (DG) | Voltage supplied at all times (overload protected) |

* without memory

## C362 (BK)

**14A699**

Driver seat horizontal motor

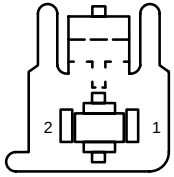


F02474

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | *981 (RD/WH) | Seat forward/rearward circuit +/– |
| | 1472 (YE/WH) | Seat forward/rearward circuit +/– |
| 2 | *980 (YE/WH) | Seat forward/rearward circuit +/– |
| | 1471 (RD/WH) | Seat forward/rearward circuit +/– |

* without memory

## C363 (RD)

**14A699**

Driver seat rear height motor

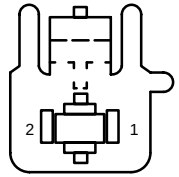


F02480

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | *983 (RD/LG) | Rear height circuit +/– |
| | 1474 (RD/LG) | Rear height circuit +/– |
| 2 | *982 (YE/LG) | Rear height circuit +/– |
| | 1473 (YE/LG) | Rear height circuit +/– |

## C364 (BK)

**14A699**

Seat cushion heater, left front

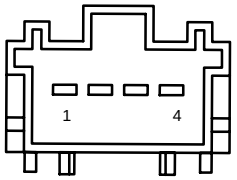


F04287

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1064 (YE/LB) | Seat cushion heater, driver side, heater, feed |
| 2 | 1060 (BK/LB) | Seat cushion heater, driver side, Sensor, feed |
| 3 | 1061 (BN/LB) | Seat cushion heater, driver side, Sensor, return |
| 4 | 1066 (GY/LB) | Seat back heater, driver side, feed |