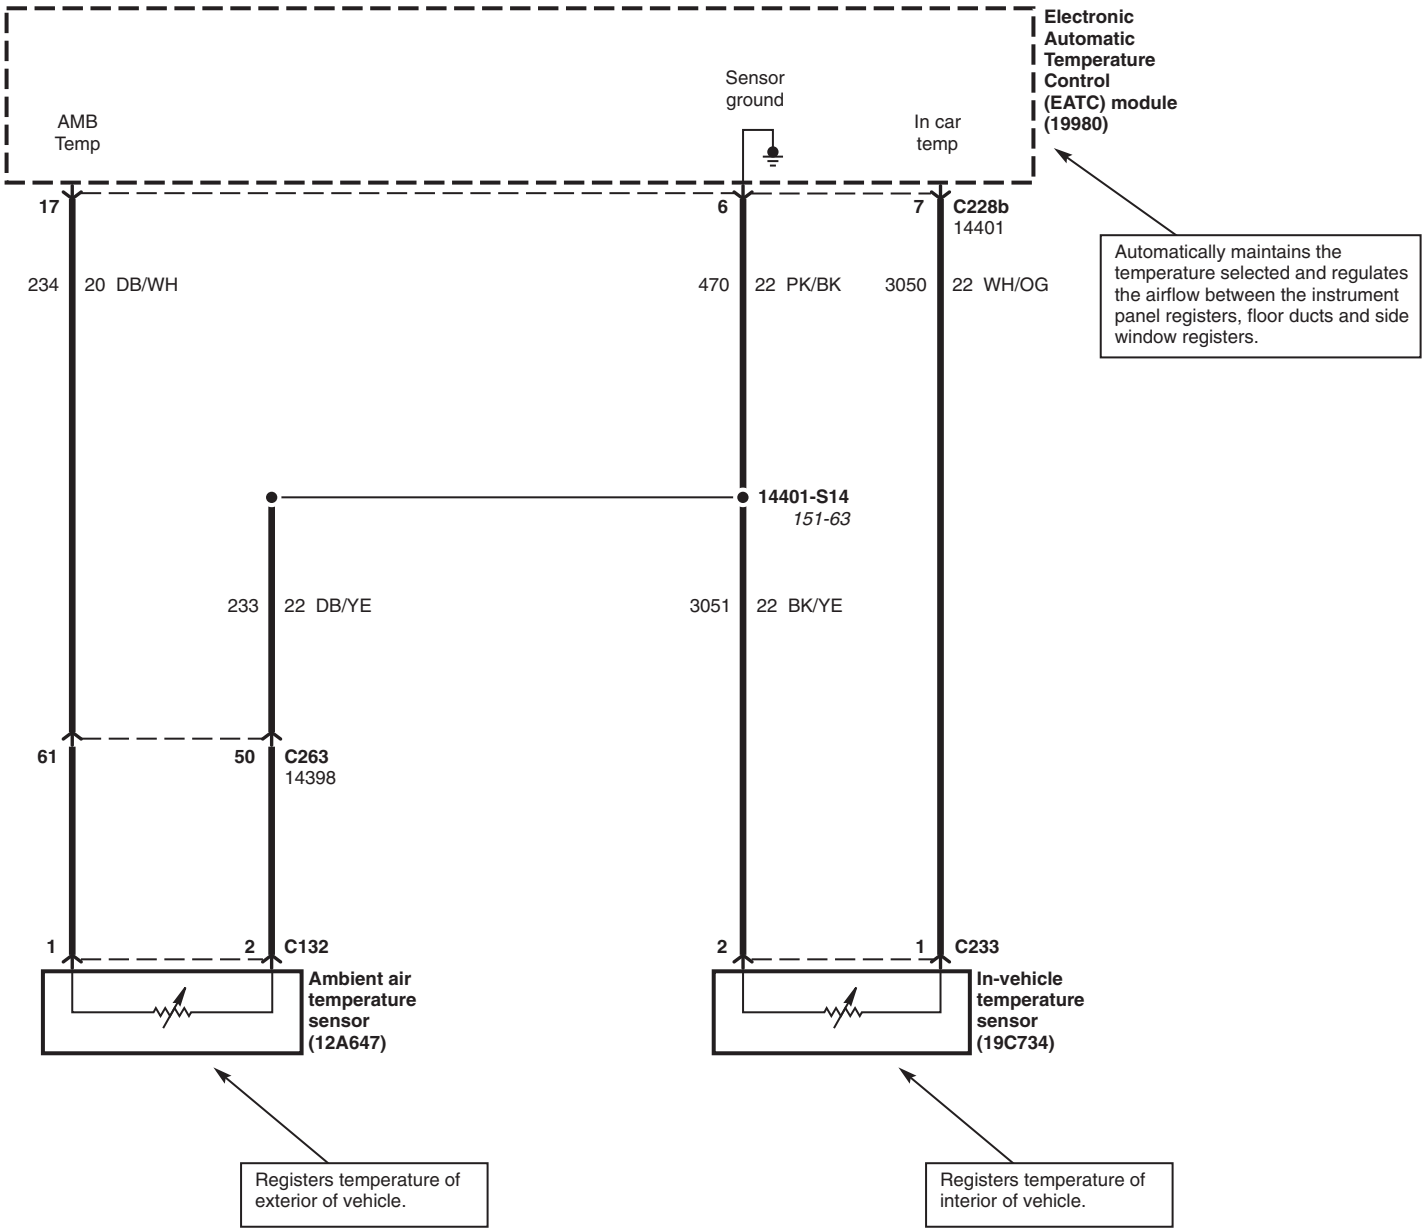
Electronic Automatic Temperature Control (EATC) module (19980)
AMB Temp
Sensor ground
In car temp
17
6
7
C228b
14401
234 20 DB/WH
470 22 PK/BK
3050 22 WH/OG
Automatically maintains the temperature selected and regulates the airflow between the instrument panel registers, floor ducts and side window registers.
14401-S14
151-63
233 22 DB/YE
3051 22 BK/YE
61
50
C263
14398
1
2
C132
Ambient air temperature sensor (12A647)
2
1
C233
In-vehicle temperature sensor (19C734)
Registers temperature of exterior of vehicle.
Registers temperature of interior of vehicle.