## C1289

### A3–288

A238
Low flow injector assembly

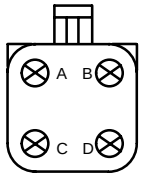


F04072

| Pin | Circuit | Circuit function |
|---|---|---|
| A | G017 (WH) | Low flow injector 1, control |
| B | G019 (WH) | Low flow injector 2, control |
| C | G001 (WH) | Coolant solenoid, signal |
| D | G074 (WH) | Voltage supplied in Start and Run (overload protected) |

## C1290

### 14B110

Y274
4x2 center axle disconnect solenoid

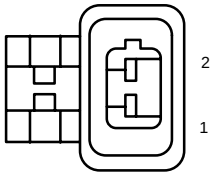


F02117

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 145 (GY/BK) | 4x2 center axle disconnect solenoid, control |
| 2 | 294 (WH/LB) | Voltage in Run (overload protected) |

## C1291

### 14B110

Y275
4x4 center axle disconnect solenoid

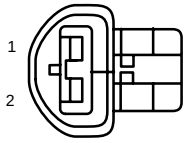


F02115

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 605 (RD) | 4x4 center axle disconnect solenoid, control |
| 2 | 294 (WH/LB) | Voltage in Run (overload protected) |

## C1292

### 12B637

Y273
Supercharger bypass solenoid

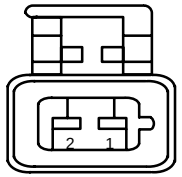


F02379

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 965 (LG/VT) | Supercharger bypass solenoid, control |
| 2 | 391 (RD/YE) | Voltage supplied in Start and Run (overload protected) |

## C1293

K312
Bi–Fuel power relay

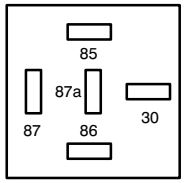


F05051