C126 (BK)

14290

ABS test connector

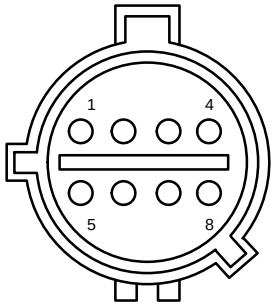

F08052

Pin	Circuit	Circuit function
1	601 (LB/PK)	Voltage supplied in Start and Run (overload protected)
2	57 (BK)	Ground
3	57 (BK)	Ground
4	–	not used
5	677 (LB)	Voltage supplied in Start and Run (overload protected)
6	534 (YE/LG)	Voltage supplied at all times (overload protected)
7	483 (RD)	Voltage supplied at all times (overload protected)
8	70 (LB/WH)	ISO Bus

C127 (BK)

14290

Anti–theft hood switch (19A434)

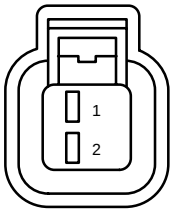

F02069

Pin	Circuit	Circuit function
1	1304 (VT/OG)	Anti–theft hood switch (19A434), signal
2	571 (BK/OG)	Ground

C128 (BK)

12A522

Mass Air Flow (MAF) sensor (12B579)

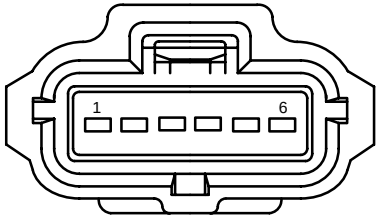

F06077

Pin	Circuit	Circuit function
1	89 (OG)	signal, return
2	100 (WH/RD)	PCM power relay, output
3	57 (BK)	Ground
4	968 (TN/LB)	Mass Air Flow (MAF) sensor (12B579), signal, return
5	967 (LB/RD)	Mass Air Flow (MAF) sensor (12B579), output
6	470 (PK/BK)	Sensor signal return (reference/ground)

C130 (BK/BN)

14290

A/C clutch cycling pressure switch (19D594)

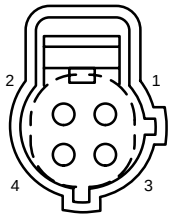

F04253

Pin	Circuit	Circuit function
1	348 (VT)	A/C demand signal
2	–	not used
3	–	not used
4	441 (RD/YE)	A/C pressure switch, to A/C cycling switch