COUPE

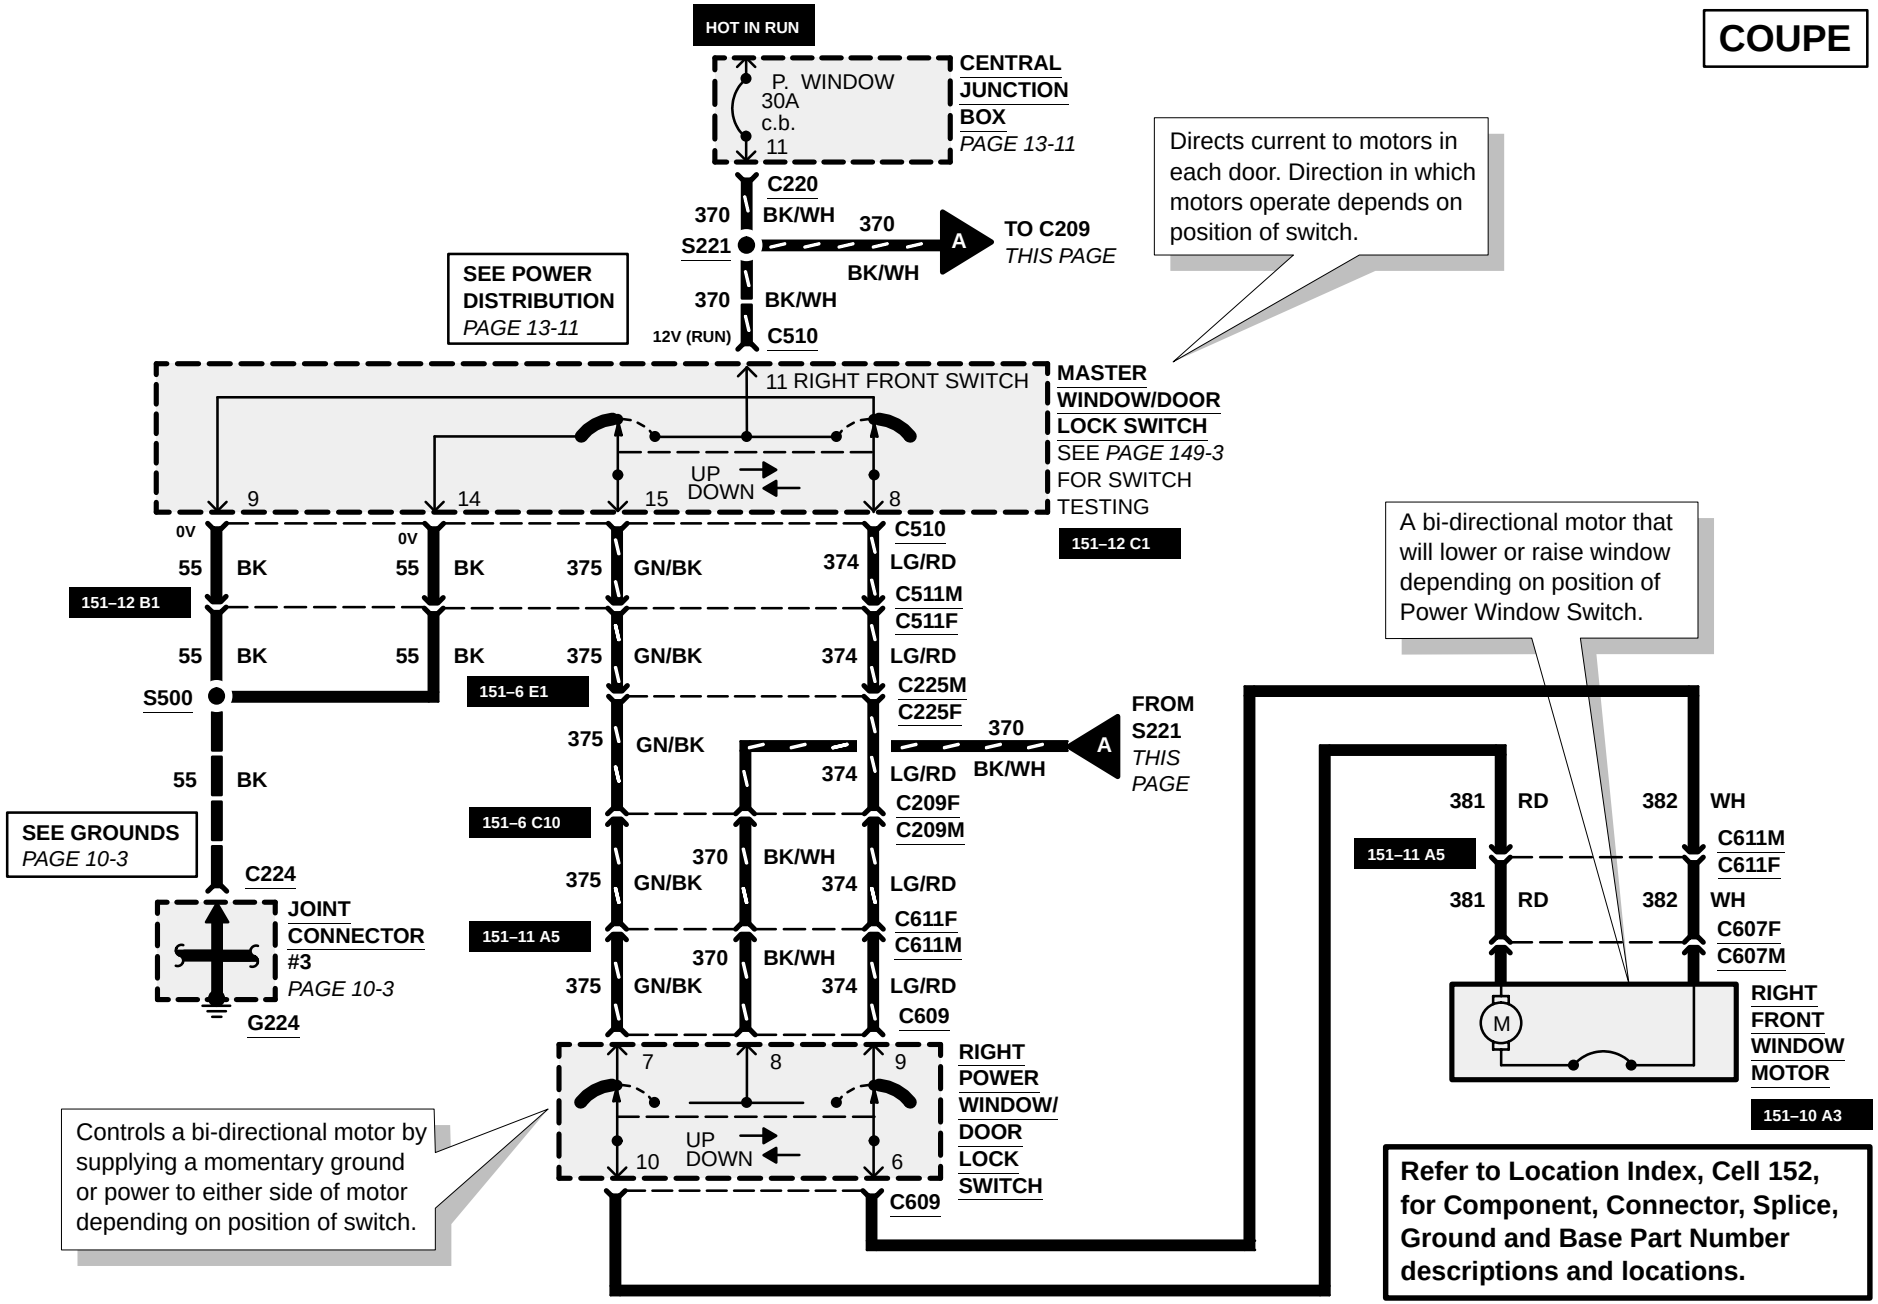
HOT IN RUN
P. WINDOW 30A c.b. 11
CENTRAL JUNCTION BOX
PAGE 13-11
C220
370 BK/WH
S221
370 BK/WH
A
TO C209
THIS PAGE
370 BK/WH
12V (RUN)
C510
SEE POWER DISTRIBUTION
PAGE 13-11
Directs current to motors in each door. Direction in which motors operate depends on position of switch.
11 RIGHT FRONT SWITCH
MASTER WINDOW/DOOR LOCK SWITCH
SEE PAGE 149-3 FOR SWITCH TESTING
151–12 C1
UP
DOWN
9
14
15
8
0V
55 BK
151–12 B1
375 GN/BK
374 LG/RD
C510
C511M
C511F
C225M
C225F
S500
151–6 E1
FROM S221 THIS PAGE
SEE GROUNDS
PAGE 10-3
C224
JOINT CONNECTOR #3
PAGE 10-3
G224
151–6 C10
C209F
C209M
151–11 A5
C611F
C611M
C609
RIGHT POWER WINDOW/ DOOR LOCK SWITCH
7
8
9
10
6
Controls a bi-directional motor by supplying a momentary ground or power to either side of motor depending on position of switch.
A bi-directional motor that will lower or raise window depending on position of Power Window Switch.
381 RD
382 WH
C611M
C611F
C607F
C607M
M
RIGHT FRONT WINDOW MOTOR
151–10 A3
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.