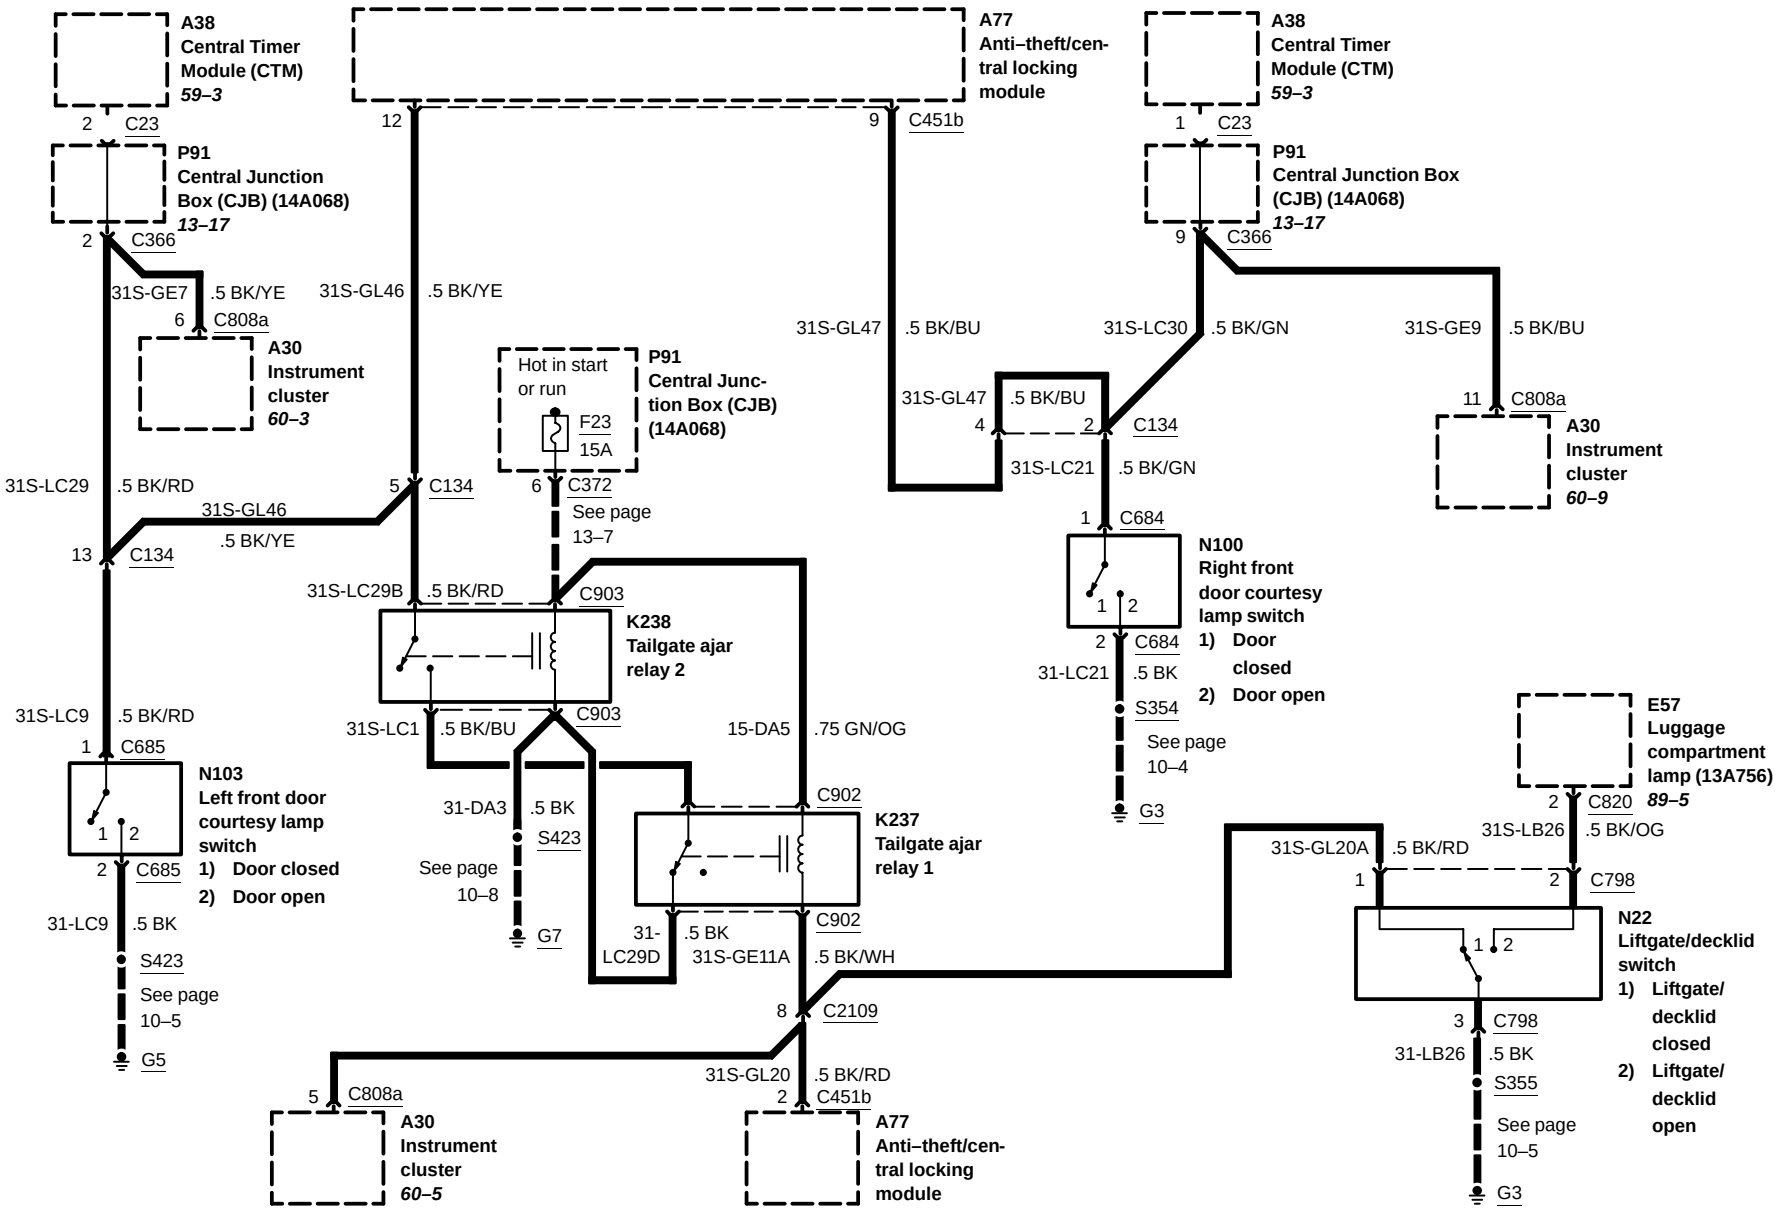
A38
Central Timer
Module (CTM)
59–3
2 C23
P91
Central Junction
Box (CJB) (14A068)
13–17
2 C366
31S-GE7 .5 BK/YE
6 C808a
A30
Instrument
cluster
60–3
A77
Anti–theft/cen-
tral locking
module
12
9 C451b
31S-GL46 .5 BK/YE
Hot in start
or run
F23
15A
P91
Central Junc-
tion Box (CJB)
(14A068)
6 C372
See page
13–7
31S-LC29 .5 BK/RD
5 C134
31S-GL46
.5 BK/YE
13 C134
31S-LC29B .5 BK/RD
C903
K238
Tailgate ajar
relay 2
31S-LC9 .5 BK/RD
1 C685
N103
Left front door
courtesy lamp
switch
1) Door closed
2) Door open
2 C685
31-LC9 .5 BK
S423
See page
10–5
G5
31S-LC1 .5 BK/BU
C903
31-DA3 .5 BK
S423
See page
10–8
G7
15-DA5 .75 GN/OG
C902
K237
Tailgate ajar
relay 1
31-
LC29D
.5 BK
C902
31S-GE11A .5 BK/WH
8 C2109
5 C808a
A30
Instrument
cluster
60–5
31S-GL20 .5 BK/RD
2 C451b
A77
Anti–theft/cen-
tral locking
module
A38
Central Timer
Module (CTM)
59–3
1 C23
P91
Central Junction Box
(CJB) (14A068)
13–17
9 C366
31S-GL47 .5 BK/BU
31S-LC30 .5 BK/GN
31S-GE9 .5 BK/BU
31S-GL47 .5 BK/BU
4 2 C134
31S-LC21 .5 BK/GN
11 C808a
A30
Instrument
cluster
60–9
1 C684
N100
Right front
door courtesy
lamp switch
1) Door
closed
2) Door open
2 C684
31-LC21 .5 BK
S354
See page
10–4
G3
E57
Luggage
compartment
lamp (13A756)
89–5
2 C820
31S-LB26 .5 BK/OG
31S-GL20A .5 BK/RD
1 2 C798
N22
Liftgate/decklid
switch
1) Liftgate/
decklid
closed
2) Liftgate/
decklid
open
3 C798
31-LB26 .5 BK
S355
See page
10–5
G3