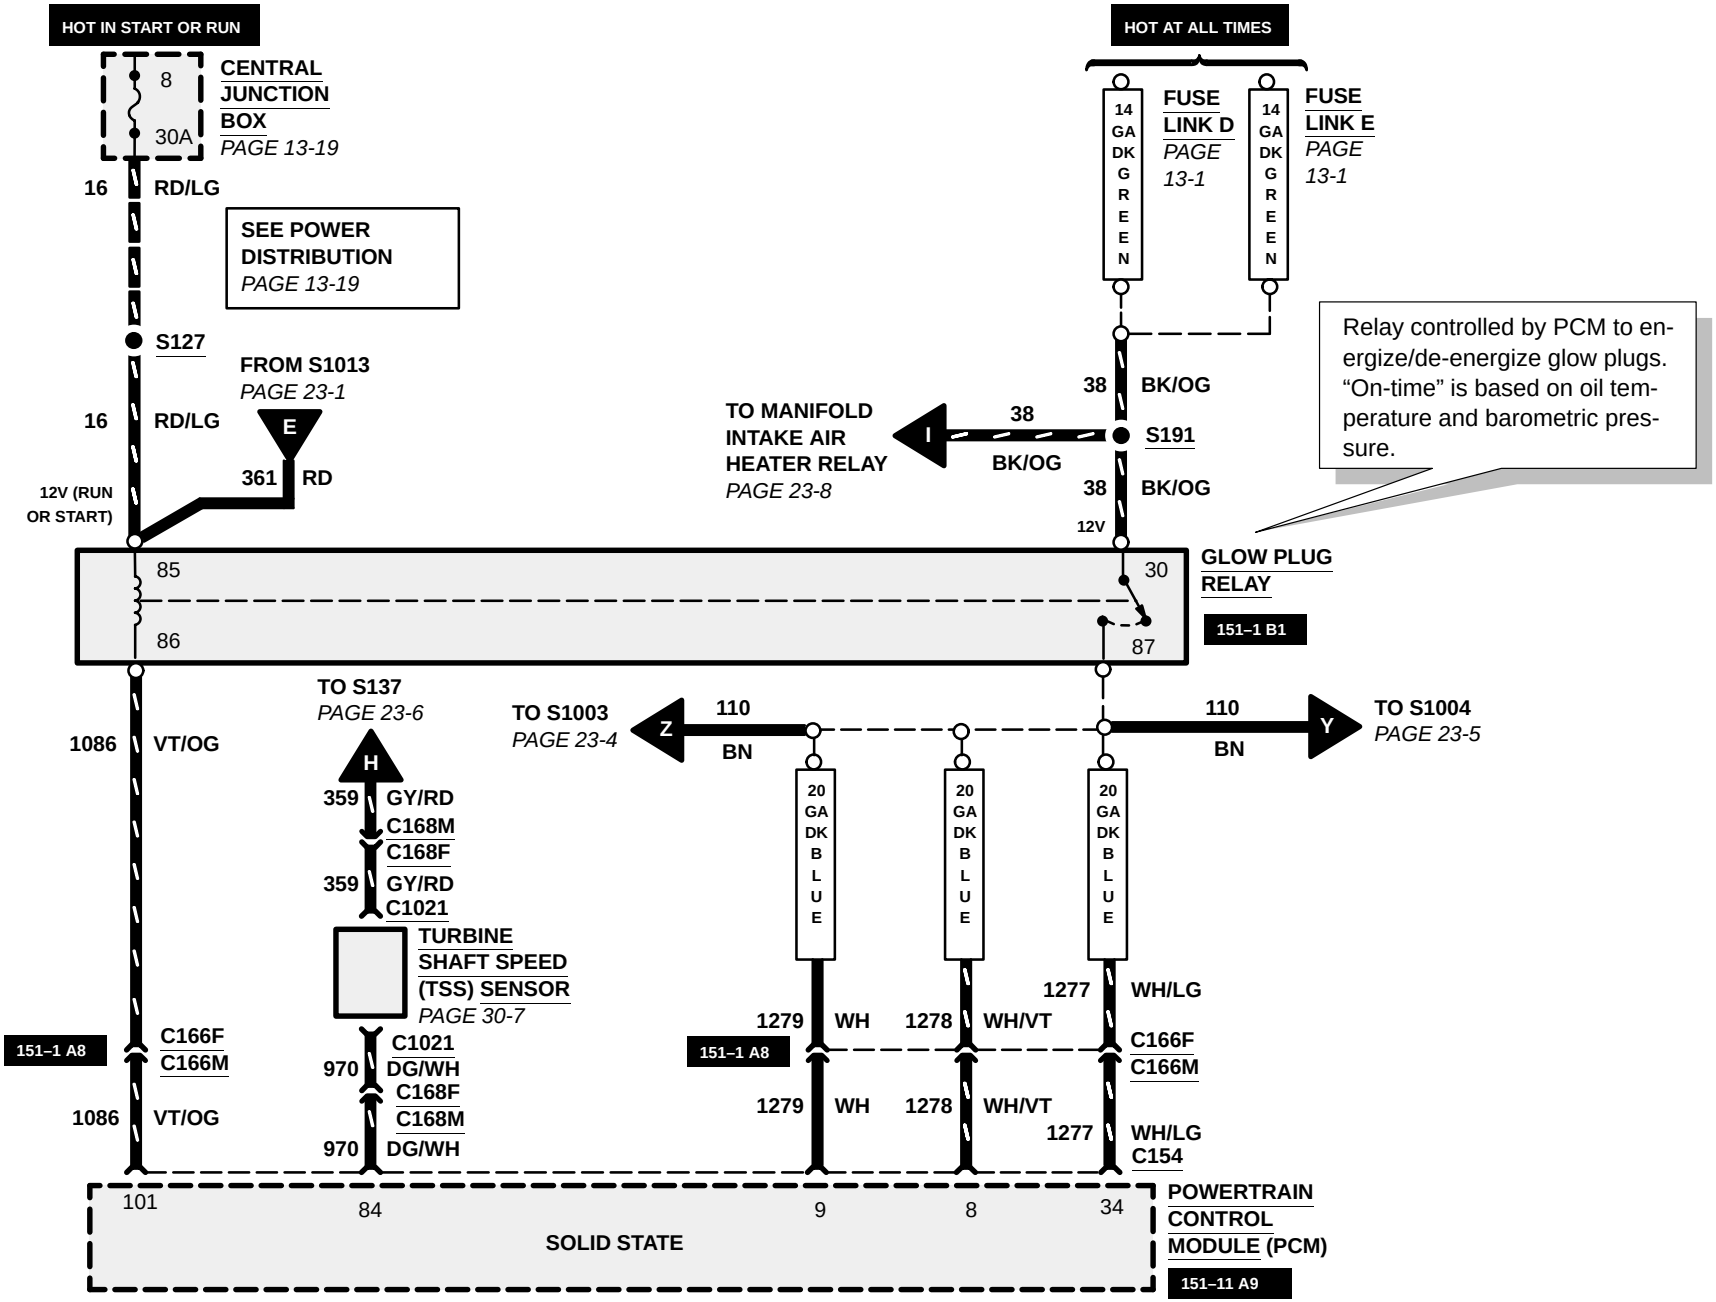
HOT IN START OR RUN
HOT AT ALL TIMES
8
30A
CENTRAL JUNCTION BOX
PAGE 13-19
16 RD/LG
SEE POWER DISTRIBUTION
PAGE 13-19
S127
FROM S1013
PAGE 23-1
16 RD/LG
E
361 RD
12V (RUN OR START)
14 GA DK GREEN
FUSE LINK D
PAGE 13-1
14 GA DK GREEN
FUSE LINK E
PAGE 13-1
38 BK/OG
TO MANIFOLD INTAKE AIR HEATER RELAY
PAGE 23-8
I
38 BK/OG
S191
38 BK/OG
12V
Relay controlled by PCM to energize/de-energize glow plugs. "On-time" is based on oil temperature and barometric pressure.
85
86
30
87
GLOW PLUG RELAY
151–1 B1
TO S137
PAGE 23-6
TO S1003
PAGE 23-4
Z
110 BN
110 BN
Y
TO S1004
PAGE 23-5
1086 VT/OG
H
359 GY/RD
C168M
C168F
359 GY/RD
C1021
TURBINE SHAFT SPEED (TSS) SENSOR
PAGE 30-7
20 GA DK BLUE
20 GA DK BLUE
20 GA DK BLUE
1277 WH/LG
1279 WH
1278 WH/VT
151–1 A8
C166F
C166M
C1021
970 DG/WH
C168F
C168M
1086 VT/OG
970 DG/WH
151–1 A8
1279 WH
1278 WH/VT
1277 WH/LG
C166F
C166M
C154
101
84
9
8
34
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9