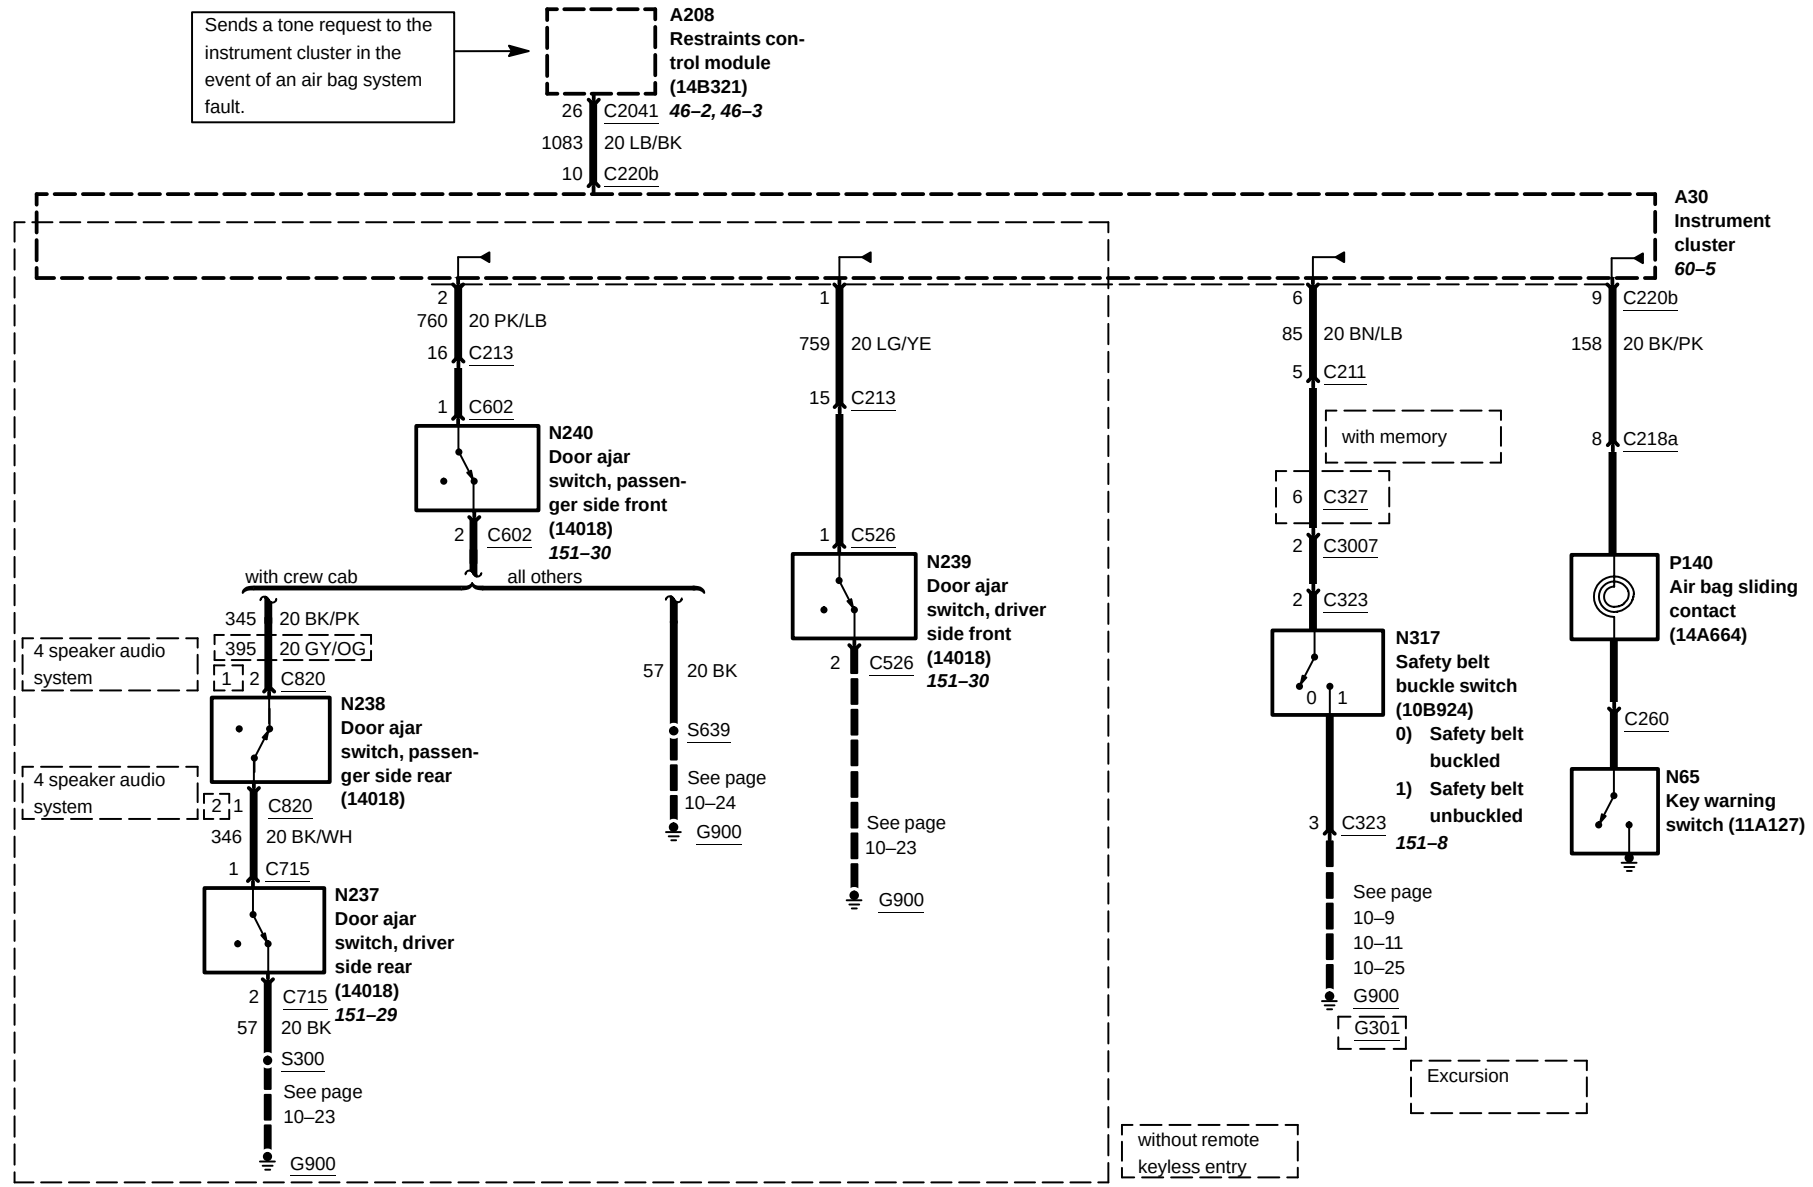
Sends a tone request to the instrument cluster in the event of an air bag system fault.
A208
Restraints control module (14B321)
46–2, 46–3
26 C2041
1083 20 LB/BK
10 C220b
A30
Instrument cluster
60–5
2 760 20 PK/LB 16 C213
1 C602
N240
Door ajar switch, passenger side front (14018)
151–30
2 C602
with crew cab
all others
345 20 BK/PK
395 20 GY/OG
4 speaker audio system
1 2 C820
N238
Door ajar switch, passenger side rear (14018)
4 speaker audio system
2 1 C820
346 20 BK/WH
1 C715
N237
Door ajar switch, driver side rear (14018)
151–29
2 C715
57 20 BK
S300
See page 10–23
G900
57 20 BK
S639
See page 10–24
G900
1 759 20 LG/YE 15 C213
1 C526
N239
Door ajar switch, driver side front (14018)
151–30
2 C526
See page 10–23
G900
6 85 20 BN/LB 5 C211
with memory
6 C327
2 C3007
2 C323
N317
Safety belt buckle switch (10B924)
0) Safety belt buckled
1) Safety belt unbuckled
151–8
0 1
3 C323
See page 10–9
10–11
10–25
G900
G301
Excursion
9 C220b
158 20 BK/PK
8 C218a
P140
Air bag sliding contact (14A664)
C260
N65
Key warning switch (11A127)
without remote keyless entry