C175c

12B637

Powertrain Control Module (PCM) (12A650)

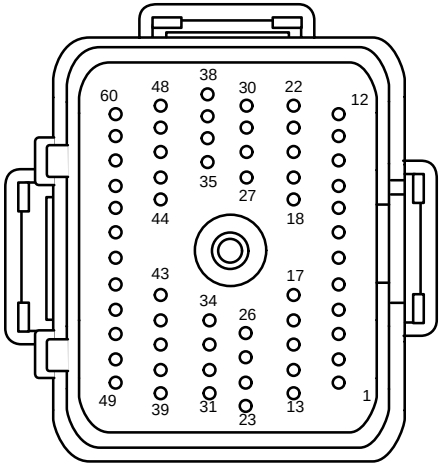

F60007

Pin	Circuit	Circuit function
1	8-RL27 (WH/BK)	Variable valve timing solenoid 1, control
2	–	not used
3	–	not used
4	8-RJ12 (WH/BU)	Fuel rail temperature sensor, signal
5	8-CE6 (WH)	Power steering pressure switch, feed
6	–	not used
7	91S-RJ14 (BN)	Heated Oxygen Sensor (HO2S) #11 (9F472), heater
8	91S-RJ15 (BN/RD)	Heated Oxygen Sensor (HO2S) #21 (9F472), heater
9	–	not used
10	–	not used
11	91S-RL13 (BN/BU)	Fuel injector 4 (9F593), control - 3.0L
	91S-RL14 (BN/GN)	Fuel injector 5 (9F593), control - 3.9L

Pin	Circuit	Circuit function
12	91S-RR8 (BN/GN)	Coil On Plug (COP) 4 (12029), control - 3.0L
	91S-RR9 (BN/YE)	Coil On Plug (COP) 5 (12029), control - 3.9L
13	8-RL26 (WH/VT)	Variable valve timing solenoid 2, control
14	7-RN11 (YE/BK)	Reference voltage
15	9-RJ28 (BN)	Throttle Position Sensor (TPS) (9B989), Signal return
16	91S-RL7 (BN/GN)	Exhaust Pressure Transducer (EPT) sensor, control
17	9-RE1 (BN/GN)	Signal return
18	–	not used
19	10-BA25 (GY/RD)	Generator, common
20	91S-RL14 (BN/GN)	Fuel injector 5 (9F593), control - 3.0L
	91S-RL11 (BN)	Fuel injector 2 (9F593), control - 3.9L

Pin	Circuit	Circuit function
21	91S-RL12 (BN/RD)	Fuel injector 3 (9F593), control - 3.0L
	91S-RL15 (BN/YE)	Fuel injector 6 (9F593), control - 3.9L
22	91S-RR9 (BN/YE)	Coil On Plug (COP) 5 (12029), control - 3.0L
	91S-RR10 (BN/WH)	Coil On Plug (COP) 6 (12029), control - 3.9L
23	8-RJ20 (WH/GN)	Exhaust Pressure Transducer (EPT) sensor, signal
24	7-RJ28 (YE)	Throttle Position Sensor (TPS) (9B989), Reference voltage
25	–	not used
26	–	not used
27	33-RG3 (YE/BU)	Electronic Throttle Control (ETC) motor +/-
28	91S-RL15 (BN/YE)	Fuel injector 6 (9F593), control - 3.0L
	91S-RL12 (BN/RD)	Fuel injector 3 (9F593), control - 3.9L
29	91S-RL20 (BK/RD)	IMRC Solenoid 1, control - 3.0L
	91S-RL16 (BN/WH)	Fuel injector 7 (9F593), control - 3.9L
30	91S-RR10 (BN/WH)	Coil On Plug (COP) 6 (12029), control - 3.0L
	91S-RR11 (BN)	Coil On Plug (COP) 7 (12029), control - 3.9L
31	–	not used
32	8-RJ28 (WH)	Throttle Position Sensor (TPS) (9B989), signal
33	–	not used
34	–	not used
35	32-RG3 (WH/BU)	Electronic Throttle Control (ETC) motor +/-

Pin	Circuit	Circuit function
36	–	not used
37	91S-RL40 (BK/GN)	IMRC Solenoid 2, control - 3.0L
	91S-RL17 (BN)	Fuel injector 8 (9F593), control - 3.9L
38	91S-RR12 (BN/RD)	Coil On Plug (COP) 8 (12029), control - 3.9L
39	8-RJ6 (WH/GN)	Engine Oil Temperature (EOT) sensor, signal - 3.0L
	8-RJ26 (WH/GN)	Engine Oil Temperature (EOT) sensor, signal - 3.9L
40	8-RJ33 (WH/VT)	Cylinder–head temperature sensor (6G004), feed
41	8-RJ7 (WH/BU)	Exhaust Pressure Transducer (EPT) sensor, signal
42	10-RJ18 (GY/BK)	Knock sensor 1 (6G004), Signal return
43	10-RJ19 (GY/RD)	Knock sensor 2 (6G004), Signal return - 3.9L
44	8-RJ15 (WH/RD)	Heated Oxygen Sensor (HO2S) #21 (9F472), input
45	8-RJ14 (WH)	Heated Oxygen Sensor (HO2S) #11 (9F472), input
46	91S-RL11 (BN)	Fuel injector 2 (9F593), control - 3.0L
	91S-RL13 (BN/BU)	Fuel injector 4 (9F593), control - 3.9L
47	91S-RL10 (BN/WH)	Fuel injector 1 (9F593), control
48	91S-RR6 (BN/RD)	Coil On Plug (COP) 2 (12029), control - 3.0L
	91S-RR8 (BN/GN)	Coil On Plug (COP) 4 (12029), control - 3.9L

Pin	Circuit	Circuit function
49	8-RJ11 (WH/GN)	Fuel rail pressure transducer sensor, signal
50	8-BA25 (WH/RD)	Generator, monitor
51	8-RJ18 (WH/BK)	Knock sensor 1 (6G004), feed
52	8-RJ19 (WH/RD)	Knock sensor 2 (6G004), feed - 3.9L
53	8-RJ3 (WH/VT)	Camshaft position sensor 1, signal
54	8-RJ2 (WH/BK)	Camshaft position sensor 2, signal
55	10-RJ4 (GY/RD)	Crankshaft position sensor (6C315) -
56	8-RJ4 (WH/RD)	Crankshaft position sensor (6C315) +
57	8-RJ39 (WH/RD)	Throttle Position Sensor (TPS) (9B989), signal
58	91S-RR5 (BN)	Coil On Plug (COP) 1 (12029), control
59	91S-RR6 (BN/RD)	Coil On Plug (COP) 2 (12029), control - 3.9L
60	91S-RR7 (BN/BU)	Coil On Plug (COP) 3 (12029), control