C964

12A522

B113
Fuel tank pressure transducer sensor

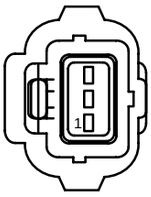

F03093

Pin	Circuit	Circuit Function
1	7-RJ13 (YE/VT)	Voltage D.C. supplied at all times (sensor)
2	9-RJ13 (BN/WH)	Sensor signal return (reference/ground)
3	8-RJ13 (WH/VT)	Sensor signal

C974

14K733

B29
Ice warning sensor

F02005

Pin	Circuit	Circuit Function
1	8-GE38 (WH/BK)	Sensor signal
2	9-GE38 (WH/BK)	Sensor signal return (reference/ground)

C971

14405, 14A584

M9
Rear window wiper motor



F02007

Pin	Circuit	Circuit Function
1	15-KA28 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
2	32-KA28 (WH/RD)	Switched between: Battery voltage, Ground or Open

C972

14K733

V7
A/C Compressor clutch diode

F02005

Pin	Circuit	Circuit Function
1	31-FA7 (BK)	Ground
2	15S-FA7 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched

C975 (BK)

12A522

B70
Barometric Absolute Pressure (BAP) sensor

F04195

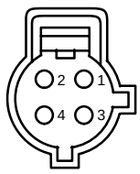

Pin	Circuit	Circuit Function
1	9-RJ1 (BN/YE)	Sensor signal return (reference/ground)
2	8-RJ1 (WH/BK)	Sensor signal
3	7-RJ1 (YE/BK)	Voltage D.C. supplied at all times (sensor)