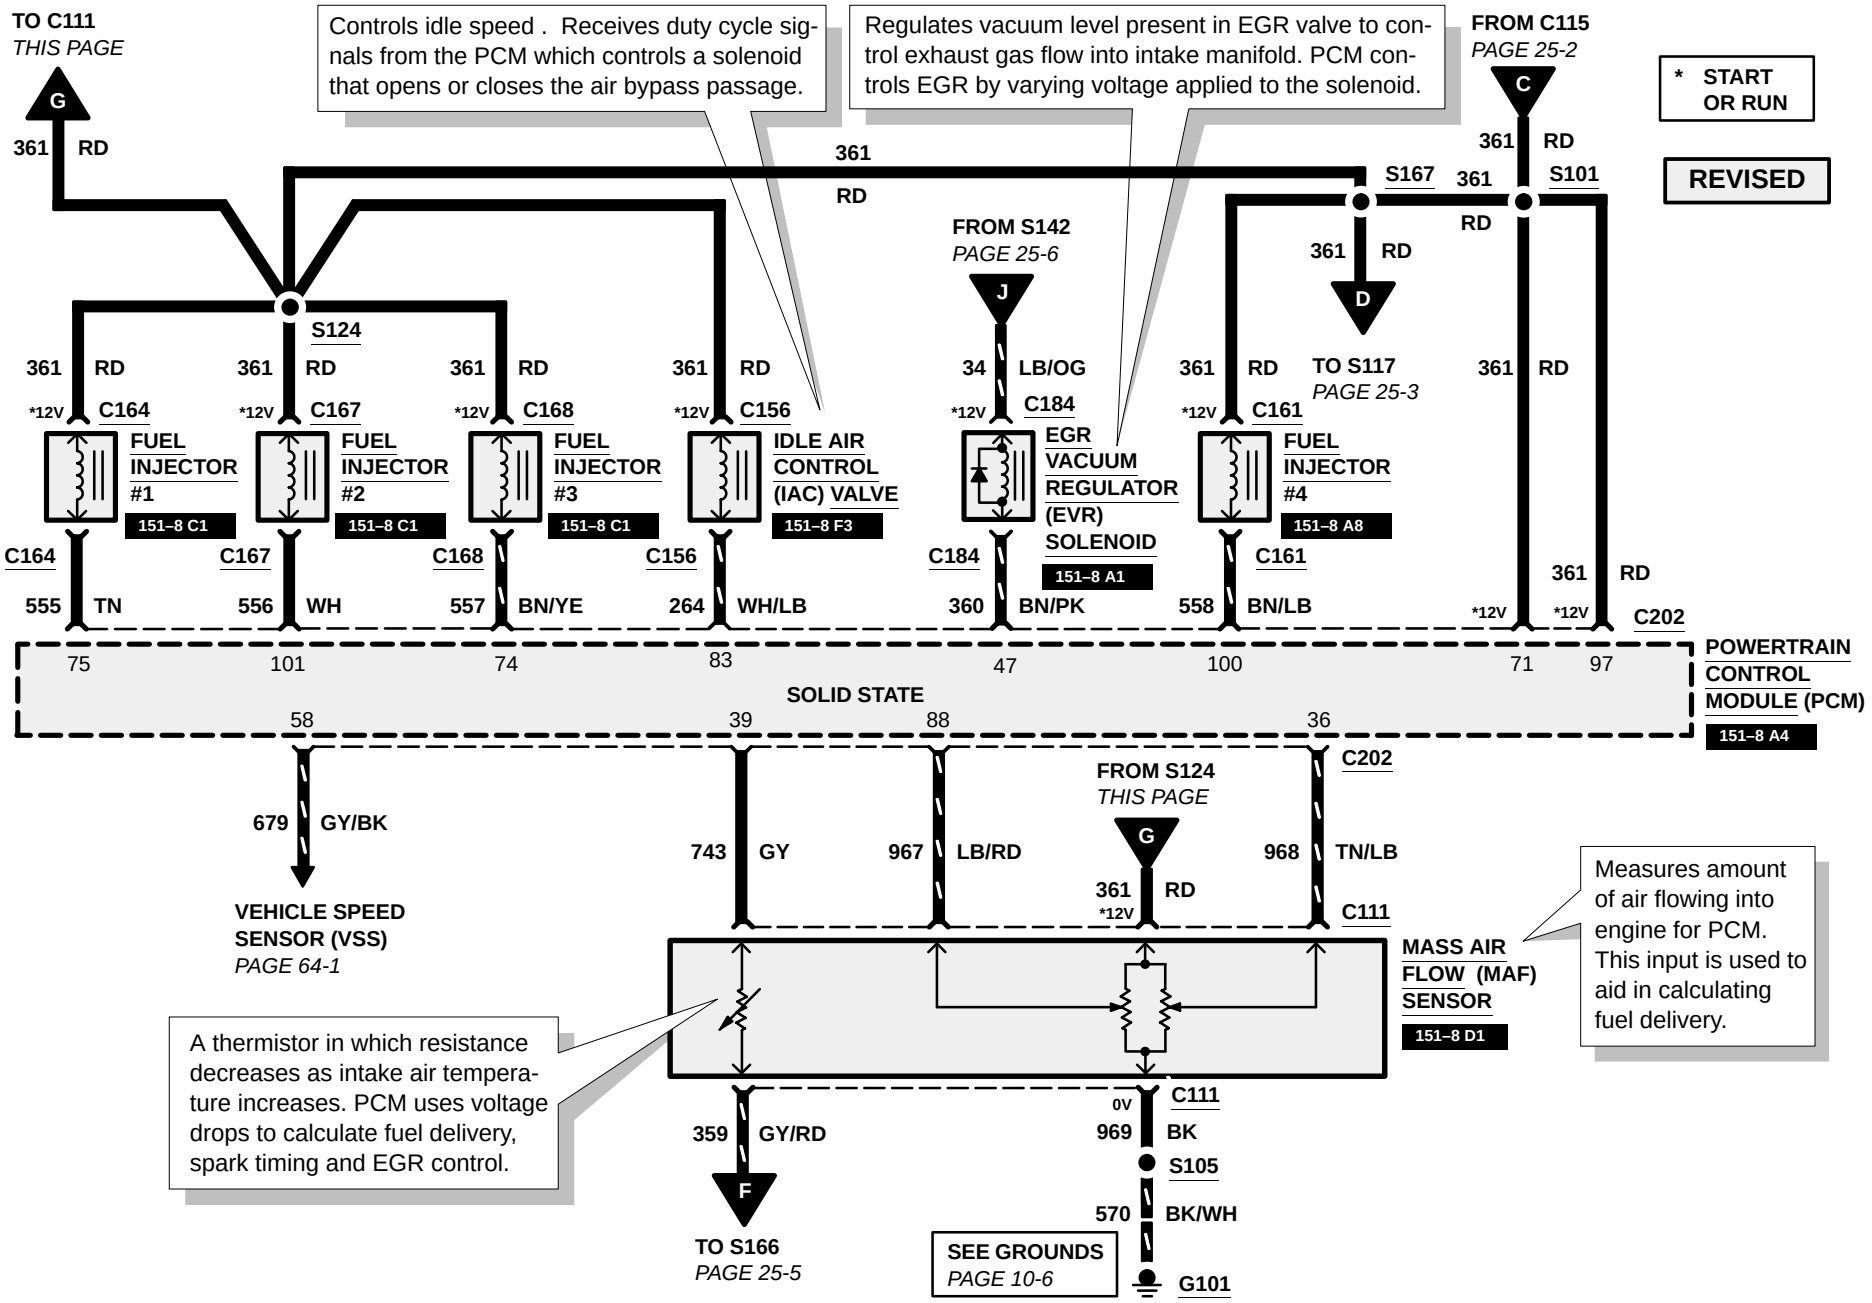
TO C111
THIS PAGE
G
361 RD
Controls idle speed . Receives duty cycle signals from the PCM which controls a solenoid that opens or closes the air bypass passage.
Regulates vacuum level present in EGR valve to control exhaust gas flow into intake manifold. PCM controls EGR by varying voltage applied to the solenoid.
FROM C115
PAGE 25-2
C
361 RD
* START OR RUN
REVISED
361 RD
S167
361 RD
S101
FROM S142
PAGE 25-6
J
361 RD
D
S124
361 RD *12V C164 FUEL INJECTOR #1 151–8 C1
361 RD *12V C167 FUEL INJECTOR #2 151–8 C1
361 RD *12V C168 FUEL INJECTOR #3 151–8 C1
361 RD *12V C156 IDLE AIR CONTROL (IAC) VALVE 151–8 F3
34 LB/OG *12V C184 EGR VACUUM REGULATOR (EVR) SOLENOID 151–8 A1
361 RD *12V C161 FUEL INJECTOR #4 151–8 A8
TO S117
PAGE 25-3
361 RD
C164 555 TN
C167 556 WH
C168 557 BN/YE
C156 264 WH/LB
C184 360 BN/PK
C161 558 BN/LB
361 RD *12V *12V C202
75 101 74 83 47 100 71 97
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM) 151–8 A4
58 39 88 36
C202
FROM S124
THIS PAGE
G
679 GY/BK
743 GY
967 LB/RD
968 TN/LB
361 RD *12V
C111
VEHICLE SPEED SENSOR (VSS)
PAGE 64-1
MASS AIR FLOW (MAF) SENSOR 151–8 D1
Measures amount of air flowing into engine for PCM. This input is used to aid in calculating fuel delivery.
A thermistor in which resistance decreases as intake air temperature increases. PCM uses voltage drops to calculate fuel delivery, spark timing and EGR control.
0V C111
359 GY/RD
969 BK
S105
570 BK/WH
F
TO S166
PAGE 25-5
SEE GROUNDS
PAGE 10-6
G101