119-3 HEATED SEATS

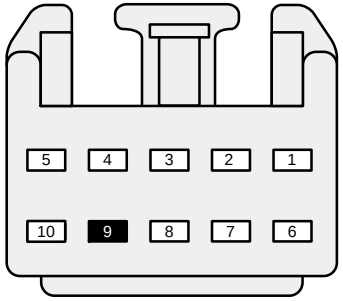

C320

DRIVER HEATED SEAT MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	1061 (BN/LB)	Seat Heating Sensor Return
2	1020 (DG/VT)	Driver Cushion Enable
3	1064 (YE/LB)	Seat Heating Element Feed
4	1153 (RD/BK)	Power (Hot at All Times)
5	1067 (VT/LB)	Seat Back Heating Element Return
6	1040 (RD/BK)	Power (Hot in Run)
7	1060 (BK/LB)	Seat Heating Sensor Feed
8	1205 (BK)	Ground
9	–	NOT USED
10	461 (OG)	Switch to Module

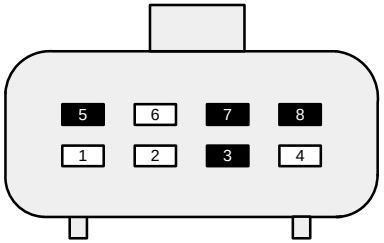

C332

DRIVER HEATED SEAT SWITCH

PIN	CIRCUIT	CIRCUIT FUNCTION
1	1040 (RD/BK)	Power (Hot in Run)
2	1020 (DG/VT)	Driver Cushion Enable
3	–	NOT USED
4	461 (OG)	Switch to Module
5	–	NOT USED
6	1040 (RD/BK)	Power (Hot in Run)
7	–	NOT USED
8	–	NOT USED