46-5 AIR BAG RESTRAINT SYSTEM

For diagnostic information, refer to Section 501-20B of the Workshop Manual.

* SHORTING BARS CONNECT HARNESS TERMINALS WHEN THE HARNESS IS DISCONNECTED.

EXCURSION JOB 1 + 90

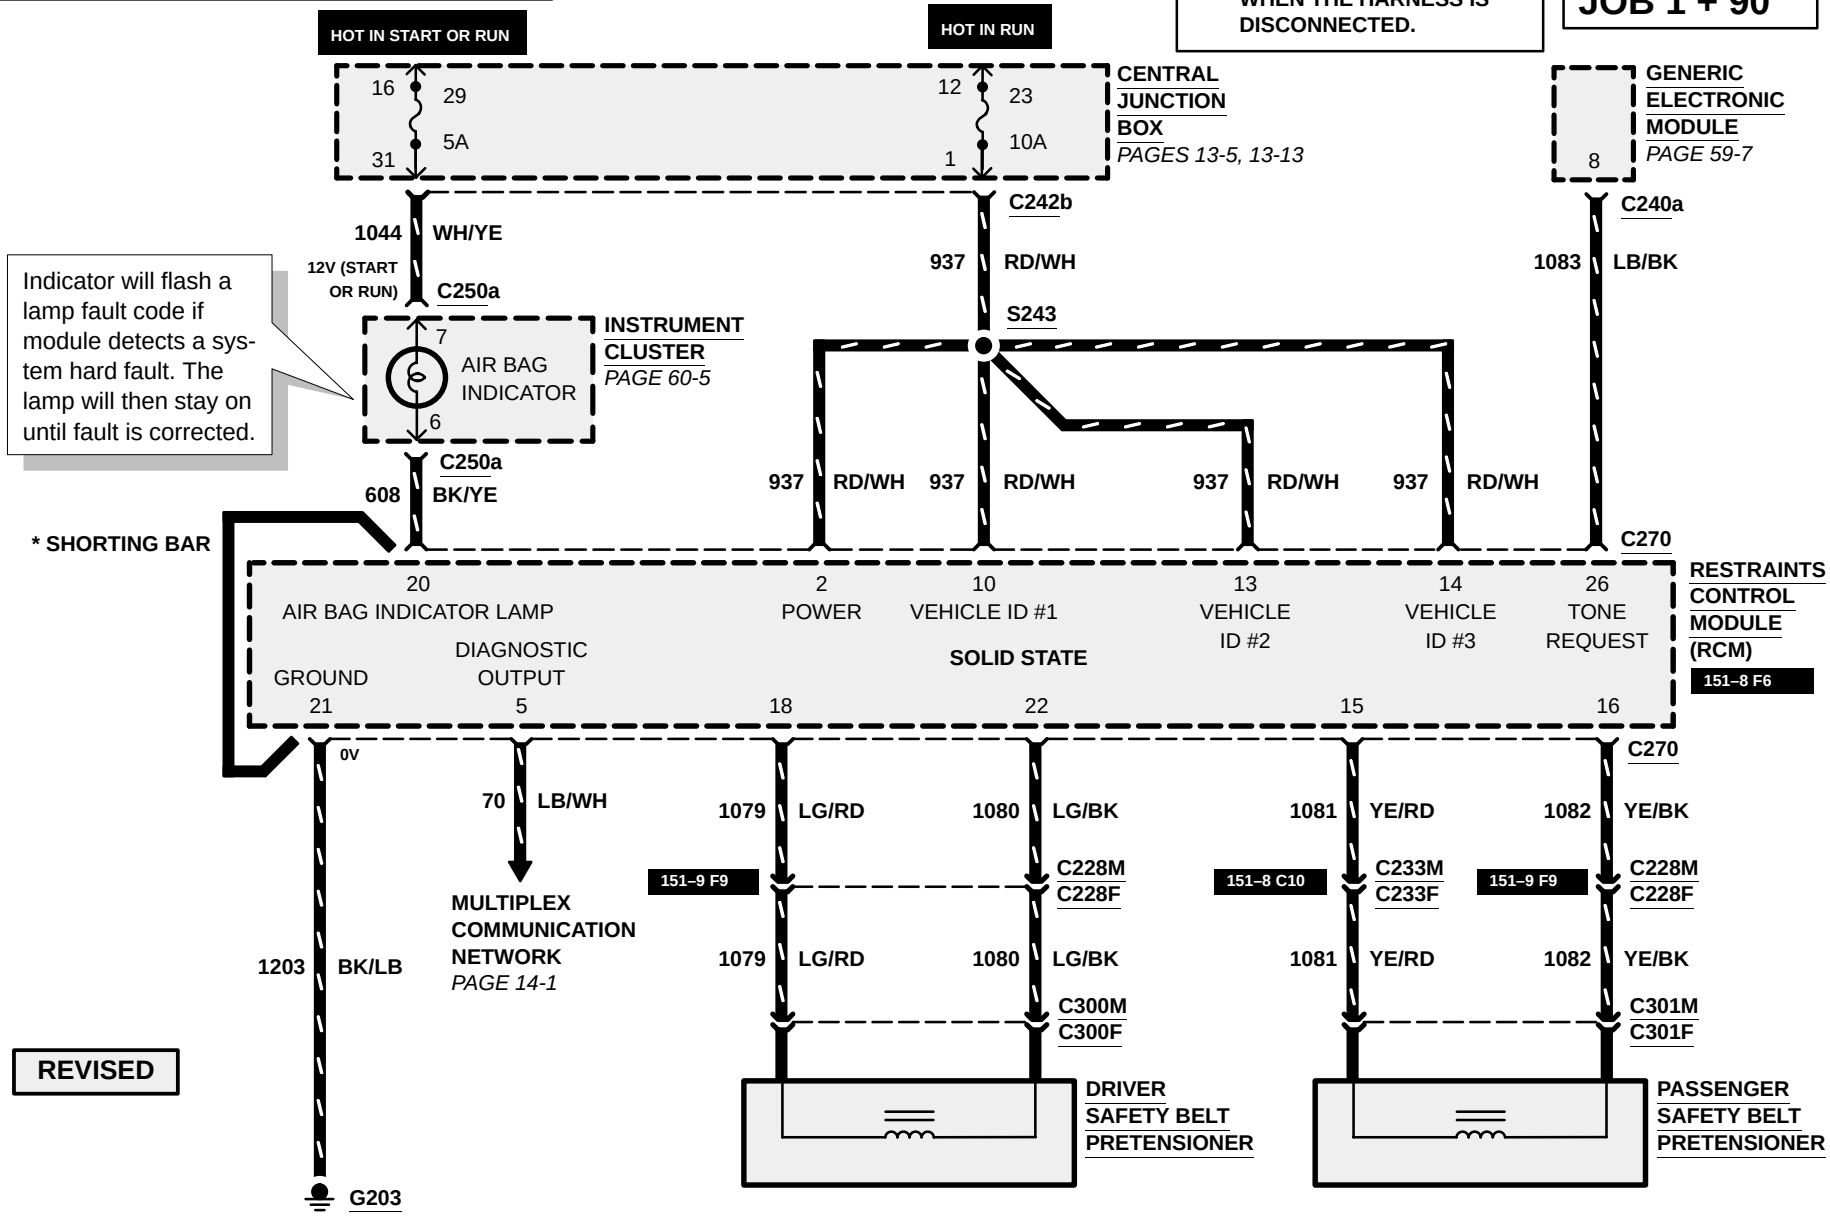

REVISED