C162 (BN)

12B637

B8
Throttle Position Sensor (TPS) (9B989)



F03131

Pin	Circuit	Circuit function
1	AV37 (BN)	Reference, voltage
2	AV20 (RD)	Throttle Position Sensor (TPS) (9B989), input
3	AV21 (BK/YE)	signal, return

C163 (GY)

12B637

N425
Throttle position switch



F03131

Pin	Circuit	Circuit function
1	ZY21 (RD/WH)	Throttle position switch - Wide open throttle input
2	AV44 (BU/YE)	Voltage supplied in Start and Run (overload protected)
3	AV33 (BN/YE)	Throttle position switch - Idle input

C164 (GY)

7A488

O20
Pulse signal generator



F03125

Pin	Circuit	Circuit function
1	ES96	Shield
2	ZY63 (OG)	signal, return
3	ZY25 (WH)	Pulse signal generator

C165 (BN)

7A488

Y206
Transaxle solenoid assembly/transaxle fluid temperature

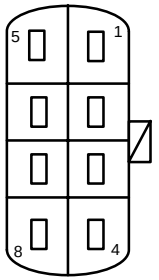

F08105

Pin	Circuit	Circuit function
1	ZY01 (GN/RD)	Electronic Pressure Control (EPC) solenoid
2	ZY08 (OG/BK)	Coasting clutch solenoid
3	ZY06 (YE/VT)	Shift solenoid A
4	ZY07 (YE/GN)	Shift solenoid B
5	–	not used
6	ZY70 (OG)	signal, return
7	ZY33 (LB)	Transmission Fluid Temperature (TFT) sensor, input
8	ZY05 (OG/BU)	Torque Converter Clutch (TCC) solenoid

C166 (BK)

12B637

Y108
Injector 1 (9F593)



F02137

Pin	Circuit	Circuit function
1	AV51 (GN/OG)	Injector 1, control
2	AV81 (YE)	Voltage supplied at all times (overload protected)