C300
CAB Harness

Clearance light, right

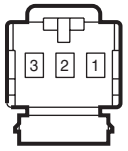

3578942C1

Pin	Circuit	Circuit Function
1	57 (BK)	Ground circuit
2	—	Not used
3	14 (BN)	Headlamp switch to clearance light

C301
CAB Harness

Indent light

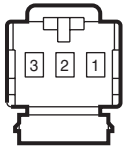

3578942C1

Pin	Circuit	Circuit Function
1	57 (BK)	Ground circuit
2	—	Not used
3	14 (BN)	Headlamp switch to indent light

C304
CAB Harness

Indent light

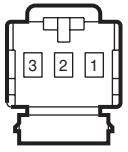

3578942C1

Pin	Circuit	Circuit Function
1	57 (BK)	Ground circuit
2	—	Not used
3	14 (BN)	Headlamp switch to indent light

C305
CAB Harness

Clearance light, left

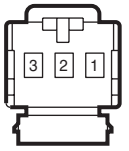

3578942C1

Pin	Circuit	Circuit Function
1	57 (BK)	Ground circuit
2	—	Not used
3	14 (BN)	Headlamp switch to clearance light

C306
CAB Harness

Indent light

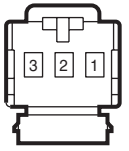

3578942C1

Pin	Circuit	Circuit Function
1	57 (BK)	Ground circuit
2	—	Not used
3	14 (BN)	Headlamp switch to indent light

C307
CAB Harness

Speaker, left rear

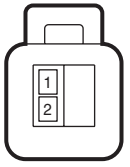

3536159C1

Pin	Circuit	Circuit Function
1	800 (GY/LB)	Amplifier/speaker switch feed to left rear speaker
2	801 (TN/YE)	Amplifier/speaker switch ground to left rear speaker