C330

* without lumbar
** with lumbar

14A699

Seat adjust switch, passenger side front

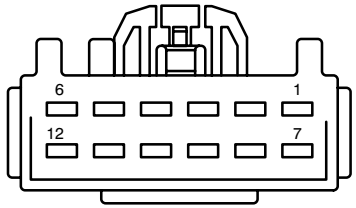

F12107

Pin	Circuit	Circuit function
1	31-AH42 (BK)	Ground
2	–	not used
3	32-AH44 (WH/GN)	Passenger seat horizontal motor +/-
4	32-AH34 (WH/BK)	Passenger seat vertical motor +/-
5	33-AH34 (YE/BK)	Passenger seat vertical motor +/-
6	*30-AH42 (RD)	Voltage supplied at all times (not overload protected)
	**30-AH42 (RD)	Voltage supplied at all times (not overload protected)
7	33-AH43 (YE/RD)	Passenger seat backrest motor +/-
8	–	not used
9	–	not used
10	–	not used
11	33-AH44 (YE/GN)	Passenger seat horizontal motor +/-
12	32-AH43 (WH/RD)	Passenger seat backrest motor +/-

C331

14A699

Lumbar adjust switch, right front

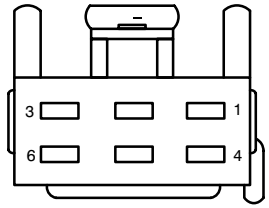

F06109

Pin	Circuit	Circuit function
1	32-AH45 (WH/BU)	Passenger seat lumbar compressor motor (65500) +/-
2	–	not used
3	31-AH46 (BK)	Ground
4	33-AH45 (YE/BU)	Passenger seat lumbar compressor motor (65500) +/-
5	30-AH46 (RD)	Voltage supplied at all times (overload protected)
6	–	not used

C332

14A699

Passenger seat horizontal motor



F02071

Pin	Circuit	Circuit function
1	33-AH44 (YE/GN)	Passenger seat horizontal motor +/-
2	32-AH44 (WH/GN)	Passenger seat horizontal motor +/-