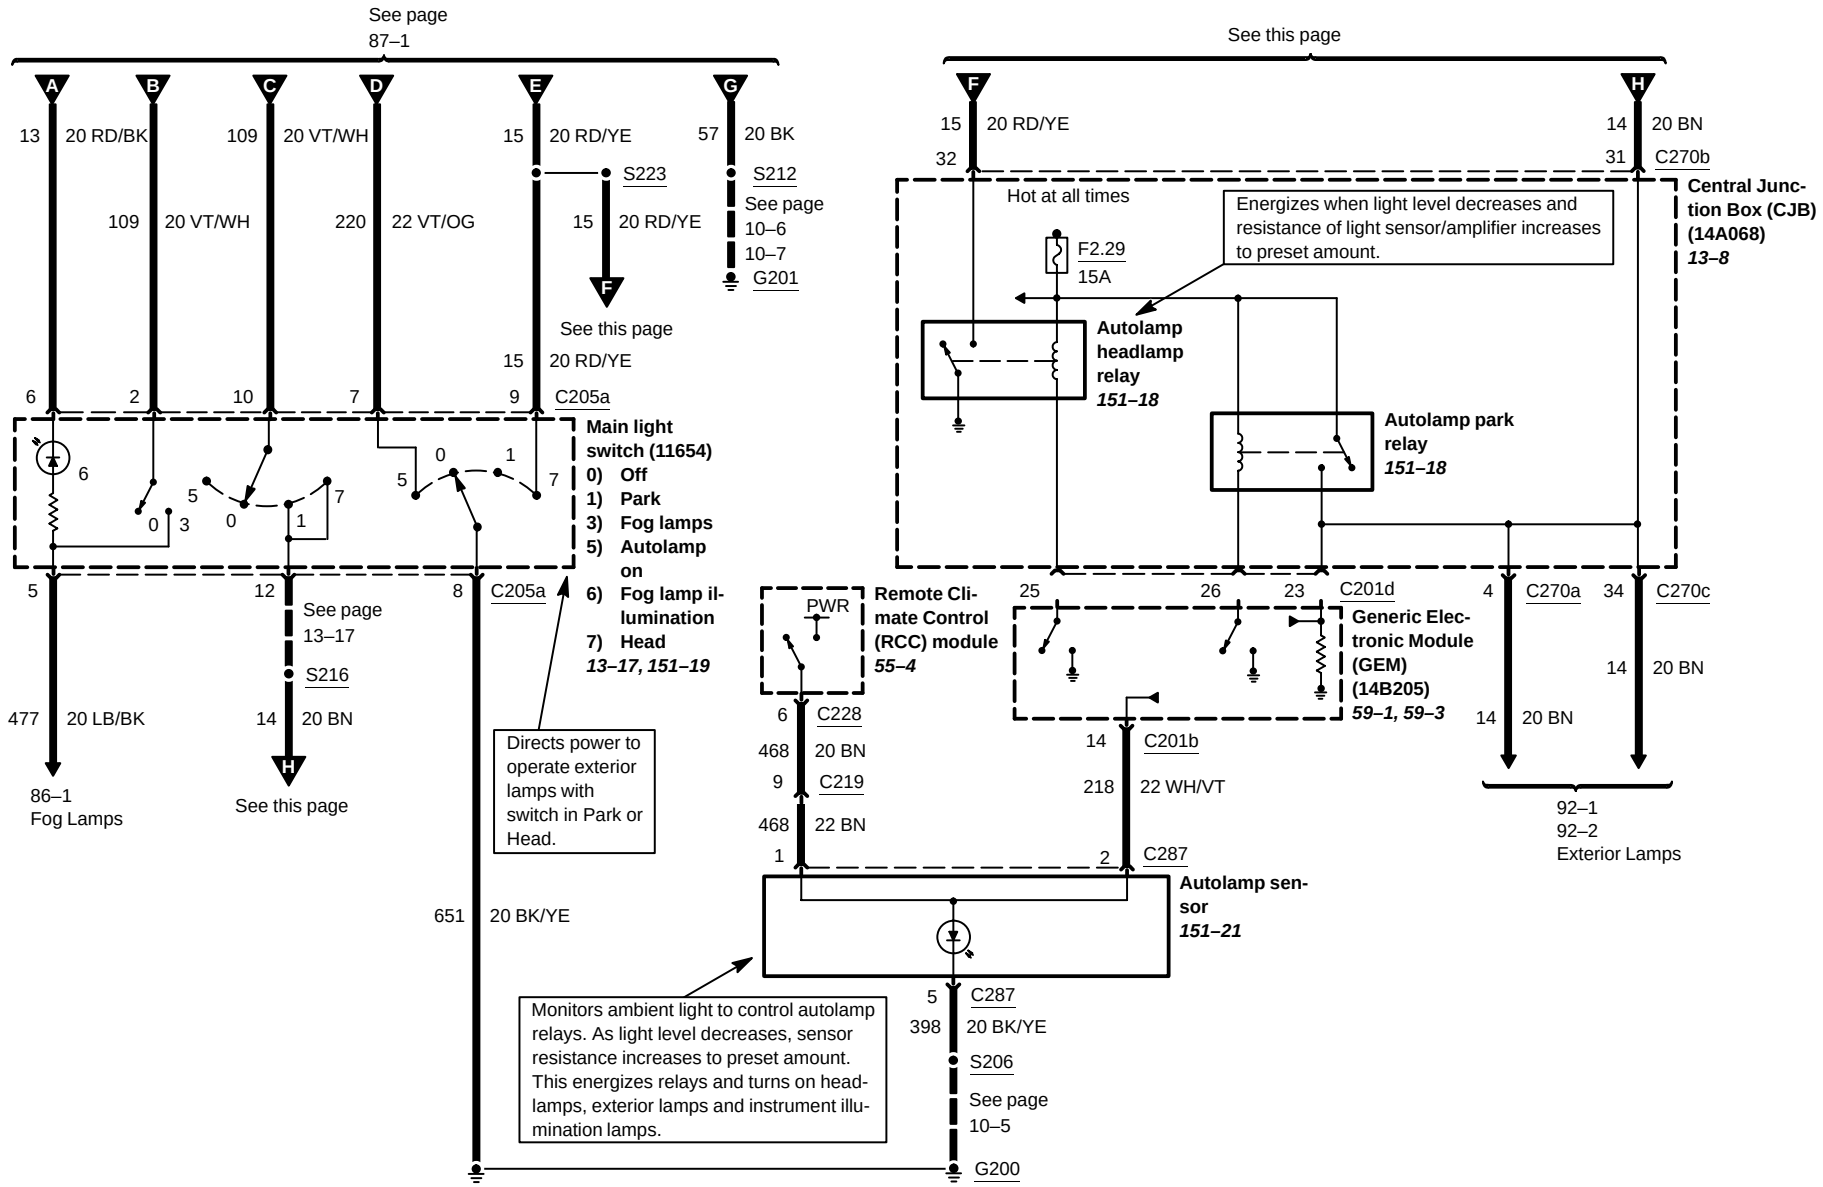
See page 87–1
A
B
C
D
E
G
13 20 RD/BK
109 20 VT/WH
15 20 RD/YE
57 20 BK
S223
S212
See page 10–6
10–7
G201
109 20 VT/WH
220 22 VT/OG
15 20 RD/YE
F
See this page
15 20 RD/YE
6 2 10 7 9 C205a
Main light switch (11654)
0) Off
1) Park
3) Fog lamps
5) Autolamp on
6) Fog lamp illumination
7) Head
13–17, 151–19
5 12 8 C205a
See page 13–17
S216
477 20 LB/BK
14 20 BN
H
86–1
Fog Lamps
See this page
Directs power to operate exterior lamps with switch in Park or Head.
651 20 BK/YE
See this page
F
H
15 20 RD/YE
32
14 20 BN
31 C270b
Hot at all times
Energizes when light level decreases and resistance of light sensor/amplifier increases to preset amount.
F2.29
15A
Central Junction Box (CJB) (14A068)
13–8
Autolamp headlamp relay
151–18
Autolamp park relay
151–18
PWR
Remote Climate Control (RCC) module
55–4
25 26 23 C201d
Generic Electronic Module (GEM) (14B205)
59–1, 59–3
4 C270a 34 C270c
14 20 BN
6 C228
468 20 BN
9 C219
468 22 BN
1
14 C201b
218 22 WH/VT
2 C287
Autolamp sensor
151–21
92–1
92–2
Exterior Lamps
Monitors ambient light to control autolamp relays. As light level decreases, sensor resistance increases to preset amount. This energizes relays and turns on headlamps, exterior lamps and instrument illumination lamps.
5 C287
398 20 BK/YE
S206
See page 10–5
G200