C4066c

14A005

Mega fuse



F01025

Pin	Circuit	Circuit function
1	30-DF8 (RD)	Voltage supplied at all times (not overload protected)

C4067

14A005

Heated backlight relay

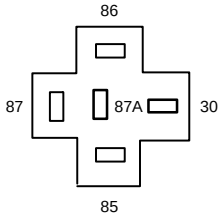

F05141

Pin	Circuit	Circuit function
30	30-HB23 (RD/WH)	Voltage supplied at all times (not overload protected)
	30-HB24 (RD/YE)	Voltage supplied at all times (not overload protected)
85	91-HB24 (BK/YE)	Ground
86	30-HB23 (RD/WH)	Voltage supplied at all times (not overload protected)
87	9-HB19 (WH/RD)	Sensor signal return (reference/ground)
	75-HB19 (BN/RD)	Voltage: Ignition switch in Accessory or Run
87A	–	not used

C4068

14A005

Subwoofer, left



F02383

Pin	Circuit	Circuit function
1	8-MD23 (WH/BK)	Subwoofer, left (+)
2	10-MD23 (GY/BK)	Subwoofer, left (–)

C4069

14A005

Subwoofer, right

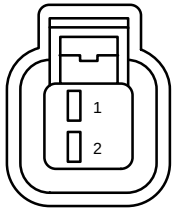

F02069

Pin	Circuit	Circuit function
1	8-MD23 (WH/BK)	Subwoofer, left (+)
2	10-MD23 (GY/BK)	Subwoofer, left (–)

C4070a

14300

Battery (10655)

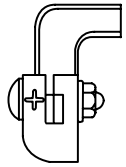

F01121

Pin	Circuit	Circuit function
1	30-BA6 (RD)	Voltage supplied at all times (not overload protected)
	30-BB10 (RD)	Voltage supplied at all times (not overload protected)