C185

12B637

Fuel injector 5
(9F593)

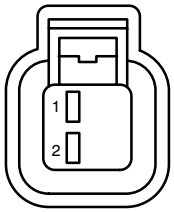

F02069

Pin	Circuit	Circuit function
1	91S-RL14 (BN/GN)	Ground, Switched
2	15S-RL14 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C186

12B637

Fuel injector 6
(9F593)

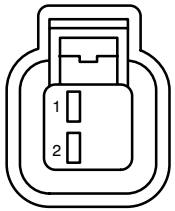

F02069

Pin	Circuit	Circuit function
1	91S-RL15 (BN/YE)	Ground, Switched
2	15S-RL15 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C187

12B637

Fuel injector 7
(9F593)

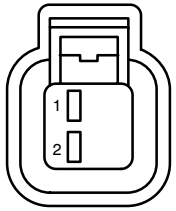

F02069

Pin	Circuit	Circuit function
1	91S-RL16 (BN/WH)	Ground, Switched
2	15S-RL16 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C188

12B37

Fuel injector 8
(9F593)

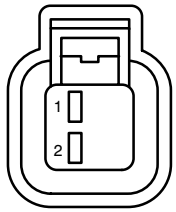

F02069

Pin	Circuit	Circuit function
1	91S-RL17 (BN)	Ground, Switched
2	15S-RL17 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C193

7C078

Output Shaft Speed
(OSS) sensor
(7H103)

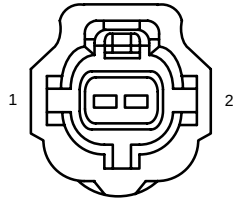

F02027

Pin	Circuit	Circuit function
1	8-TA51 (WH/RD)	Sensor signal
2	9-TA51 (BN/RD)	Sensor signal return (reference/ground)

C194

12B637

Ignition transformer
capacitor 2 (18801)

F03101

Pin	Circuit	Circuit function
1	15-MD20 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)