## C267c (BK)

**14N104**

A30
Instrument cluster

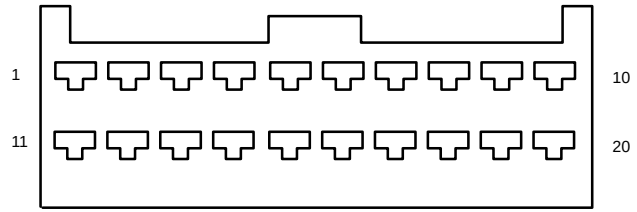


F20011

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | NR01 (VT) | Malfunction Indicator Lamp (MIL), control |
| 2 | NF01 (GN/BK) | Low washer fluid indicator |
| 3 | LB15 (RD/WH) | Turn lamps, Right, switched power |
| 4 | ZY03 (BU/OG) | Overdrive indicator, control |
| 5 | – | not used |
| 6 | LB16 (RD/GN) | Turn lamps, Left, switched power |
| 7 | MA02 (BU) | Voltage supplied in Start and Run (overload protected) |
| 8 | NM01 (YE) | Generator/Battery indicator, control |
| 9 | N103 (GN) | Safety belt indicator, control |
| 10 | PS15 (OG) | Air bag indicator, control |
| 11 | IG92 (PK/BK) | Illumination, Ground |
| 12 | IG01 (PK) | Illumination, feed |
| 13 | – | not used |
| 14 | BS29 (WH/BK) | Anti–lock brake indicator, control |
| 15 | NN01 (VT/WH) | Low fuel indicator, control |
| 16 | NB01 (YE/VT) | Brake indicator, control |
| 17 | MD01 (RD) | Engine oil pressure indicator, control |
| 18 | LA03 (OG/BU) | High beam lamp, left front |
| 19 | MAE1 (BK) | Ground |
| 20 | MA07 (BU) | Voltage supplied in Start and Run (overload protected) |

## C268 (BU)

**14N104**

K300
Rear blower motor relay

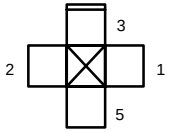


F04129

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | HA12 (YE/RD) | Rear blower motor relay, control |
| 2 | HA44 (BU) | Voltage supplied in Start and Run (overload protected) |
| 3 | HB21 (BK/WH) | Switched, Ground |
| 4 | – | not used |
| 5 | HE01 (BK) | Ground |