## C2209

### 14401

A439
Electronic Crash Sensor (ECS) module

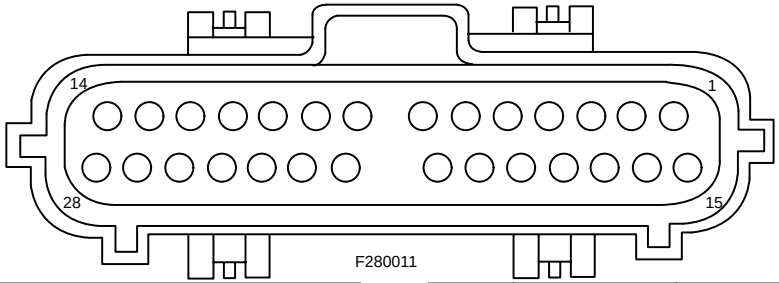


| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 614 (GY/OG) | Driver air bag, feed, monitor |
| 2 | 298 (VT/OG) | Voltage in Run (overload protected) |
| 3 | – | not used |
| 4 | – | not used |
| 5 | – | not used |
| 6 | 619 (PK/WH) | Air bag center sensor, to, Electronic Crash Sensor (ECS) module |
| 7 | 608 (BK/YE) | Air bag indicator, control |
| 8 | – | not used |
| 9 | – | not used |
| 10 | – | not used |
| 11 | – | not used |
| 12 | – | not used |
| 13 | 159 (RD/PK) | Passenger air bag, feed, monitor |
| 14 | 607 (LB/OG) | Passenger air bag, feed, monitor |

| Pin | Circuit | Circuit function |
|---|---|---|
| 15 | 615 (GY/WH) | Driver air bag, return |
| 16 | – | not used |
| 17 | 937 (RD/WH) | Voltage supplied at all times (overload protected) |
| 18 | 875 (BK/LB) | Ground |
| 19 | 70 (LB/WH) | ISO Bus |
| 20 | 1084 (PK) | Air bag bracket |
| 21 | 875 (BK/LB) | Ground |
| 22 | – | not used |
| 23 | – | not used |
| 24 | 1079 (LG/RD) | Driver safety belt retractor pretensioner, feed |
| 25 | 1080 (LG/BK) | Driver safety belt retractor pretensioner, return |
| 26 | 1081 (YE/RD) | Passenger safety belt retractor pretensioner, feed |
| 27 | 1082 (YE/BK) | Passenger safety belt retractor pretensioner, return |
| 28 | 616 (PK/BK) | Passenger air bag, return |

## C3007

### 14A200

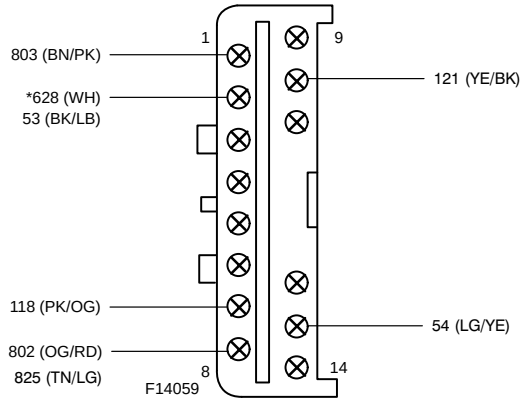


* with remote keyless entry
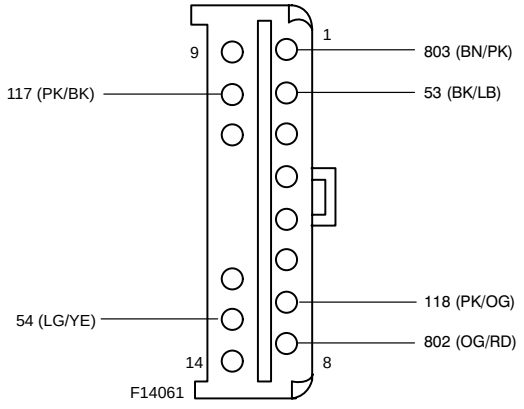
### 14014